


CONTENTS


目錄

MISCELLANEOUS COVERS (1)	機殼機構 (1)	1
MISCELLANEOUS COVERS (2)	機殼機構 (2)	2
MISCELLANEOUS THREAD EYELETS	過線機構	3
MISCELLANEOUS BUSHINGS & EYE GUARD	套管機構及護目鏡	4
NEEDLE GUARD & MAIN SHAFT DRIVING MECHANISM	頂針片及下主軸機構組	5
UPPER SHAFT & NEEDLE THREAD TAKE-UP MECHANISM	上主軸及針線提線機構	6
NEEDLE BAR MECHANISM	針棒機構	7
PRESSER FOOT MECHANISM	壓腳機構	8
TOP FEED VERTICAL MECHANISM	上送料垂直機構	9
TOP FEED ROCKER MECHANISM	上進給搖桿機構	10
TOP FEED DIFFERENTIAL MECHANISM	上送進給差動機構	11
SPREADER MECHANISM	上飾線驅動機構	12
LOOPER DRIVING MECHANISM	下勾針驅動機構	13
FEED DRIVING MECHANISM	送料具驅動機構	14
LUBRICATING MECHANISM	潤滑機構	15
THREAD STAND	線架	16
ACCESSORIES (1)	附件 (1)	17
ACCESSORIES (2)	附件 (2)	18
ACCESSORIES (3)	附件 (3)	19
AUTO TRIMMER THREAD PULL-OFF MECHANISM	自動切線鬆線機構	20
UNDER THREAD TRIMMER (PNEUMATIC TYPE)	氣壓式下切刀驅動機構	21
UNDER THREAD TRIMMER	下切刀驅動機構	22
PRESSER FOOT LIFTER (PNEUMATIC TYPE)	氣壓式抬壓腳	23
AIR ASSEMBLY LINE	氣動切線裝置線路圖	24
TOP THREAD TRIMMER (PNEUMATIC TYPE)	氣壓式上切刀機構	25
UNDER THREAD WIPER (PNEUMATIC TYPE)	氣壓式上吹線機構	26
UNDER THREAD WIPER (ELECTRIC TYPE)	電磁式上撥線機構	27
TOP THREAD TRIMMER (ELECTRIC TYPE)	電磁式上切刀機構	28
SOVER MOTOR	伺服馬達	29
UNDER THREAD TRIMMER (ELECTRIC TYPE)	電磁式下切刀驅動機構	30
PRESSER FOOT LIFTER (ELECTRIC TYPE)	電磁式抬壓腳	31

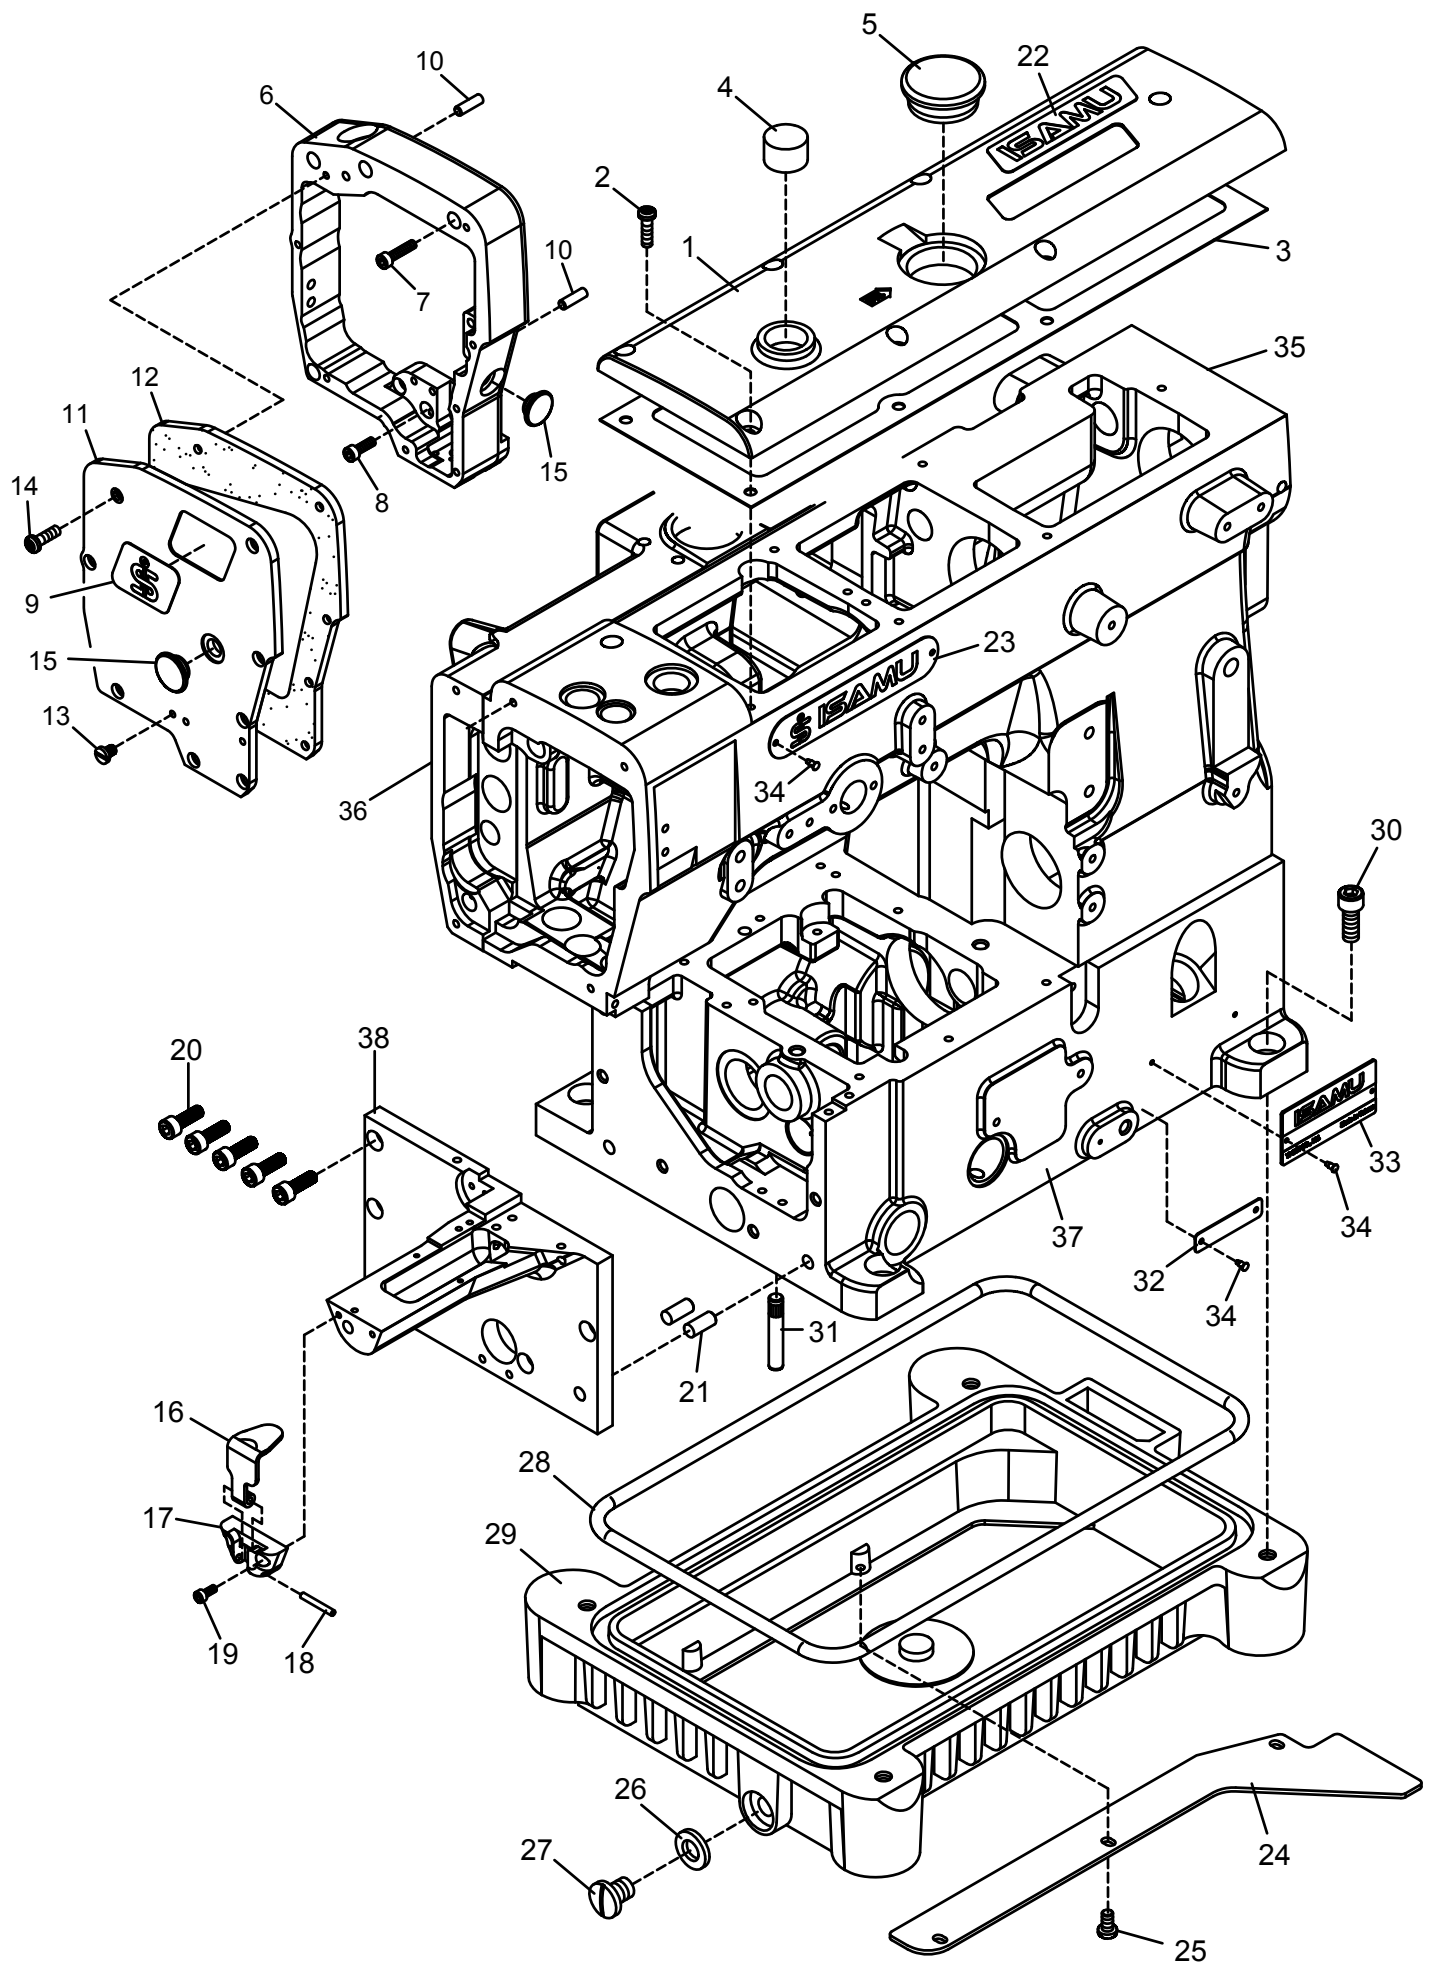

MISCELLANEOUS COVERS (1)**機殼機構(1)****1**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C01001	Top Cover	上蓋	1
2	C01002	Screw(M4-0.7×12)	螺絲	7
3	C01003	Top Cover Gasket	上蓋墊片	1
4	C01004	Oil Sight Window	上油鏡	1
5	C01005	Seal Plug	止油膠塞	1
6	X90003	Top Feed Dog Bracket	上送進料架	1
7	H01007	Screw(M4-0.7x25)	螺絲	4
8	B1427	Screw (M4-0.7x12)	螺絲	2
9	C01009	Emblem	銘牌	1
10	C20006	Pin	梢	2
11	H01011	Head Cover	車頭蓋	1
12	H01012	Head Cover Gasket	車頭蓋墊片	1
13	E05027	Screw(M4-0.7x4.8)	螺絲	2
14	C01011	Screw (M4-0.7x10)	螺絲	8
15	A0149	Seal Plug	油塞	2
16	H01016	Side Cover	側蓋	1
17	H01017	Side Cover Seat	側蓋座	1
18	H01018	Side Cover Hinge Pin	側蓋插梢	1
19	E02008	Screw(M3-0.5x8)	螺絲	2
20	A0646	Screw (M5-0.8x14)	螺絲	5
21	E01011	Pin	固定梢	2
22	C01022	Emblem	銘牌	1
23	B01017	Brand Name Sticker	銘牌	1
24	C01024	Wind Guide Plate	風導板	1
25	C01025	Screw (M4-0.7x8)	螺絲	3
26	C01026	Drain Hole Seal	排油螺絲油封	1
27	C01027	Screw(3/8-24×8)	螺絲	1
28	C01028	Oil Reservoir Gasket	油槽止油膠墊	1
29	C01029	Oil Reservoir	油槽	1
30	C01030	Screw(M8-1.25×20)	螺絲	4
31	C01031	Machine Frame Supporting Bar	機體支柱	4
32	A0121	Serial Number Plate	機台序號牌	1
33	B02015	Model Plate	型號銘牌	1
34	A0122	Rivet	鉚釘	6
35	X90001	Upper Machine Frame	上座機殼	1
36	X90002	Rear Side Machine Frame	後側機殼	1
37	X90004	Lower Machine Frame	下座機殼	1
38	X90005	Machine Frame	下管機殼	1

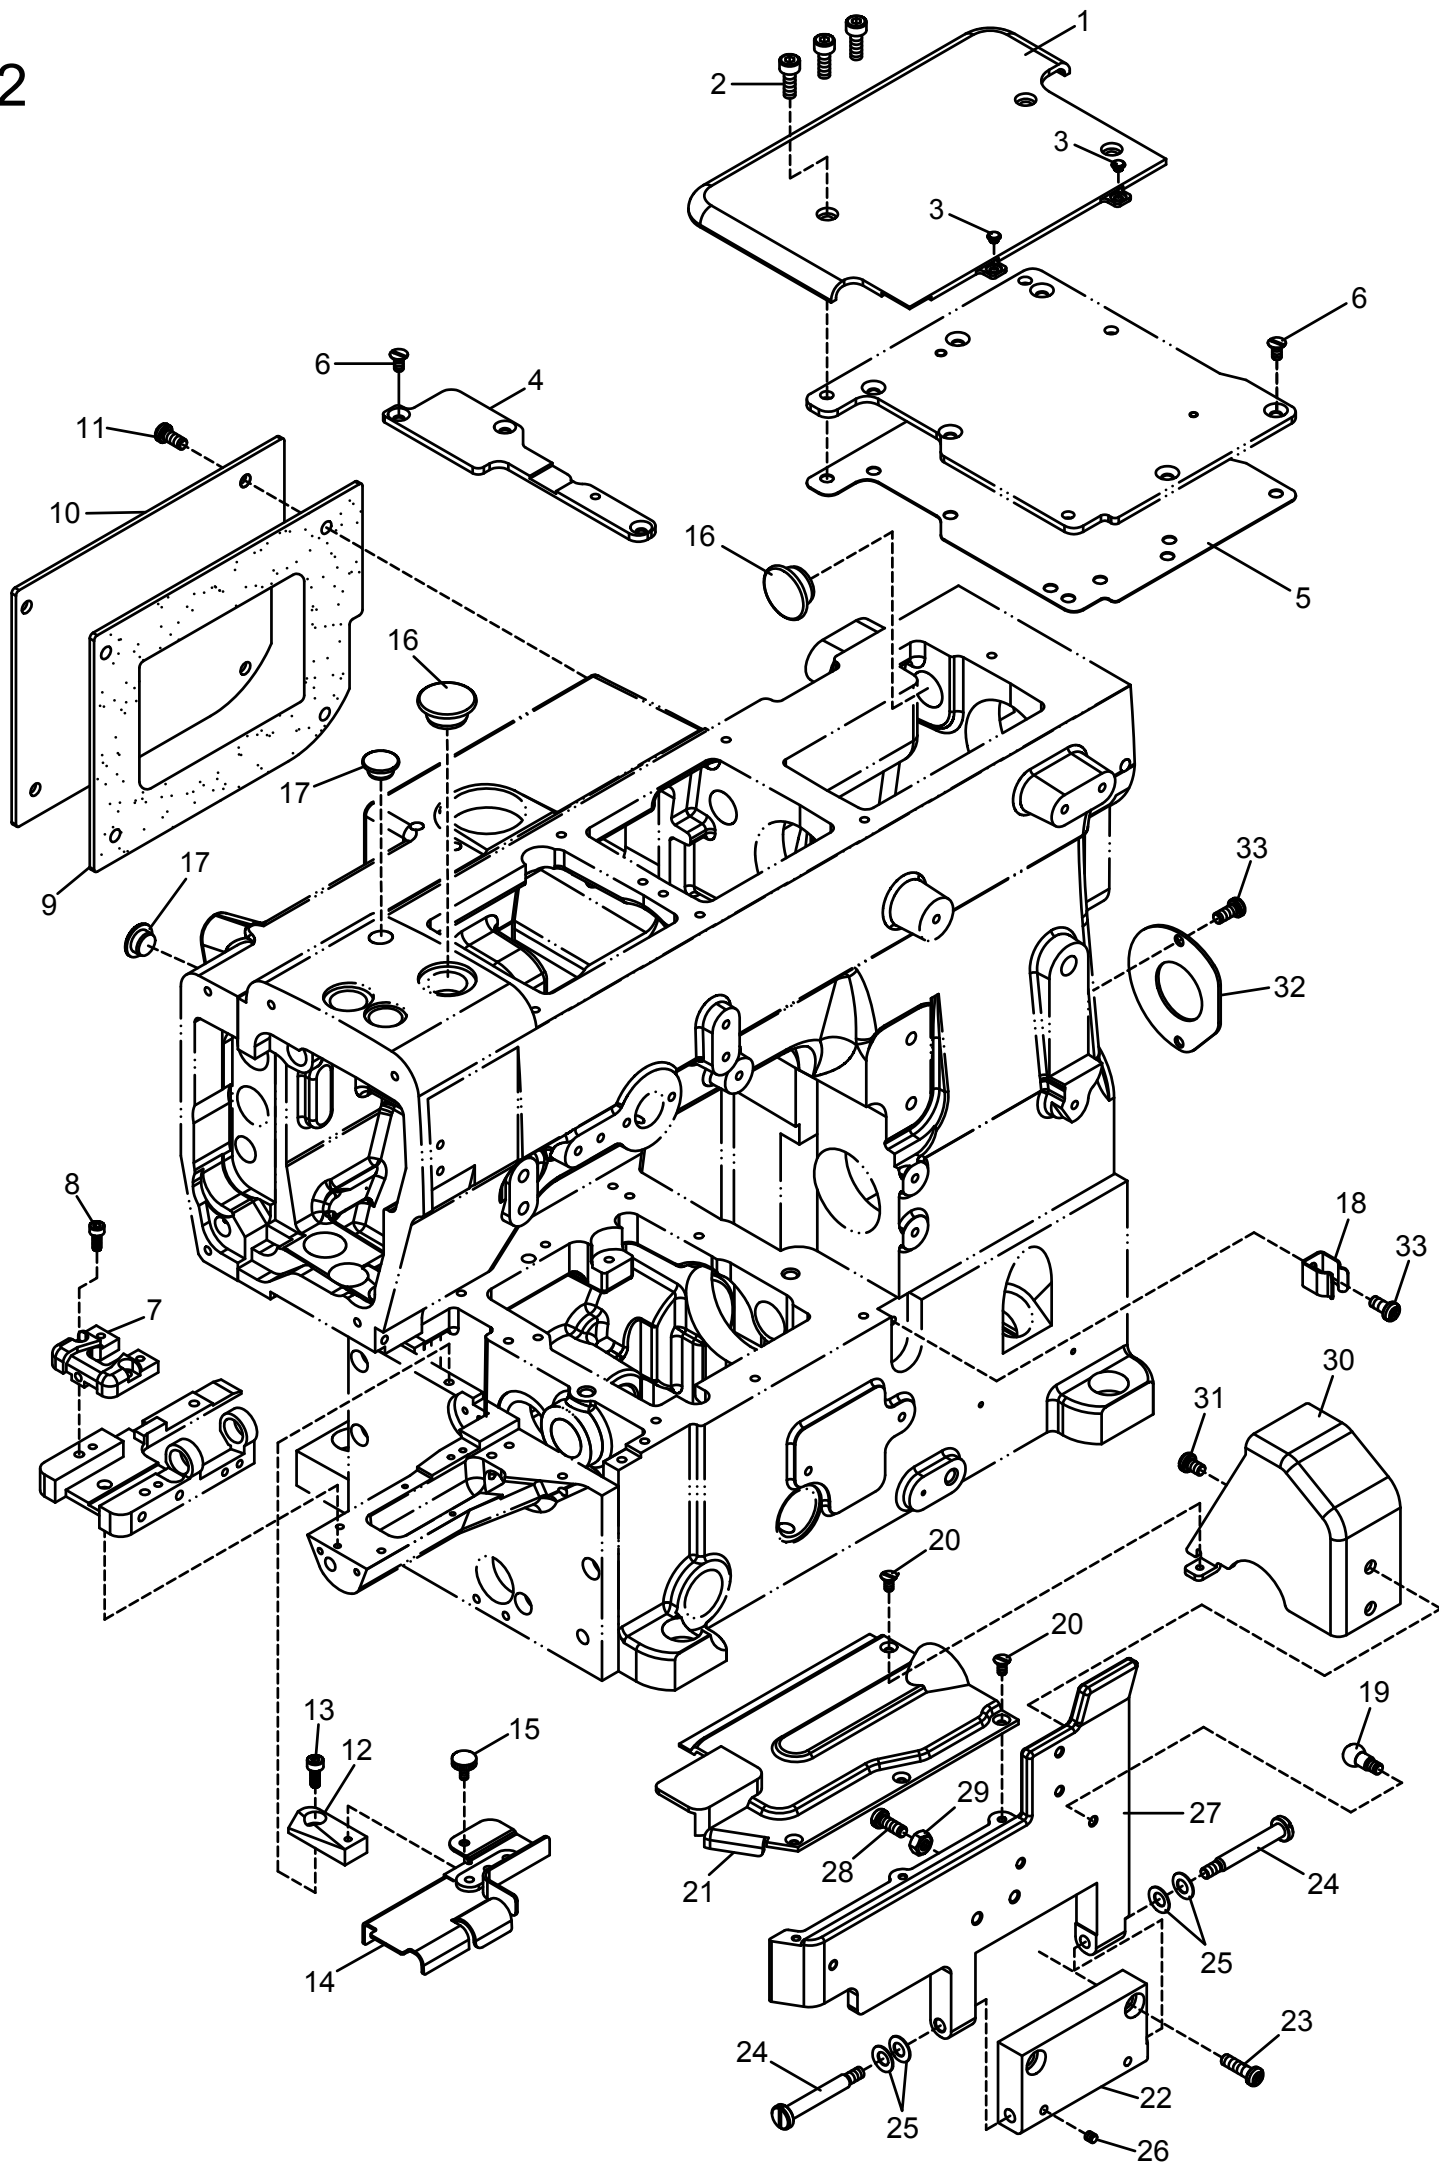


MISCELLANEOUS COVERS (2)**機殼機構(2)****2**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	E02001	Cloth Plate	縫製平台	1
2	C02002	Screw(M4-0.7×12)	螺絲	3
3	E02018	Rubber Cushion	緩衝墊	2
4	H02004	Base Cover	底座蓋板	1
5	H02005	Crank Chamber Cover Gasket	曲軸室防油墊片	1
6	C02006	Screw(M4-0.7×7.3)	螺絲	9
7	H02007	Needle Plate Holder	針板固定座	1
8	E02008	Screw(M3-0.5x8)	螺絲	2
9	H02009	Rear Cover Gasket	後蓋墊片	1
10	H02010	Rear Cover	後蓋	1
11	C01002	Screw(M4-0.7×12)	螺絲	4
12	H02012	Cover Holder	蓋板固定座	1
13	C03041	Screw (M4-0.7x6)	螺絲	1
14	H02014	Cover Plate	蓋板	1
15	H02015	Screw(M3-0.5x6)	螺絲	1
16	A0148	Seal Plug	油塞	2
17	A0149	Seal Plug	油塞	2
18	C02043	Cover Latch Spring	鎖門彈簧	1
19	C02042	Screw(M4-0.7×5)	螺絲	1
20	C02038	Screw(M3-0.5×6)	螺絲	4
21	H02021	Rear Cover	底座蓋板	1
22	C02022	Front Cover Hinge	前蓋絞鏈	1
23	C02023	Screw(M4-0.7×14)	螺絲	2
24	C02024	Screw(M4-0.7×8)	螺絲	2
25	C02025	Conical Spring Washer	錐形彈簧墊圈	4
26	C02026	Screw (M4-0.7x4)	螺絲	2
27	E02027	Front Cover(Lower)	底座前蓋	1
28	C07004	Screw(M4-0.7×10)	螺絲	1
29	C02029	Nut	螺帽	1
30	C02039	Thread Take-up Cover(Front)	提線蓋(前)	1
31	C02041	Screw(M4-0.7×6)	螺絲	2
32	C02146	Ball Bearing Holder	軸承固定壓板	1
33	C02044	Screw (M4-0.7x5)	螺絲	3

MISCELLANEOUS THREAD EYELETS
過線機構
3


Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C03001	Thread Tension Spring Cap	上線張力彈簧調整鈕	5
2	C03002	Tension Spring Bushing	張力彈簧套管	5
3	C03003	Tension Spring(Needle)	針線張力彈簧	3
4	C03004	Tension Spring(Looper , Top Cover)	下勾針,上飾線張力彈簧	2
5	C03005	Thread Tension Spring Retainer	上線張力彈簧固定座	5
6	C03006	Felt	吸油氈	5
7	A0323	Thread Tension Disc	張力調整盤	10
8	C03008	Tension Post	上線張力彈簧支柱	5
9	C03009	Tension Post Ferrule	上線張力彈簧支柱套圈	5
10	C03010	Tension Disc Separator	上線張力圓盤分離器	1
11	C03011	Tension Disc Eyelet	上線張力導孔片	3
12	C03112	Needle Thread Guide	針線導架	1
13	C03013	Tension Post Support	上線張力組支柱架	1
14	C01025	Screw (M4-0.7x8)	螺絲	8
15	C03015	Screw	螺絲	1
16	C03016	Spring	彈簧	1
17	C03054	Looper Thread Eyelet(Left)	勾針線過線孔(左)	2
18	C02049	Screw(M3-0.5x3.5)	螺絲	2
19	C03219	Needle Thread Eyelet Bracket	針線過線架	1
20	C03020	Tapping Screw(3×6mm)	螺絲	2
21	C03021	SP Container	矽油儲存槽	1
22	C03022	Felt	吸油氈	1
23	C03053	Screw(M3-0.5×5)	螺絲	1
24	C02049	Screw(M3-0.5x3.5)	螺絲	6
25	C03225	Top Cover Thread Eyelet(Upper)	上飾線過線桿(上)	1
26	C02017	Screw (M4-0.7x8)	螺絲	4
27	C03127	Needle Thread Take-up Guard	針線提線桿護架	1
28	C02006	Screw(M4-0.7×7.3)	螺絲	2
29	C02041	Screw(M4-0.7×6)	螺絲	1
30	C03030	Washer	墊片	5
31	C03055	Looper Thread Eyelet(Right)	底線輔助導板(右)	1
32	C03132	Top Cover Thread Guide	上飾線導板	1
33	C03033	Eyelet Holder Stopper	導片支架止栓	1
34	C03034	Top Cover Thread Eyelet	上飾線過線桿	1
35	C03035	Tension Post	上線張力彈簧支柱	1
36	C03036	Top Cover Tension Disc	上飾線張力調整盤	4
37	C03037	Top Cover Tension Spring	上飾線張力彈簧	1
38	C03038	Nut	螺帽	1
39	C03039	Thread Take-up Eyelet Bracket	提線導板架	1
40	C03040	Thread Take-up Cover(Rear)	提線蓋(後)	1
41	C03041	Screw (M4-0.7x6)	螺絲	2
42	C03042	Latch Spring	插銷彈簧	1
43	C03043	Thread Take-up Eyelet Holder	提線導板支架	1
44	C03044	Screw(M4-0.7×4)	螺絲	1
45	C02025	Conical Spring Washer	錐形彈簧墊圈	1
46	C03052	Looper Thread Retainer Spring	底線彈簧	1
47	C03047	Thread Take-up Eyelet(Left)	提線導板(左)	1
48	C03048	Thread Take-up Eyelet(Right)	提線導板(右)	1
49	C03049	Screw(M2.5-0.45×3.5)	螺絲	2
50	C03050	Looper Thread Guide	勾針線導板	1
51	C03051	Looper Thread Eyelet	底線輔助導板	1

4

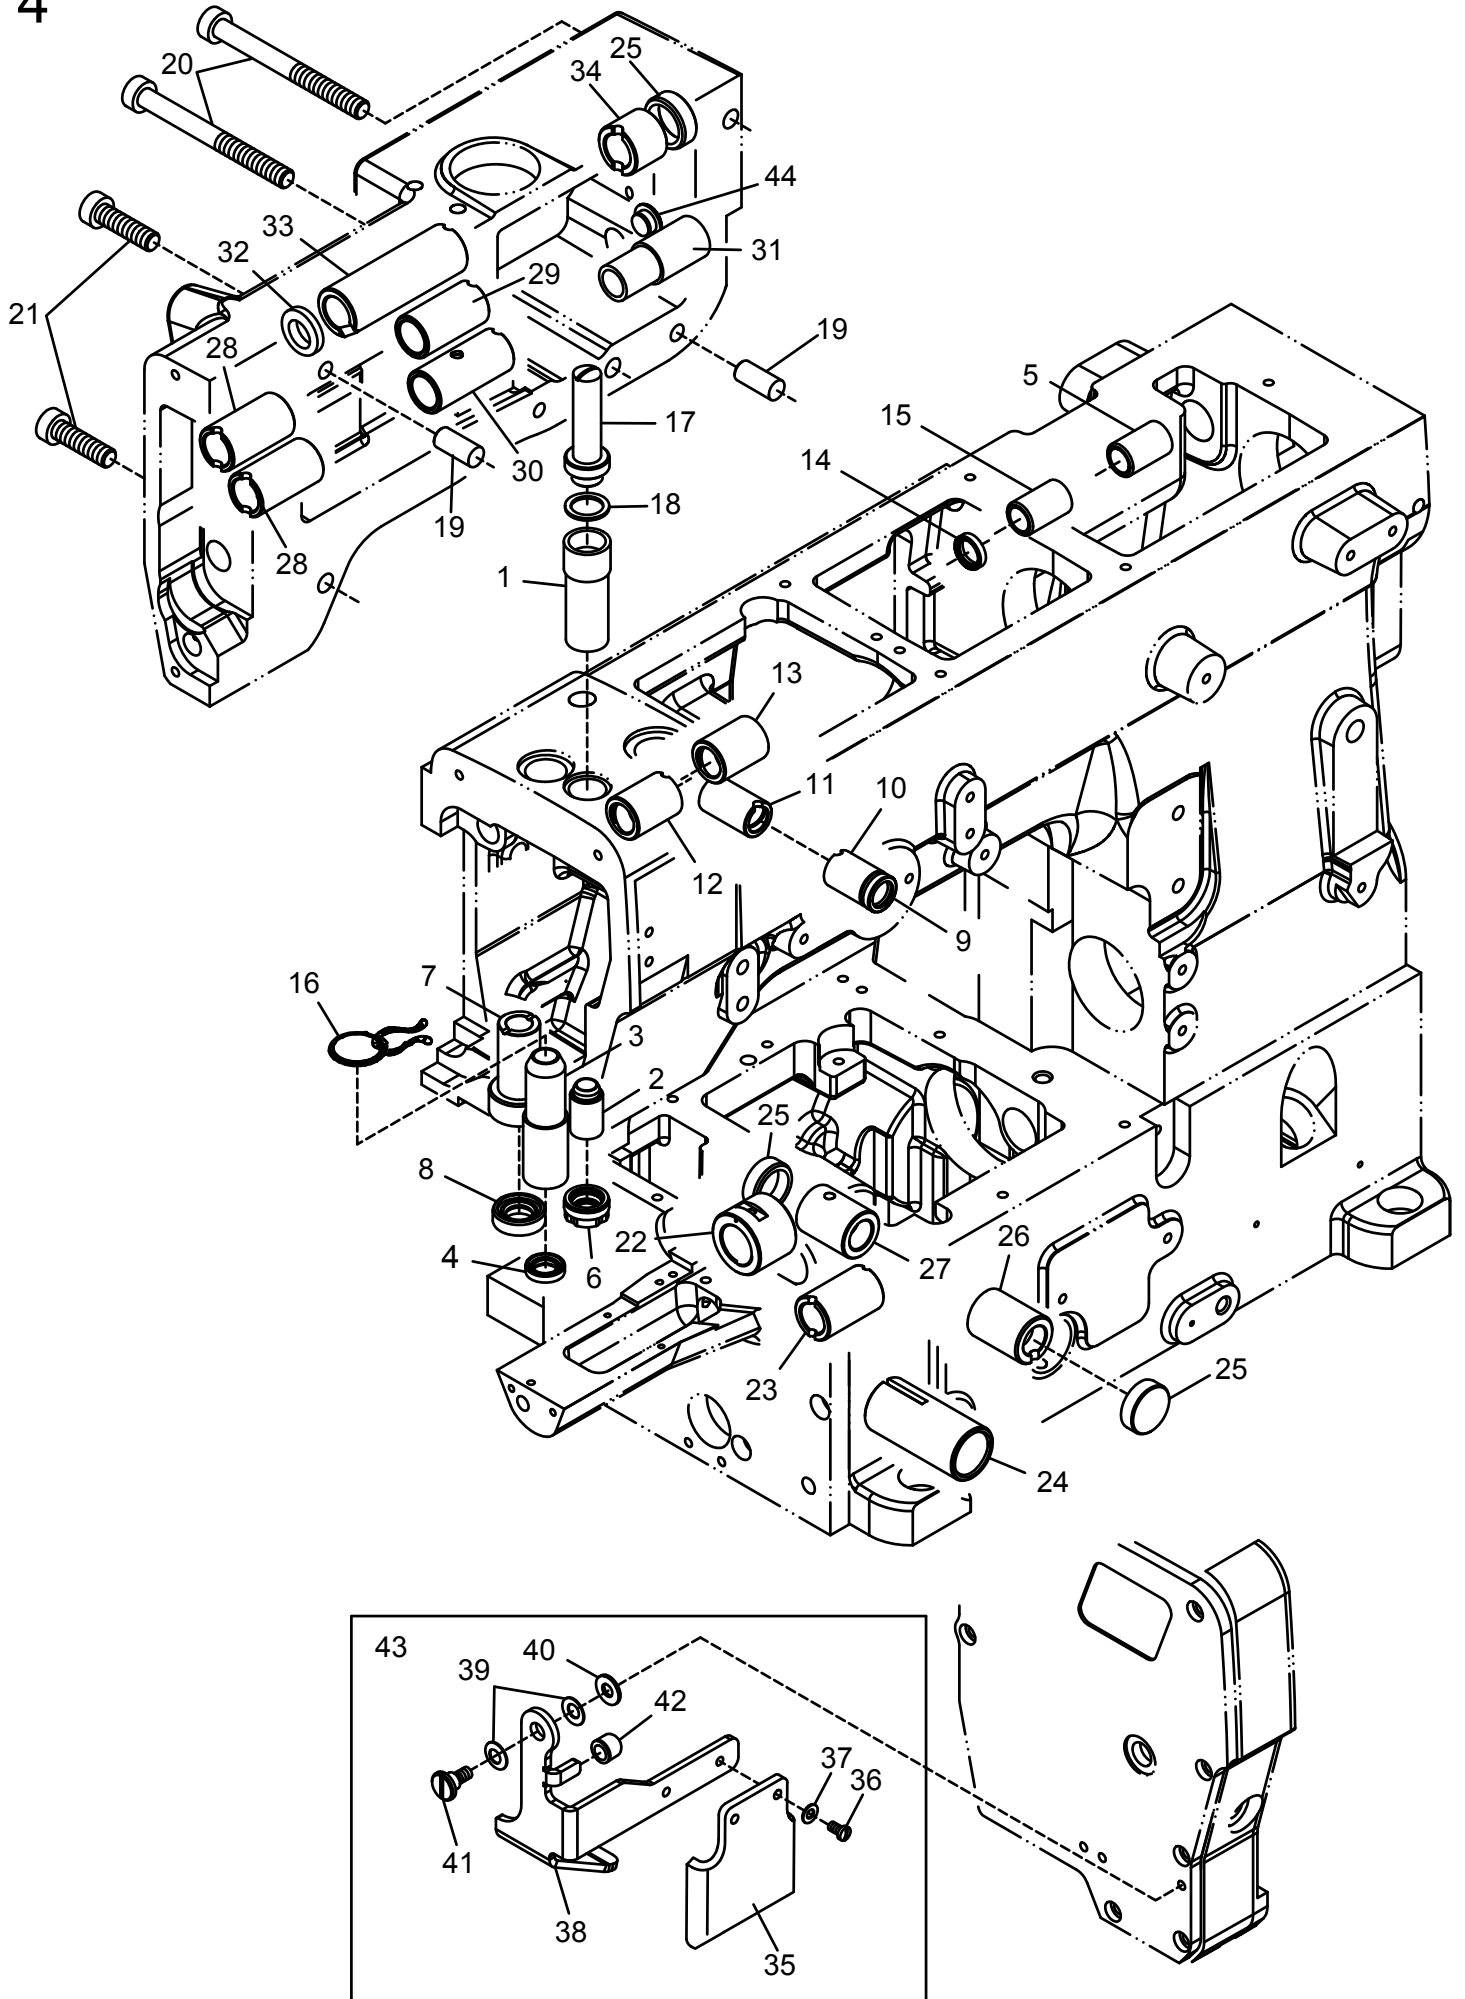

MISCELLANEOUS BUSHINGS & EYE GUARD
套管機構及護目鏡
4

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C04101	Needle Bar Bushing(Upper)	針柱套管(上)	1
2	C04002	Needle Bar Bushing(Lower)	針柱套管(下)	1
3	C04003	Presser Bar Bushing	壓腳套管	1
4	C04004	Oil Seal	油封	1
5	C04005	Foot Lifter Lever Bushing(Right)	抬壓腳連接桿套管(右)	1
6	C04053	Oil seal	油封	1
7	C04007	Spreader Driving Bar Bushing	上飾線打線器套管	1
8	C04008	Oil Seal	油封	1
9	C04009	Oil Seal	油封	1
10	C04010	Needle Thread Take-up Bushing(Front)	針線提線桿套管(前)	1
11	C04111	Needle Thread Take-up Bushing(Rear)	針線提線桿套管(後)	1
12	C04012	Spreader Driving Shaft Bushing(Left)	上飾線打線器傳動軸套管(左)	1
13	C04013	Spreader Driving Shaft Bushing(Right)	上飾線打線器傳動軸套管(右)	1
14	C04014	Oil Seal	油封	1
15	C04015	Foot Lifter Lever Bushing	抬壓腳連接桿套管(左)	1
16	C04016	Oil Wick	油芯	1
17	A0424	Needle Bar Bushing(Upper)Lid	針柱套管(上)蓋	1
18	A0425	Gasket	墊片	1
19	E01011	Pin	固定梢	2
20	H04020	Screw(M6-1x55)	螺絲	2
21	B1313	Screw (M6-1x16)	螺絲	2
22	H04022	Shaft Sleeve	軸套管	1
23	H04023	Shaft Sleeve	軸套管	1
24	E04031	Adjusting Screw Bushing	送料具調節螺絲套管	1
25	C04036	Seal Plug	止油膠塞	3
26	C04037	Looper Driving Shaft Bushing(Front)	下勾針傳動軸套管(前)	1
27	C04038	Looper Driving Shaft Bushing(Rear)	下勾針傳動軸套管(後)	1
28	H04028	Top Feed Shaft Bushing	上送進給軸襯套	2
29	H04029	Vertical Motion Shaft Bushing(Right)	垂直運動軸襯套 (右)	1
30	H04030	Top Feed Rocker Shaft Bushing (Right)	上送進給搖臂軸襯套 (右)	1
31	H04031	Adjusting Shaft Bushing	調整軸襯套	1
32	H04032	Oil Seal	油封	1
33	H04033	Rocker Drive Shaft Bushing(Left)	搖臂傳動軸襯套 (左)	1
34	H04034	Rocker Drive Shaft Bushing(Right)	搖臂傳動軸襯套 (右)	1
35	H04035	Eye Guard	護目鏡	1
36	C04049	Screw (M3-0.5x6.5)	螺絲	2
37	C04052	Washer	墊片	2
38	H04038	Finger Guard	護指架	1
39	C02025	Conical Spring Washer	錐形彈簧墊圈	2
40	B29020	Washer	墊片	1
41	C08052	Screw(M4-0.7x4)	螺絲	1
42	H04042	Cushion	軟墊	1
43	H04043	Eye Guard, C. Set	護目鏡組	1
44	H04044	Seal Plug	油塞	2

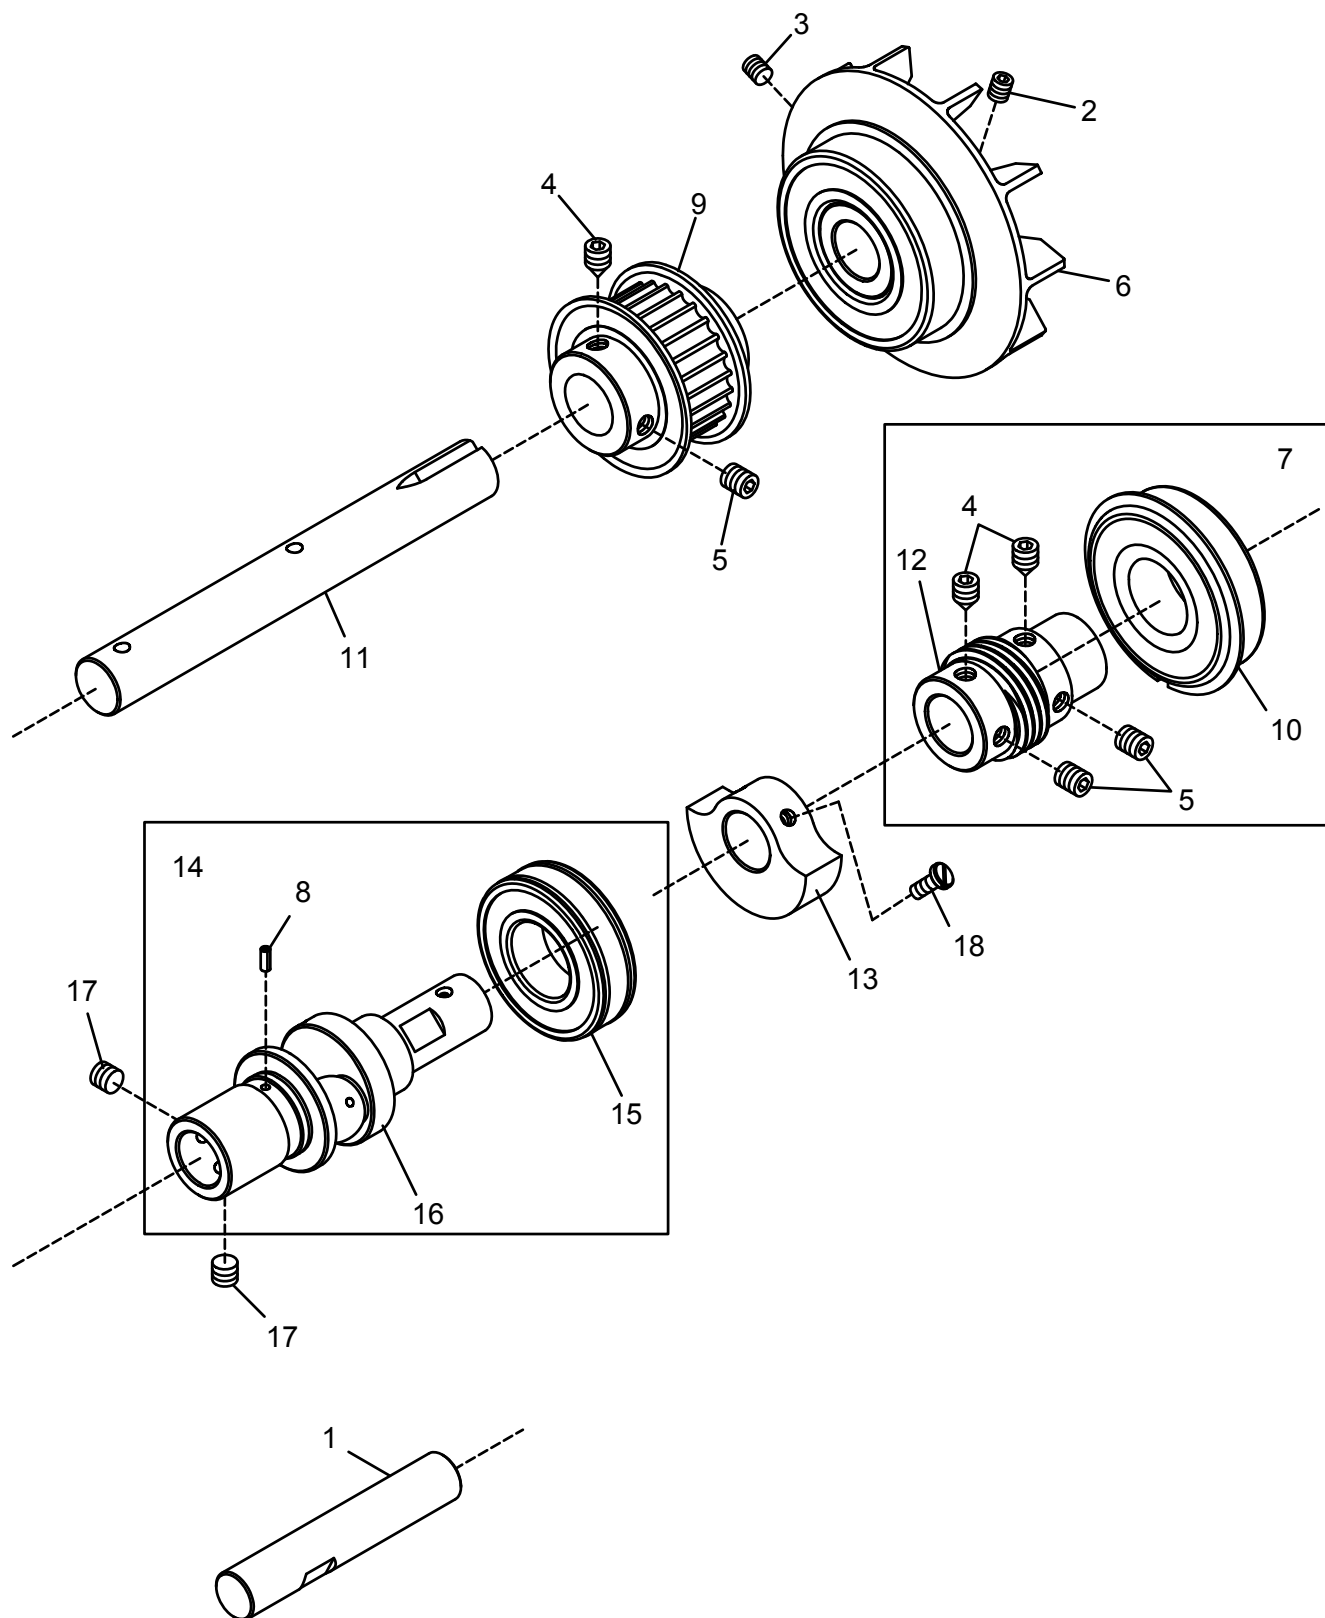


NEEDLE GUARD & MAIN SHAFT DRIVING MECHANISM

頂針片及下主軸機構組

5

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	H05001	Lower Shaft	下傳動軸	1
2	C10002	Screw (M4-0.7x5)	螺絲	2
3	C08057	Screw(M4-0.7x4)	止付螺絲	1
4	C05004	Screw(M6-1x8)	螺絲	3
5	C02021	Screw(M6-1x6)	螺絲	5
6	C05006	Oil Cooling Fan Unit	冷卻扇組	1
7	C05007	Oil Pump Driving Worm, C. Set	油泵傳動連桿組	1
8	C05008	Spring Pin(Ø3×8mm)	固定銷	1
9	C05009	Main Shaft Sprocket(Lower)	下主軸鏈輪	1
10	C05010	Ball Bearing(Middle)	滾珠培林(中)	1
11	C05011	Lower Shaft(Right)	下傳動軸(右)	1
12	C05012	Oil Pump Driving Worm	油泵傳動連桿組件	1
13	C05013	Counterweight(Small)	平衡配重凸輪(小)	1
14	C05014	Lower Shaft(Middle), C. Set	下傳動軸(中)組	1
15	C05015	Ball Bearing(Left)	滾珠培林(左)	1
16	C05016	Lower Shaft(Middle)	下傳動軸(中)	1
17	C05017	Screw(M6-1.0x4.8)	止付螺絲	2
18	C02017	Screw (M4-0.7x8)	螺絲	2

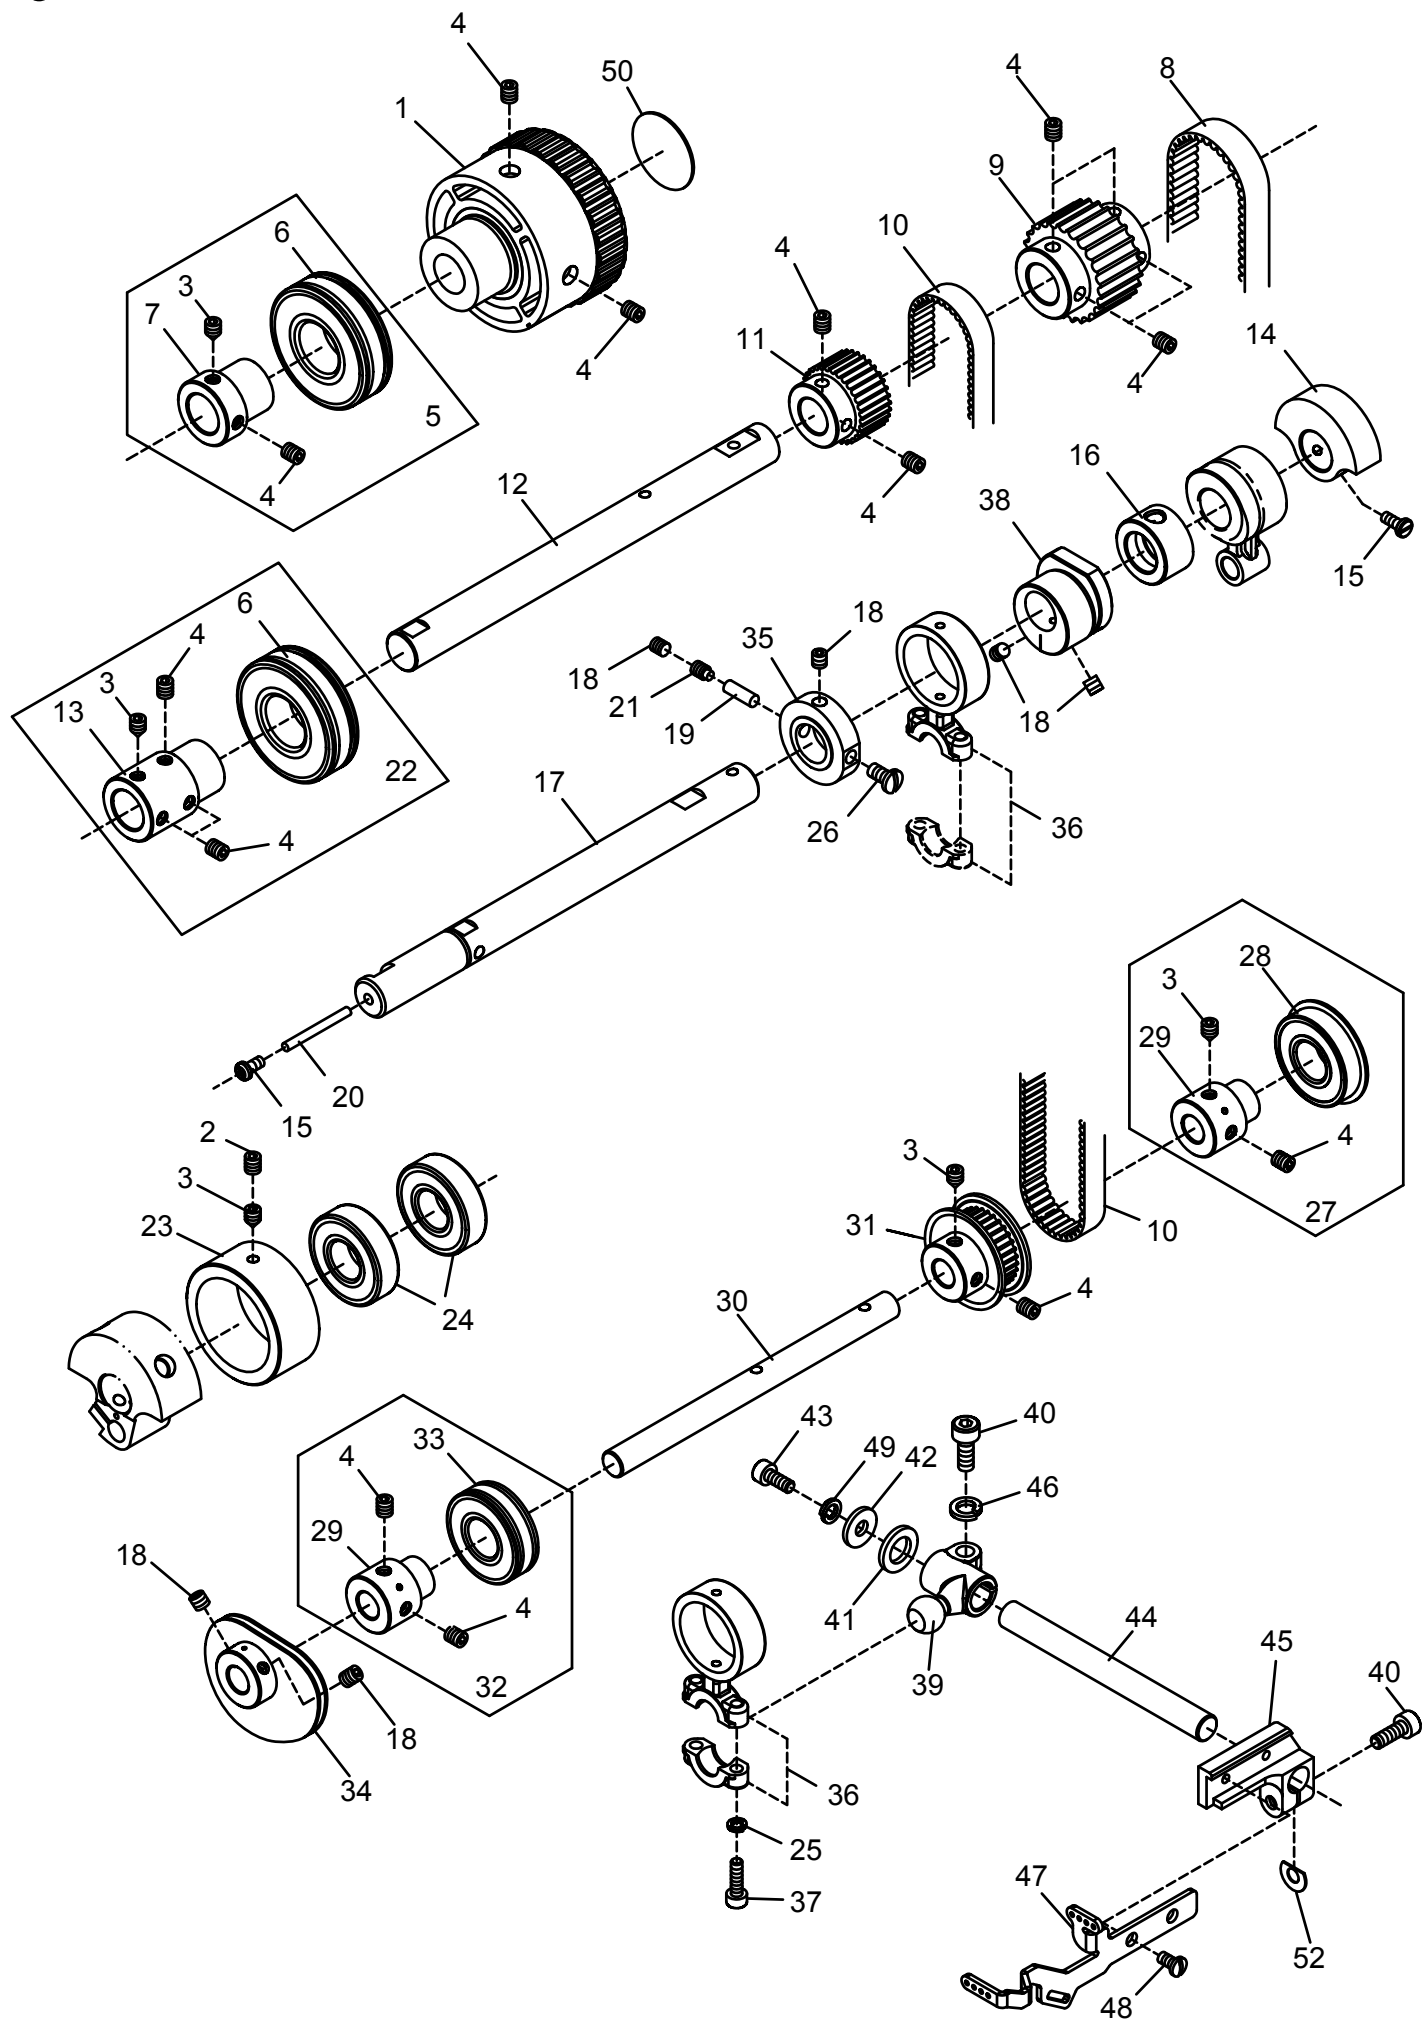


UPPER SHAFT & NEEDLE THREAD TAKE-UP MECHANISM

上主軸及針線提線機構


6

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C06101	Handwheel	手推輪	1
2	C05017	Screw(M6-1.0x4.8)	止付螺絲	1
3	C05004	Screw(M6-1×8)	螺絲	5
4	C02021	Screw(M6-1×6)	螺絲	16
5	C06005	Adapter, C. Set	接頭組	1
6	C06006	Ball Bearing	軸承	2
7	C06007	Adapter	接頭	1
8	C06008	Timing Belt(550-5GT-12)	同步傳動皮帶	1
9	C06009	Upper Shaft Sprocket(Upper)	上主輪鏈輪	1
10	C06010	Timing Belt(384-3GT-8)	同步傳動皮帶	1
11	C06111	Upper Shaft Sprocket(Upper)	上主軸鏈輪	1
12	C06012	Upper Shaft(Right)	上主傳動軸(右)	1
13	C06013	Upper Shaft Joint	上主軸接頭	1
14	C05013	Counterweight(Small)	平衡配重凸輪(小)	1
15	C02017	Screw (M4-0.7x8)	螺絲	3
16	C06016	Oil Sleeve	油套管	1
17	C06117	Upper Shaft(Left)	上主傳動軸(左)	1
18	A0403	Screw (M5-0.8x5)	螺絲	6
19	C06219	Oil Wick(Ø5×15mm)	油芯	1
20	C06120	Oil Wick(Ø3×30mm)	油芯	1
21	C06121	Screw(M5-0.8×5)	螺絲	1
22	C06122	Upper Shaft Joint, C. Set	上主軸接管組	1
23	C06023	Upper Shaft Sleeve	上軸套管	1
24	C06024	Ball Bearing	滾珠培林	2
25	C10035	Spring Washer	彈簧墊片	2
26	C06126	Screw (M5-0.8x7)	螺絲	1
27	C06027	Adapter(Right), C. Set	接頭組	1
28	C06028	Ball Bearing	滾珠培林	1
29	C06029	Adapter	接頭	2
30	C06130	Looper Thread Take-up Shaft	分線盤傳動軸	1
31	C06131	Thread Take-up Shaft Sprocket(Lower)	分線盤傳動軸鏈輪	1
32	C06032	Adapter(Left), C. Set	接頭組	1
33	C06033	Ball Bearing	滾珠培林	1
34	C06034	Looper Thread Take-up	底線挑線凸輪	1
35	C06051	Locating Ring	定位環	1
36	C06136	Connecting Rod	連桿	1
37	C07025	Screw (M4-0.7x16)	螺絲	2
38	C06138	Spreader Eccentric	偏心輪	2
39	C06039	Driving Lever	傳動桿	1
40	C06040	Screw(M6-1×16)	螺絲	2
41	C06041	Washer	墊片	1
42	C06042	Washer	墊片	1
43	C06043	Screw (M5-0.8x10)	螺絲	1
44	C06044	Driving Shaft	傳動軸	1
45	C06145	Bracket	托架	1
46	C06052	Washer	墊片	1
47	C06147	Needle Thread Take-up	針線提線過線桿	1
48	C06048	Screw(M4-0.7×8)	螺絲	2
49	B1406	Spring Washer	彈簧墊片	1
50	C06150	Emblem	銘牌	1

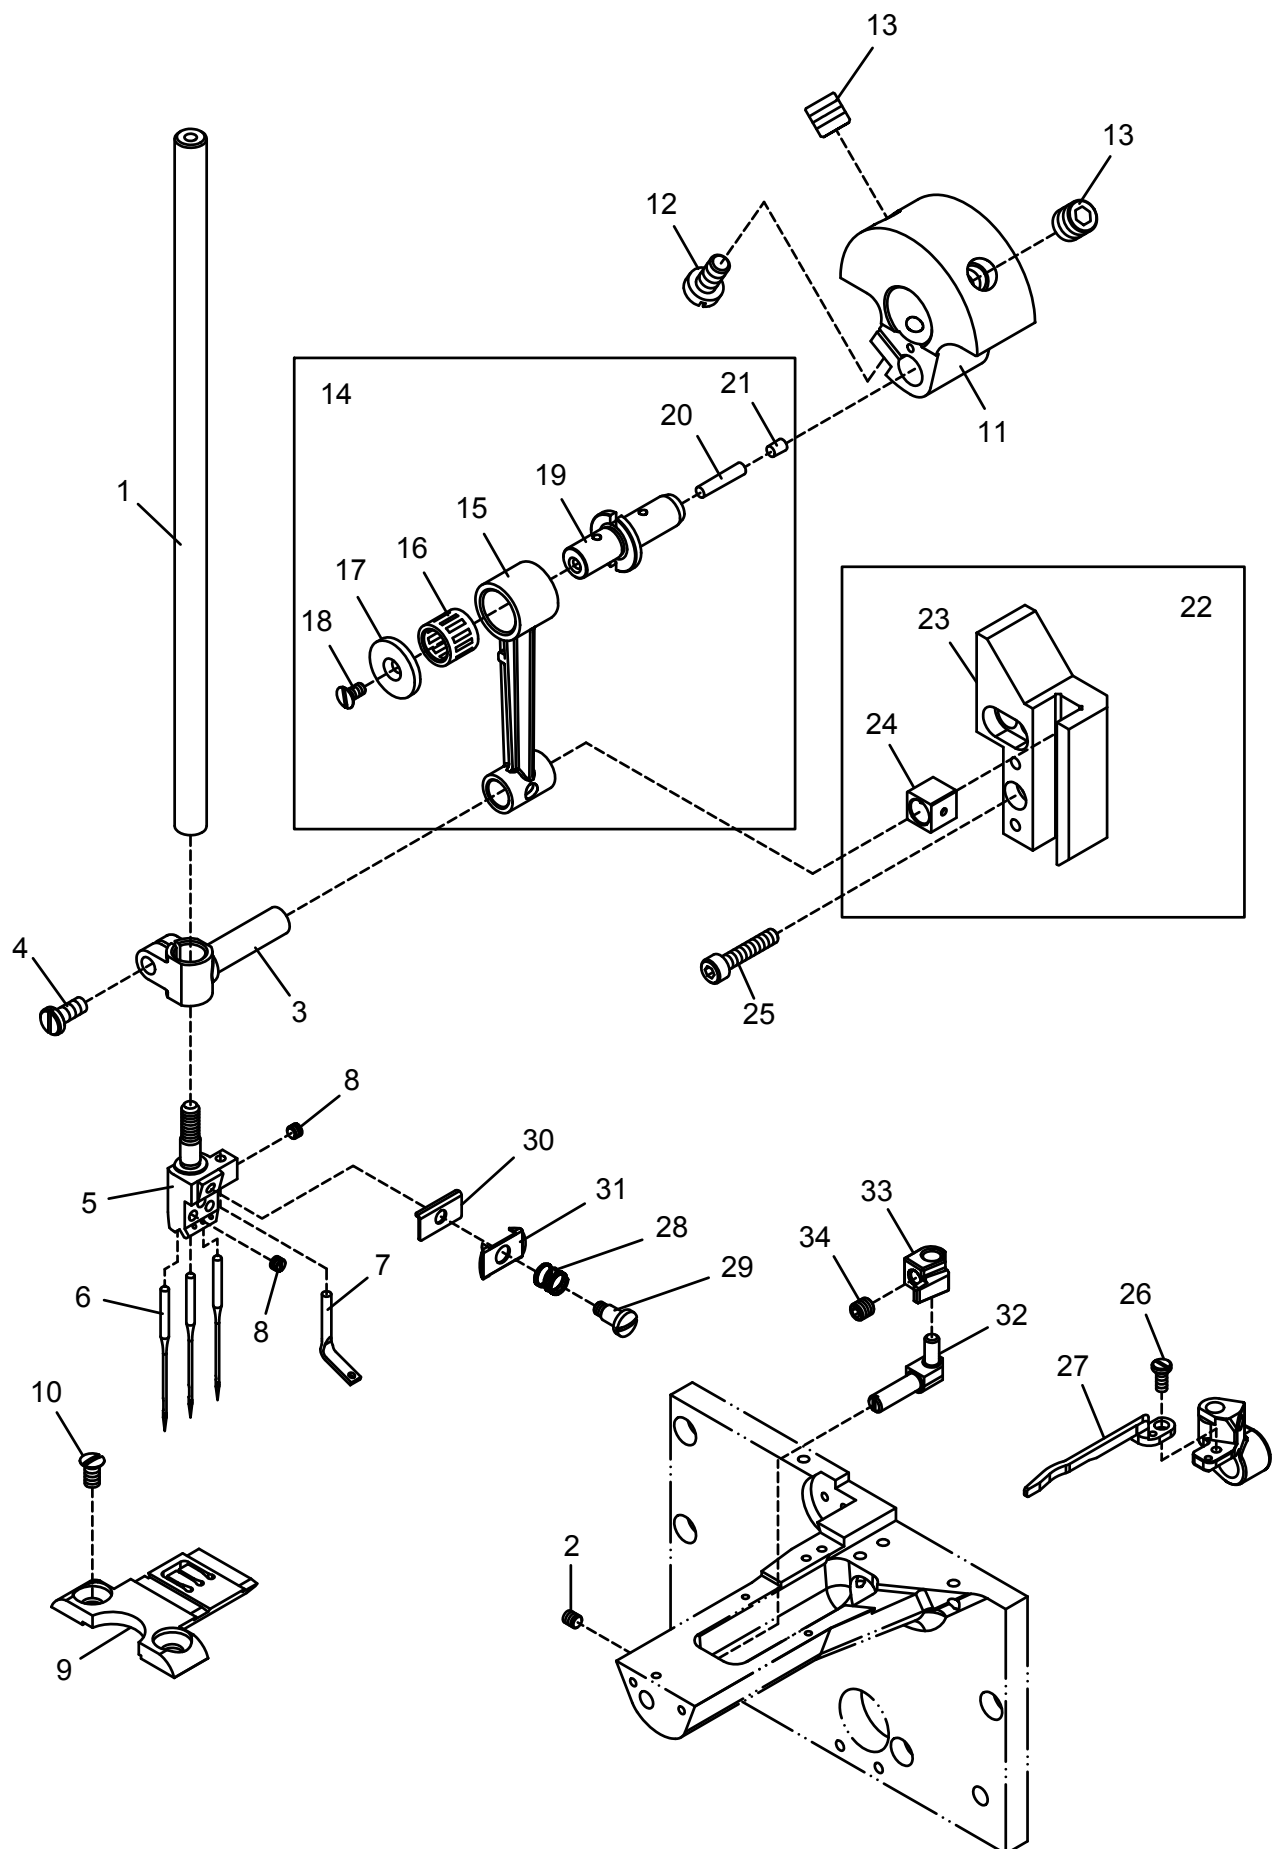

NEEDLE BAR MECHANISM**針棒機構****7**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C07001	Needle Bar	針棒	1
2	C02026	Screw (M4-0.7x4)	螺絲	1
3	C07003	Needle Bar Bracket	針棒托架	1
4	C07004	Screw(M4-0.7×10)	螺絲	1
5	M27356	Needle Clamp(5.6mm)	針鉗	1
6	C07006	Needle(UY×128 GAS)	針	3
7	C07007	Top Cover Thread Eyelet	上飾線過線片	1
8	C07008	Screw(1/8-44×2.4)	螺絲	4
9	S90056	Needle Plate(5.6mm)	針板	1
10	C07010	Screw(9/64-40×4.8)	螺絲	2
11	C07011	Counterweight	平衡配重凸輪	1
12	C07012	Screw(M5-0.8×10)	螺絲	2
13	C07013	Screw(M8-1.25×8)	螺絲	2
14	C07014	Connecting Rod. Complete Set	連桿組	1
15	C07015	Connecting Rod.	連桿	1
16	C07016	Roller Bearing	培林	1
17	C07017	Eccentric Pin Plate	偏心梢墊片	1
18	C02038	Screw(M3-0.5×6)	螺絲	1
19	C07019	Eccentric Pin	偏心梢	1
20	C07020	Felt(2.5×3×30mm)	吸油蕊	1
21	C07021	Seal Plug	油塞	1
22	H07022	Needle Bar Guide,C.Set	針棒定位滑塊組	1
23	H07023	Needle Bar Guide	針桿導軌	1
24	C07024	Slide Block	針棒定位滑塊	1
25	H07025	Screw(M4-0.7x20)	螺絲	2
26	E11033	Screw (M2.5-0.45x5)	螺絲	1
27	H07027	Needle Guard (Front)	前擋針	1
28	C07028	Spring	彈簧	1
29	C07029	Screw(1/8-44x3)	螺絲	1
30	C07030	Needle Thread Guide	針線導板	1
31	C07031	Needle Thread Holder Stopper	針線限制支架	1
32	H07032	Needle Guard Bracket	針擋支架	1
33	H07033	Needle Guard (Rear)	後針擋	1
34	E11049	Screw(M4-0.7×3)	螺絲	1

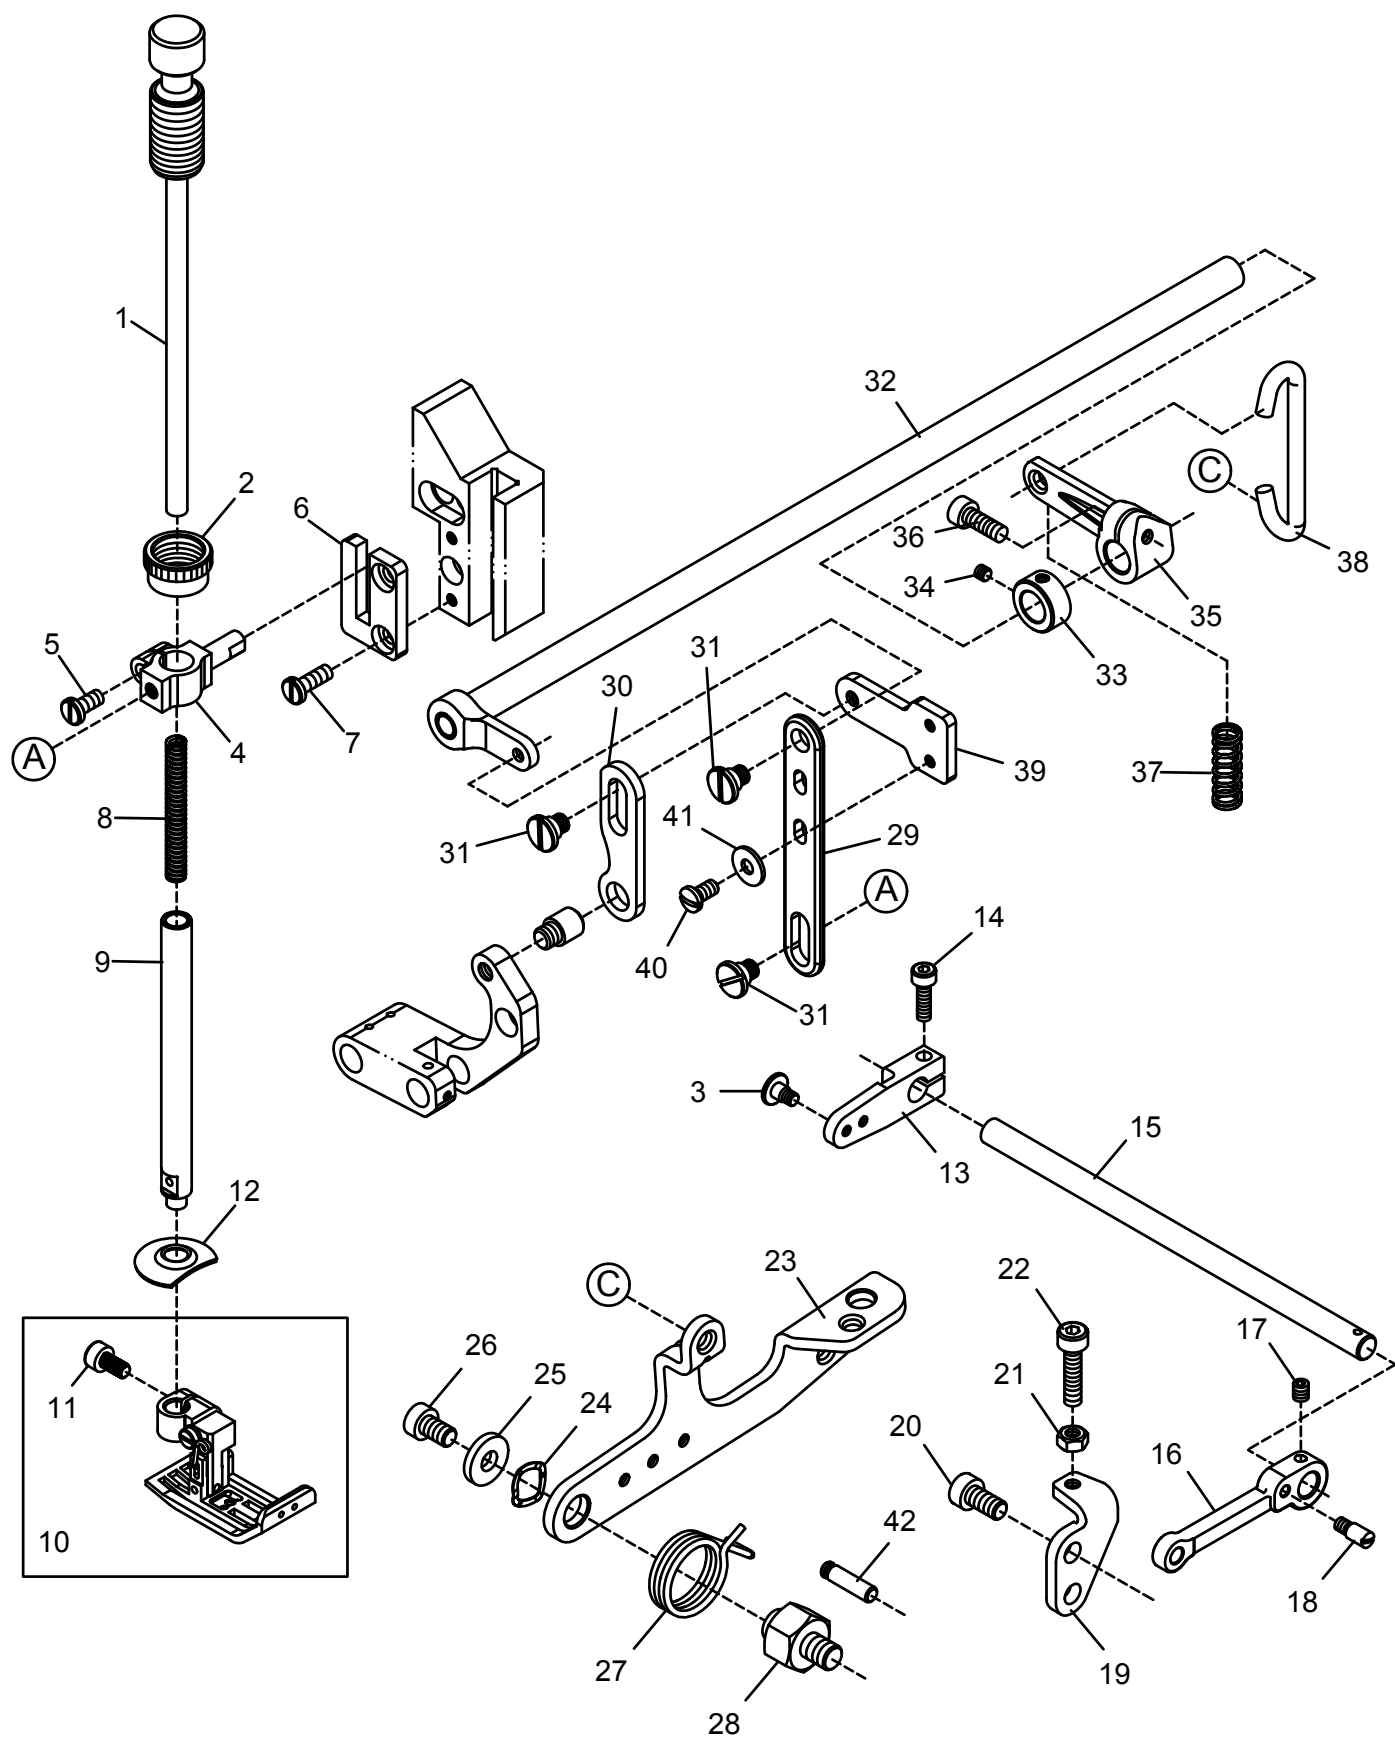


PRESSER FOOT MECHANISM

壓腳機構

8

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C08001	Presser Spring Regulator	壓腳彈簧調節器	1
2	C08002	Lock Nut	鎖緊螺帽	1
3	C08052	Screw(M4-0.7×4)	螺絲	1
4	H08004	Presser Bar Connecting Bracket	壓桿連接支架	1
5	C07004	Screw(M4-0.7×10)	螺絲	1
6	H08006	presser Bar Guide	壓桿導軌	1
7	C24016	Screw (M4-0.7x5.5)	螺絲	2
8	C08008	Presser Bar Spring(Inner)	壓腳棒彈簧(內)	1
9	C08009	Presser Bar	壓腳棒	1
10	P90056	Presser Foot, C. Set(5.6mm)	壓腳組	1
11	U09022	Screw (M4-0.7x8)	螺絲	1
12	C08012	Oil Protector Ring	止油環	1
13	C08053	Tension Release Lever	拉力釋放槓桿	1
14	C06037	Screw(M4-0.7×14)	螺絲	1
15	C08055	Tension Release Shaft	拉力釋放軸	1
16	C08056	Thread Pull-off Lever	拉力釋放槓桿	1
17	C08057	Screw(M4-0.7x4)	止付螺絲	1
18	C08058	Tension Release Adjusting Eccentric	拉力釋放調整偏心	1
19	C08046	Lifter Lever Stopper	提升拉柄擋件	1
20	C08047	Screw(M6-1×12)	螺絲	2
21	C08048	Nut	螺帽	1
22	C08049	Screw(M5-0.8×22)	螺絲	1
23	C08039	Lifter Lever	提升拉柄	1
24	C08040	Elastic Washer	波形彈性墊片	1
25	C08041	Washer	墊片	1
26	C08042	Screw(M6-1×10)	螺絲	1
27	C08043	Spring	彈簧	1
28	C08044	Lifter Lever Holder	提升拉柄座	1
29	H08029	Presser Bar Lifter Link	壓腳桿升降連桿	1
30	H08030	Guide Lifter Link	導引升降連桿	1
31	C08031	Screw(M5-0.8×3.5)	螺絲	2
32	C08132	Lifter Shaft	壓腳提升主軸	1
33	C09122	Collar(10×18×7mm)	軸環	1
34	C02026	Screw (M4-0.7x4)	螺絲	2
35	C08135	Lifter Shaft Lever	提升主軸拉柄	1
36	C08036	Screw(M5-0.8×14)	螺絲	1
37	C08037	Spring	彈簧	1
38	C08038	Lever Link	拉柄連桿	1
39	H08039	Guide Lifter Link(Upper)	導引升降連桿 (上)	1
40	C02017	Screw (M4-0.7x8)	螺絲	2
41	B29020	Washer	墊片	2
42	C08045	Knock Pin(Ø5×20mm)	插銷	1

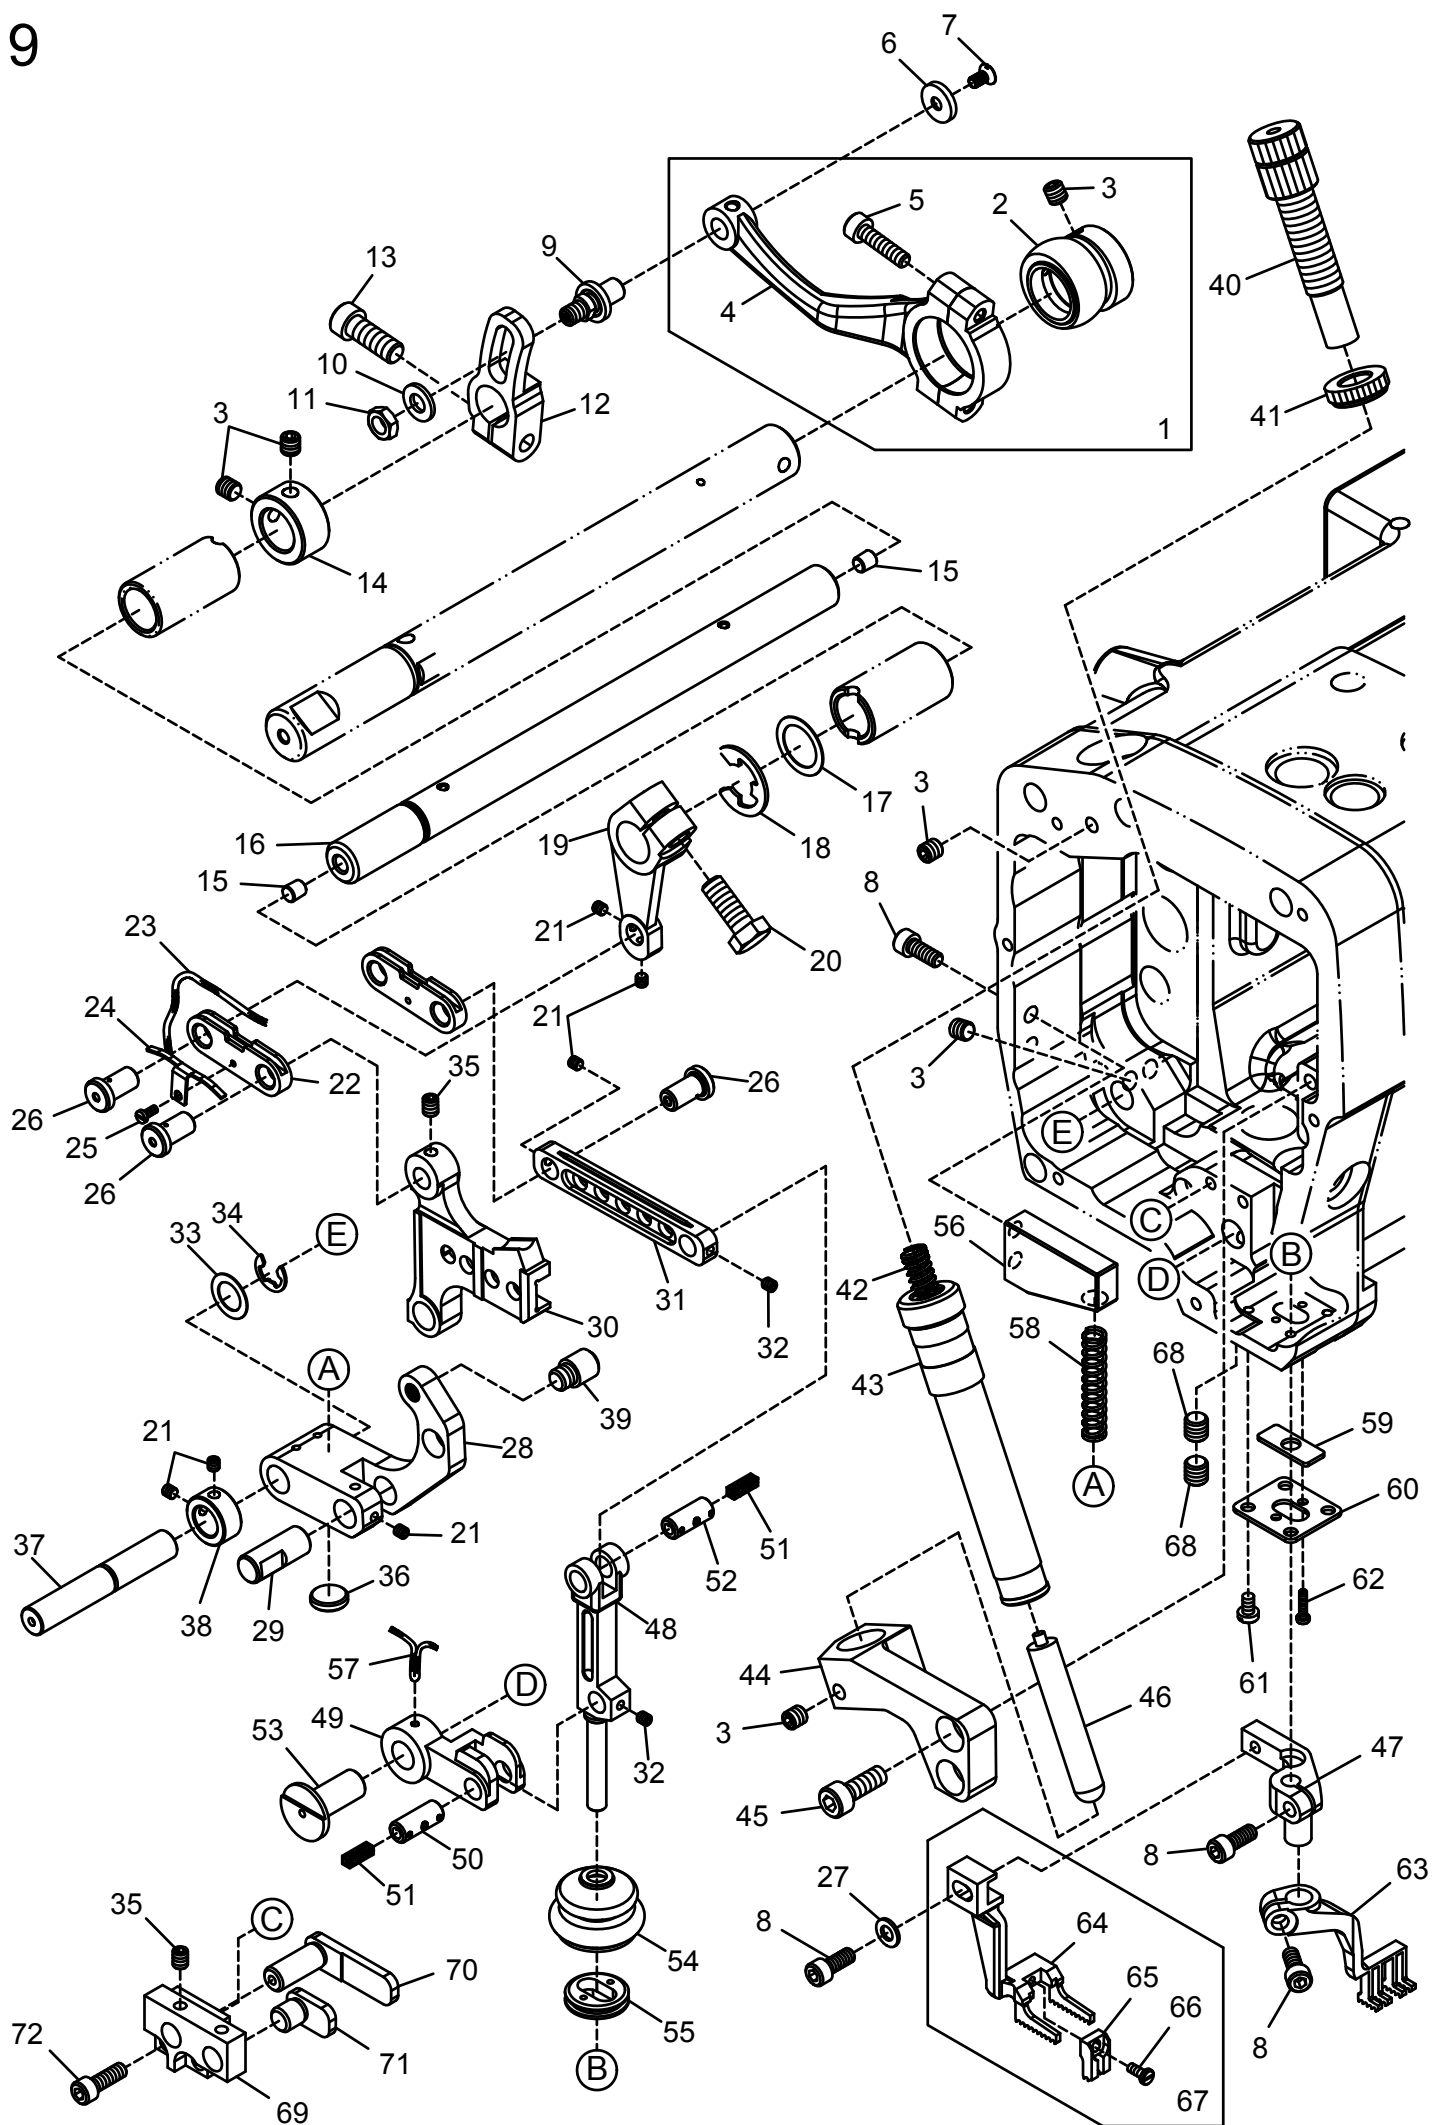


TOP FEED VERTICAL MECHANISM

上送料垂直機構


9

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	H09001	Vertical Motion Connecting Rod, C. Set	垂直運動連桿組	1
2	H09002	Vertical Motion Eccentric	垂直運動偏心輪	1
3	A0403	Screw (M5-0.8x5)	螺絲	8
4	H09004	Vertical Motion Connecting Rod	垂直運動連桿	1
5	C07025	Screw (M4-0.7x16)	螺絲	2
6	H09006	Connecting Rod Pin Plate	連桿銷板	1
7	C02038	Screw(M3-0.5x6)	螺絲	1
8	B29034	Screw (M4-0.7x10)	螺絲	5
9	H09009	Connecting Rod Pin	連桿銷	1
10	C10025	Washer	墊片	1
11	C08048	Nut	螺帽	1
12	H09012	Vertical Motion Adjusting Arm	垂直運動調節臂	1
13	C06040	Screw(M6-1x16)	螺絲	1
14	H09014	Collar(12x20x10mm)	軸環	1
15	C10046	Seal Plug	油塞	2
16	H09016	Vertical Motion Shaft	垂直運動軸	1
17	H09017	Thrust Plate	止推板	1
18	C21008	Retaining Ring	E型扣環	1
19	H09019	Vertical Motion Rocking Arm	垂直運動搖臂	1
20	H09020	Screw(M6-1x16)	螺絲	1
21	C01014	Screw (M3-0.5x3)	螺絲	6
22	H09022	Rocking Arm Link	搖臂連桿	1
23	H09023	Oil Wick	油芯	1
24	H09024	Oil Wick Presser	油芯壓片	1
25	U03025	Screw (M2-0.4x3.5)	螺絲	1
26	H09026	Link Pin	連結銷	3
27	C03030	Washer	墊片	1
28	H09028	Top Feed Dog Bar Guide Arm	上送桿導臂	1
29	H09029	Guide Arm Pin	導臂銷	1
30	H09030	Top Feed Dog Bar Guide	上送齒傳動桿導架	1
31	H09031	Top Feed Dog Bar	上送齒傳動桿	1
32	C12045	Screw(M3-0.5x4)	螺絲	2
33	H09033	Thrust Plate	止推板	1
34	C11024	Retaining Ring	固定環	1
35	C02026	Screw (M4-0.7x4)	螺絲	3
36	H09036	Guide Stop	止推塊	1
37	H09037	Guide Arm Shaft	導臂軸	1
38	C24021	Collar	軸環	1
39	H09039	Screw(M6-1x5)	螺絲	1
40	H09040	Adjusting Screw(M10-0.75 x 44)	調節螺絲	1
41	H09041	Lock Nut	鎖緊螺帽	2
42	H09042	Top Feed Dog Press Spring	上送壓力彈簧	1
43	H09043	Top Feed Dog Bar Bushing	上送齒壓棒襯套	1
44	H09044	Top Feed Dog Bar Bushing Holder	上送齒壓棒襯套支架	1
45	A0646	Screw (M5-0.8x14)	螺絲	2
46	H09046	Top Feed Dog Presser Bar	上送齒壓棒	1
47	H09047	Bracket	支架	1
48	H09048	Top Feed Dog Bar	上送齒桿	1
49	H09049	Top Feed Dog Bar Link	上送齒桿連接座	1
50	H09050	Top Feed Dog Bar Link Pin	上送齒桿連接銷	1

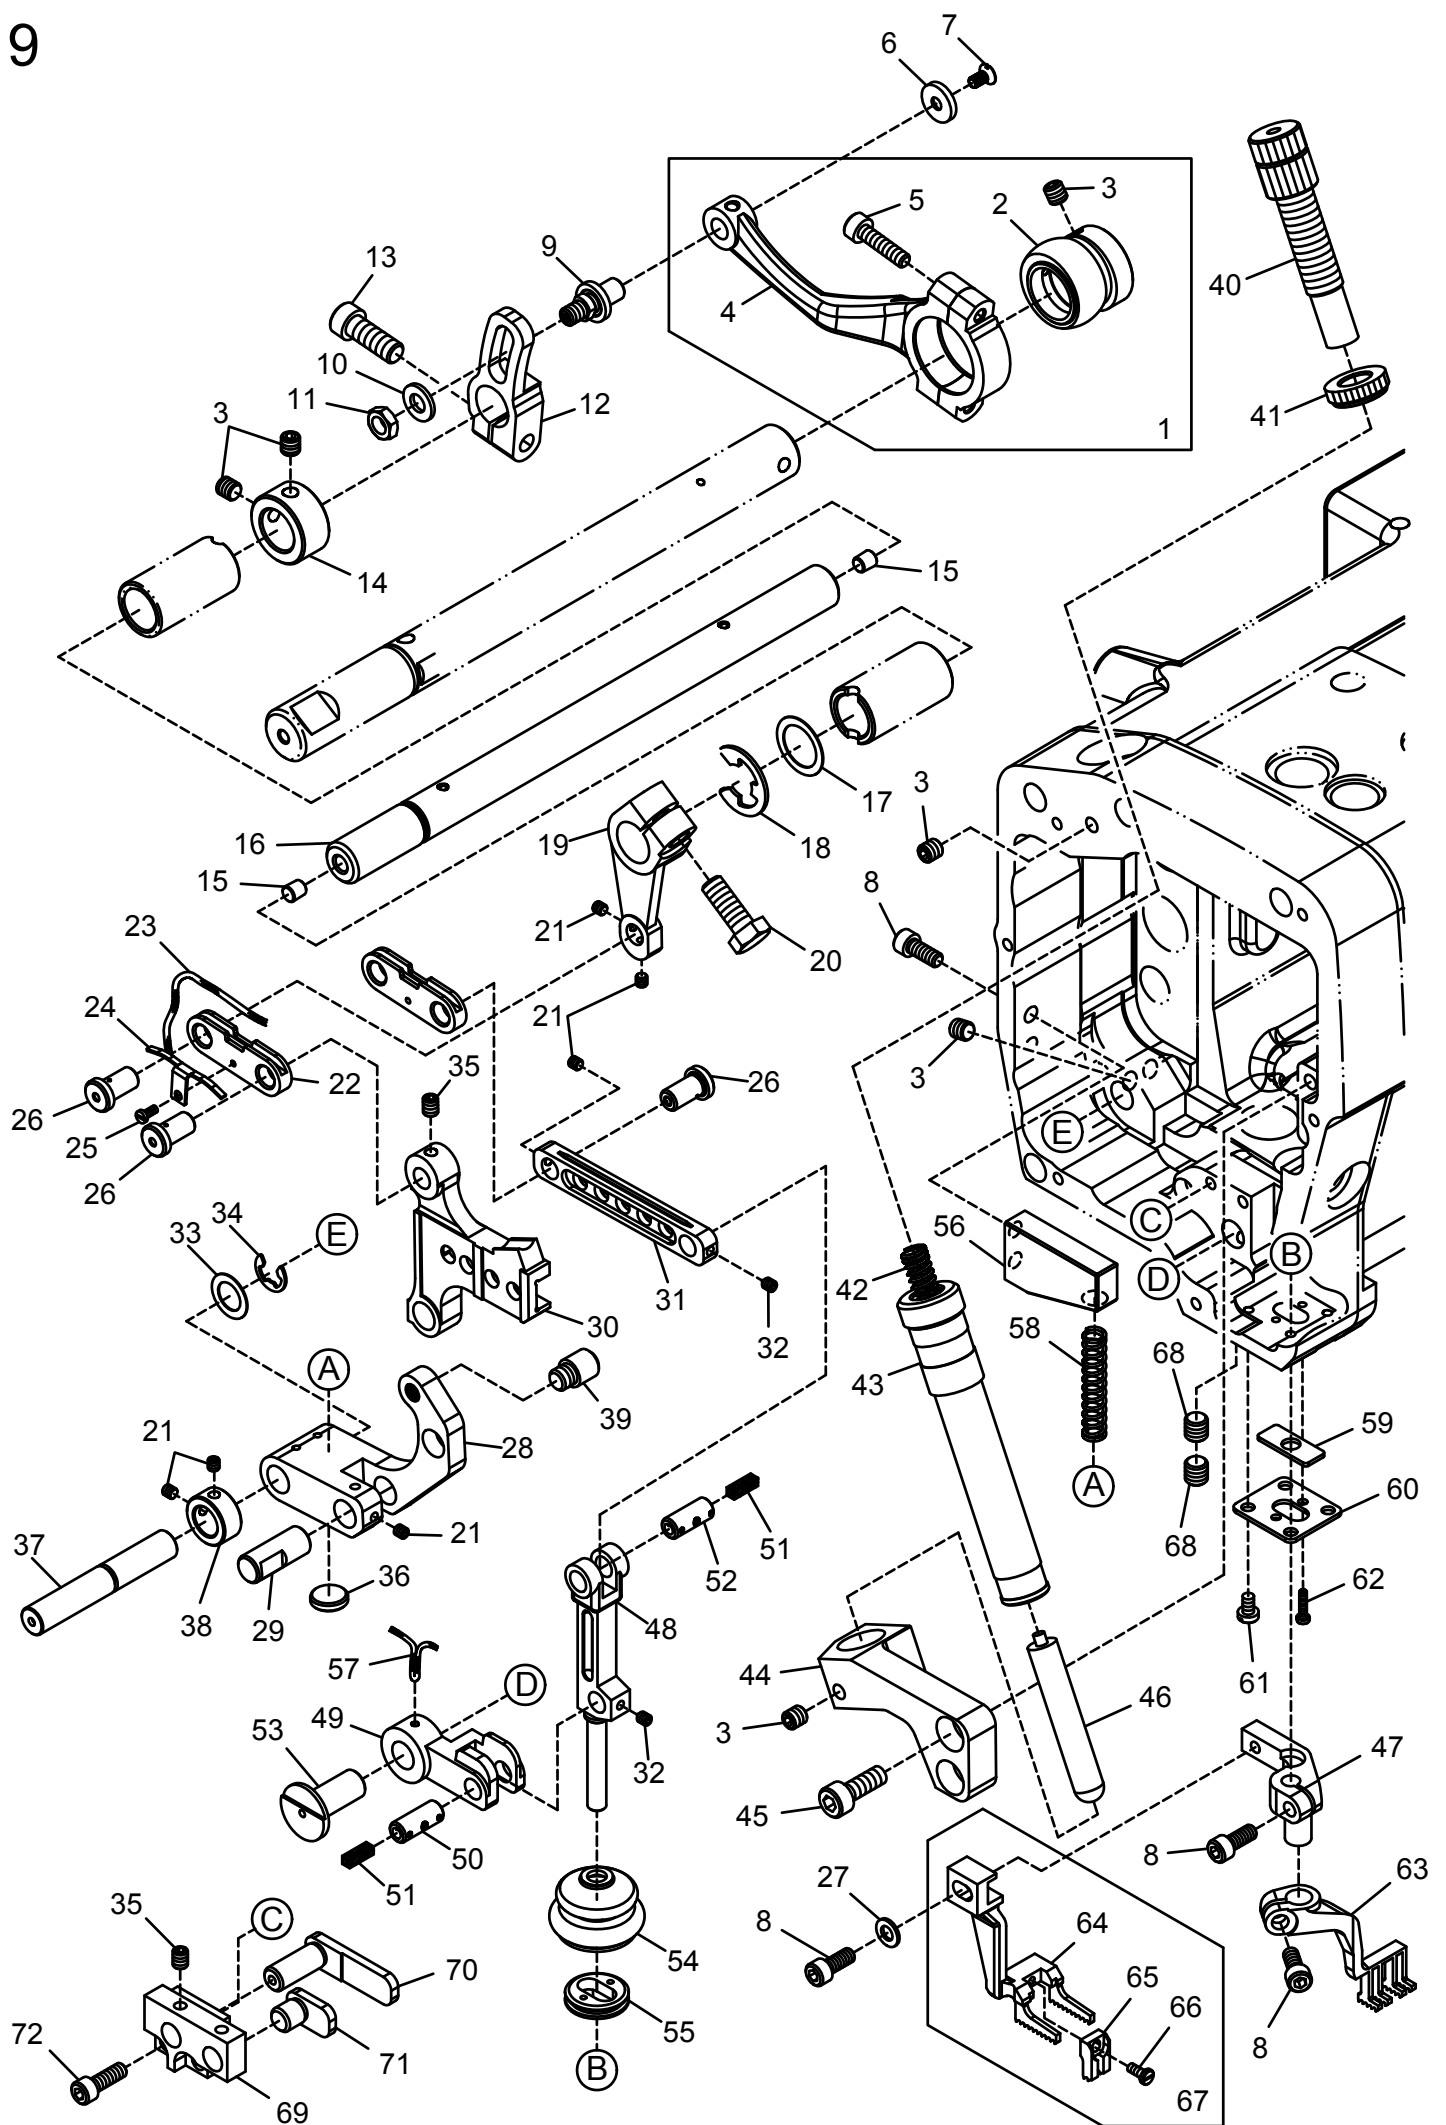

TOP FEED VERTICAL MECHANISM**頂部送料垂直機構****9**

Ref.No	Parts.No	Description	品 名	Amt.Req.
51	H09051	Oil Wick	油芯	2
52	H09052	Top Feed Dog Bar Pin	上送齒桿銷	1
53	H09053	Top Feed Dog Link Pin	上送齒座連接銷	1
54	H09054	Oil Leakage Proof Cover	防漏油蓋	1
55	H09055	Cover Support	防油套底座	1
56	H09056	Spring Holder	彈簧座	1
57	H09057	Oil Wick	油芯	1
58	H09058	Auxiliary Top Feed Dog Spring	上送齒輔助彈簧	1
59	H09059	Top Feed Dog Bar Seal	上送桿密封片	1
60	H09060	Seal Support	密封蓋	1
61	U13018	Screw (M3-0.5x5)	螺絲	4
62	H09062	Screw(M2-0.4 x 8.5)	螺絲	2
63	F90001	Top Feed Dog	上送齒	1
64	R90101	Top Feed Dog	上送齒	1
65	R90201	Top Feed Dog	上送齒	1
66	E11033	Screw (M2.5-0.45x5)	螺絲	1
67	R90001	Top Feed Dog, C. Set	上送齒組	1
68	C02021	Screw(M6-1×6)	螺絲	2
69	H09069	Guide Bracket	導向支架	1
70	H09070	Top Feed Dog Bar Guide (Right)	上送桿檔板 (右)	1
71	H09071	Top Feed Dog Bar Guide (Left)	上送桿檔板 (左)	1
72	C06037	Screw(M4-0.7×14)	螺絲	2

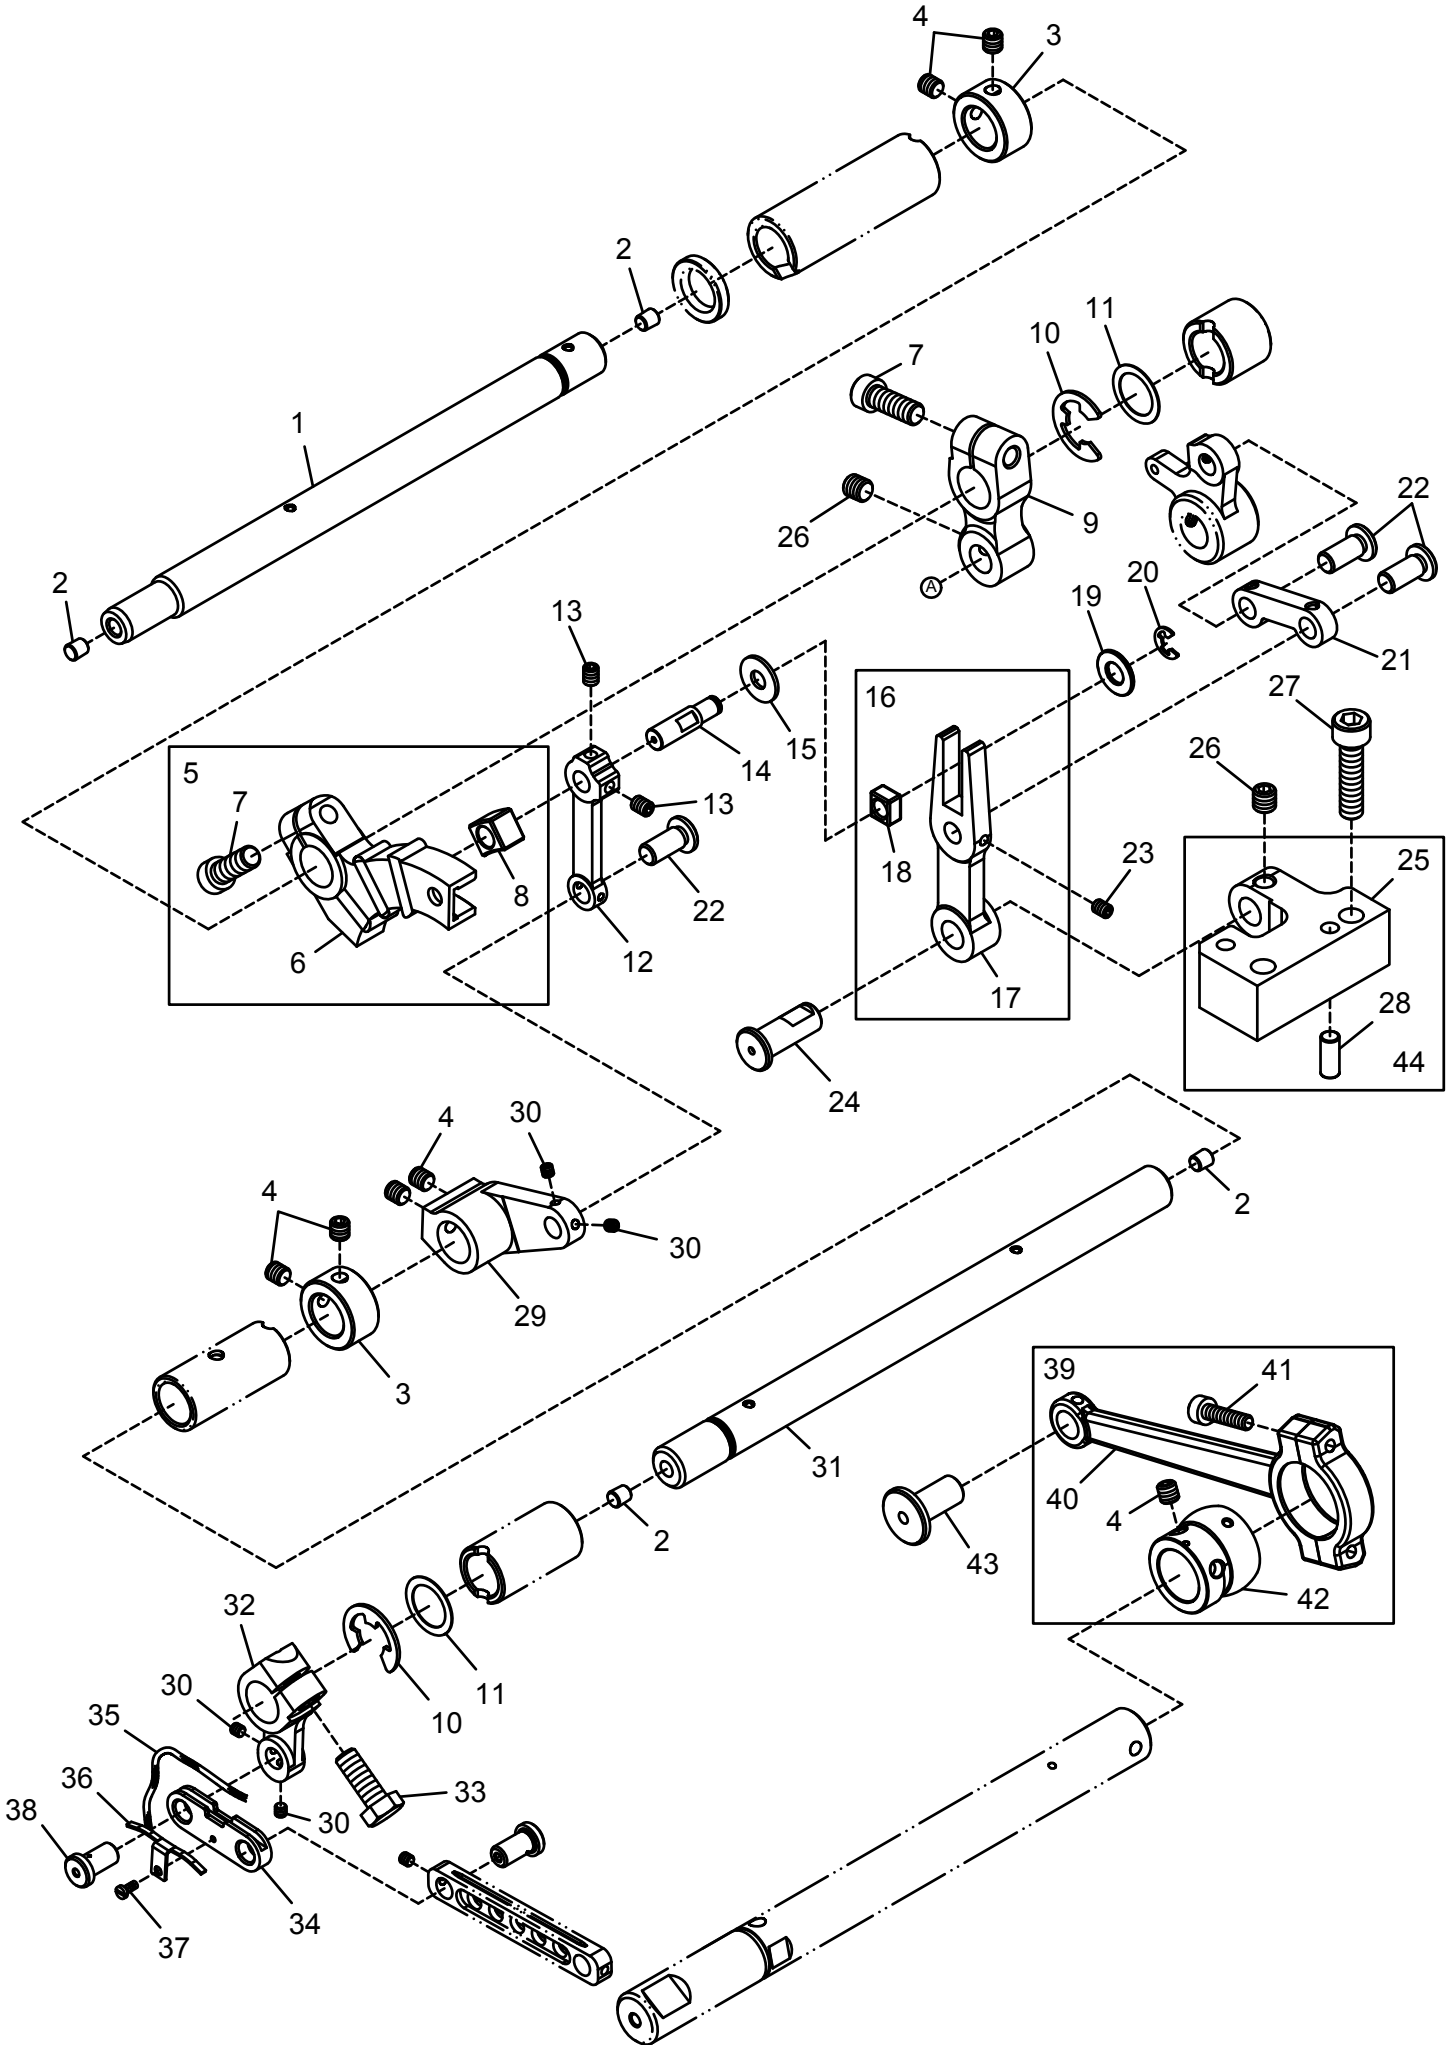


TOP FEED ROCKER MECHANISM

上進給搖桿機構


10

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	H10001	Top Feed Rocker Drive Shaft	上送搖擺驅動軸	1
2	C10046	Seal Plug	油塞	4
3	H09014	Collar(12×20×10mm)	軸環	2
4	A0403	Screw (M5-0.8x5)	螺絲	8
5	H10005	Top Feed Arm, Complete Set	上送料調節臂組	1
6	H10006	Top Feed Regulator Arm	進料調節臂	1
7	C06040	Screw(M6-1×16)	螺絲	2
8	H10008	Slider	滑塊	1
9	H10009	Rocker Shaft Lever	搖臂軸槓桿	1
10	C21008	Retaining Ring	E型扣環	2
11	H09017	Thrust Plate	止推板	2
12	H10012	Top Feed Rocker Arm Link	上送料搖臂連桿	1
13	C02026	Screw (M4-0.7x4)	螺絲	2
14	H10014	Slider Pin	滑塊銷	1
15	H10015	Spacer	墊片	1
16	H10016	Slider Lever, C. Set	滑塊桿組	1
17	H10017	Slider Lever	滑塊桿	1
18	H10018	Slider Lever Block	滑塊	1
19	H10019	Spacer	墊片	1
20	H10020	Retaining Ring	E型扣環	1
21	H10021	Slider Link	滑塊連接塊	1
22	H10022	Link Pin	連接銷	3
23	C28034	Screw(M3.5-0.6x4.5)	止付螺絲	1
24	H10024	Slider Lever Pin	滑塊連桿銷	1
25	H10025	Slider Lever Holder	搖桿支撐座	1
26	C02021	Screw(M6-1×6)	螺絲	2
27	H10027	Screw(M6-1 x 30)	螺絲	2
28	C23002	Pin	梢	2
29	H10029	Top Feed Rocker Arm(Right)	上送料搖臂(右)	1
30	C01014	Screw (M3-0.5x3)	螺絲	4
31	H10031	Top Feed Rocker Shaft	上送前後進給軸	1
32	H10032	Top Feed Rocking Arm	上送料搖臂	1
33	H09020	Screw(M6-1x16)	螺絲	1
34	H09022	Rocking Arm Link	搖臂連桿	1
35	H09023	Oil Wick	油芯	1
36	H09024	Oil Wick Presser	油芯壓片	1
37	U03025	Screw (M2-0.4x3.5)	螺絲	1
38	H09026	Link Pin	連結銷	1
39	H10039	Driving Connecting Rod, C. Set	驅動連桿組	1
40	H10040	Driving Connecting Rod	驅動連桿	1
41	C07025	Screw (M4-0.7x16)	螺絲	2
42	H10042	Top Feed Eccentric	偏心輪	1
43	H10043	Top Feed Dog Link Pin	連接銷	1
44	H10044	Slider Lever Holder, C. Set	搖桿支撐座組	1

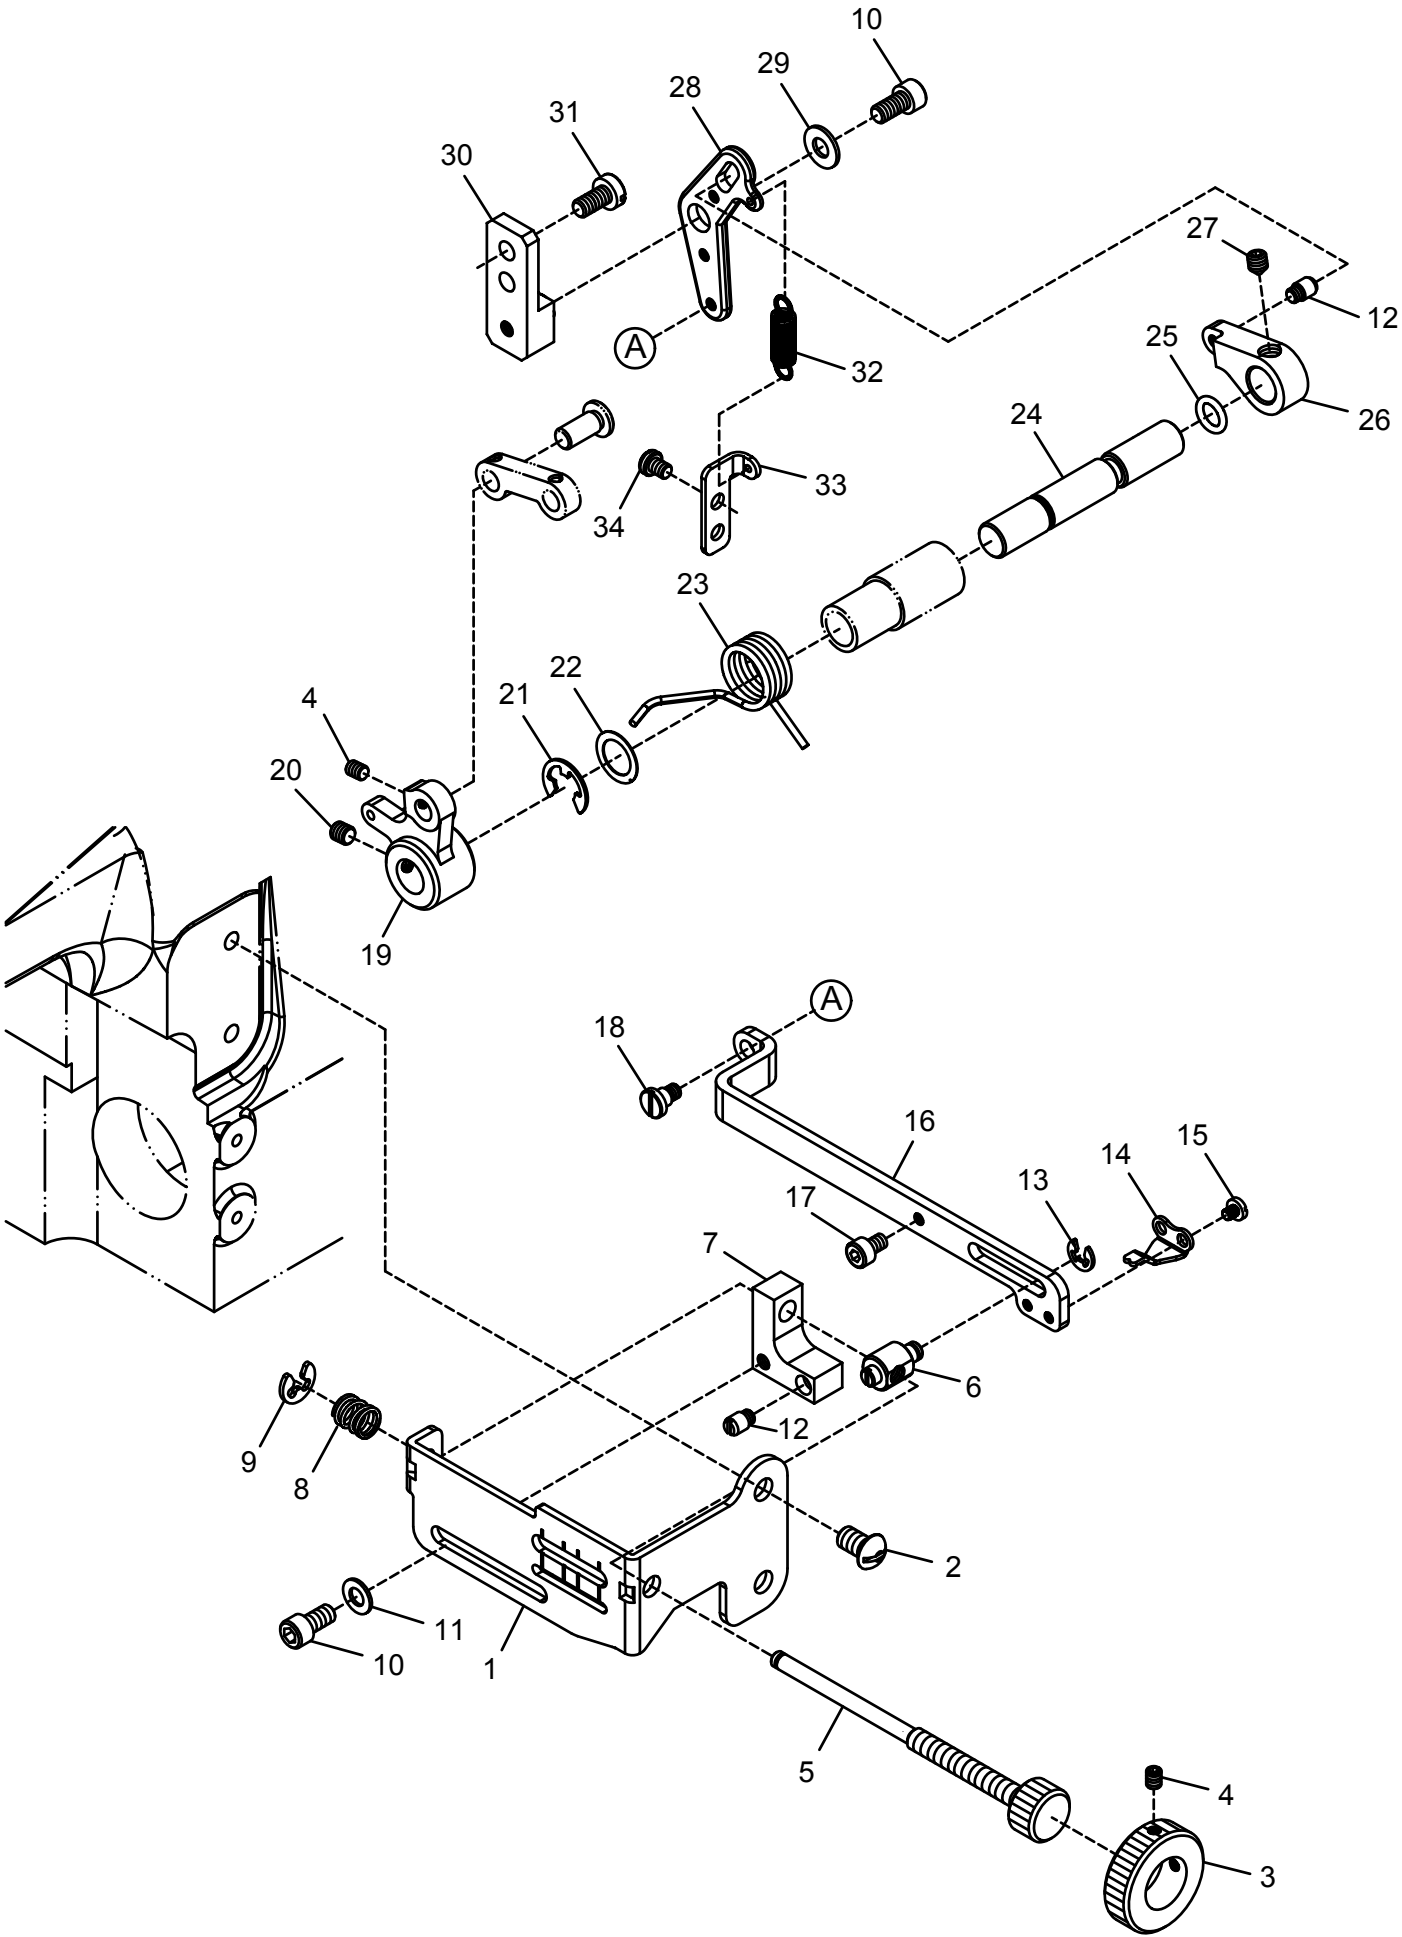


TOP FEED DIFFERENTIAL MECHANISM**上送進給差動機構****11**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	H11001	Differential Feed Graduation	上送進給刻度盤	1
2	H11002	Screw(M6-1 x 10)	螺絲	2
3	H11003	Adjusting Knob	調節旋鈕	1
4	C02026	Screw (M4-0.7x4)	螺絲	3
5	H11005	Adjusting Screw	調節螺絲	1
6	H11006	Adjusting Pin	調節銷	1
7	H11007	Stop Block	限位塊	1
8	C11042	Spring	彈簧	1
9	H11009	Retaining Ring	E型扣環	1
10	B1402	Screw (M5-0.8x10)	螺絲	2
11	B2524	Washer	墊片	1
12	H11012	Screw Pin(M4-0.7 x 3)	螺絲	2
13	C11044	Retaining Ring	固定環	1
14	H11014	Differential Feed Pointer	移動量指針	1
15	C02049	Screw(M3-0.5x3.5)	螺絲	2
16	H11016	Adjusting Outer Link	上送調整連桿	1
17	C03041	Screw (M4-0.7x6)	螺絲	1
18	C03044	Screw(M4-0.7×4)	螺絲	1
19	H11019	Slider Link Lever	滑塊連桿	1
20	A0403	Screw (M5-0.8x5)	螺絲	2
21	C21022	Retaining Ring	E型扣環	1
22	H11022	Thrust Plate	墊片	1
23	H11023	Adjusting Lever Spring	調節桿彈簧	1
24	H11024	Adjusting Shaft	前後調節軸	1
25	H11025	O-ring(P7)	O型環	1
26	H11026	Top Feed Dog Adjusting Lever	上送齒調節桿	1
27	H11027	Screw(M5-0.8 x 6)	止付螺絲	1
28	H11028	Adjusting Lever Hinge	調節板	1
29	A0808	Washer	墊片	1
30	H11030	Hinge Holder	鉸鏈座	1
31	C07012	Screw(M5-0.8×10)	螺絲	2
32	H11032	Spring	彈簧	1
33	H11033	Spring Latch	彈簧吊架	1
34	C02044	Screw (M4-0.7x5)	螺絲	2

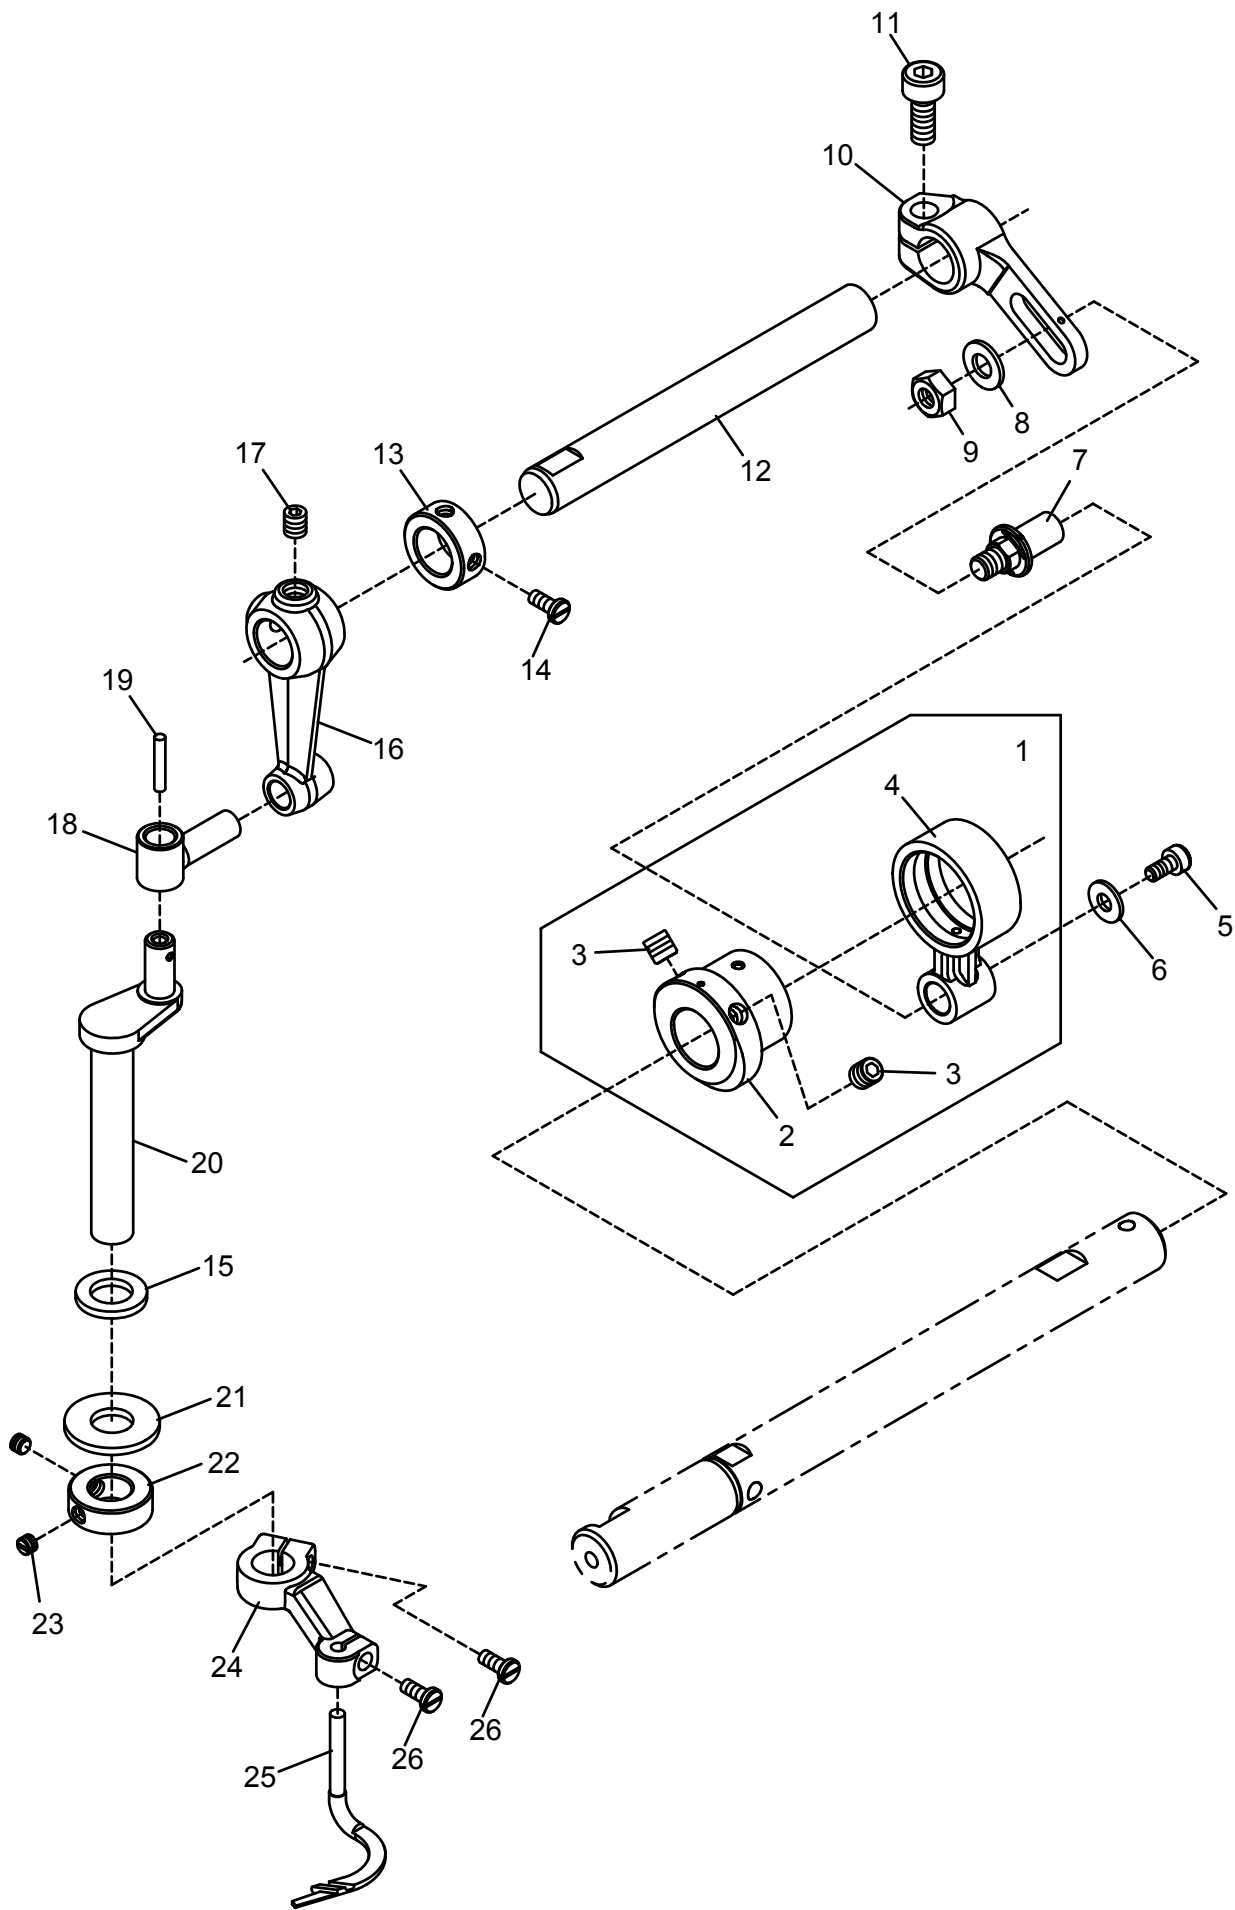

SPREADER MECHANISM**上飾線驅動機構****12**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C09001	Spreader Eccentric, C. Set	偏心輪組	1
2	C09002	Spreader Eccentric	偏心輪	1
3	C05021	Screw(M5-0.8x6)	止付螺絲	2
4	C09004	Spreader Connecting Rod	連桿	1
5	C02017	Screw (M4-0.7x8)	螺絲	1
6	C09006	Washer	墊片	1
7	C09007	Adjusting Lever Pin	拉柄可調式插銷	1
8	B2522	Washer	墊片	1
9	C09009	Nut	螺帽	1
10	C09010	Spreader Adjusting Lever	可調式拉柄	1
11	C06040	Screw(M6-1×16)	螺絲	1
12	C09012	Driving Shaft	主動軸	1
13	C09013	Collar(12×20×8mm)	軸環	1
14	A0814	Screw (11/64-40x5.8)	螺絲	2
15	C06041	Washer	墊片	1
16	C09016	Rocking Arm	搖臂	1
17	C02021	Screw(M6-1×6)	螺絲	2
18	C09018	Rocking Pin	支點銷	1
19	C09019	Oil Wick(Ø3.3×15mm)	油芯	1
20	C09020	Spreader Bar	延展臂	1
21	C09021	Bushing Ring	襯環	1
22	C09122	Collar(10×18×7mm)	軸環	1
23	C02026	Screw (M4-0.7x4)	螺絲	2
24	C09024	Spreader Holder	上勾固定座	1
25	H12025	Spreader	上勾	1
26	C02031	Screw(M4-0.7×12)	螺絲	2

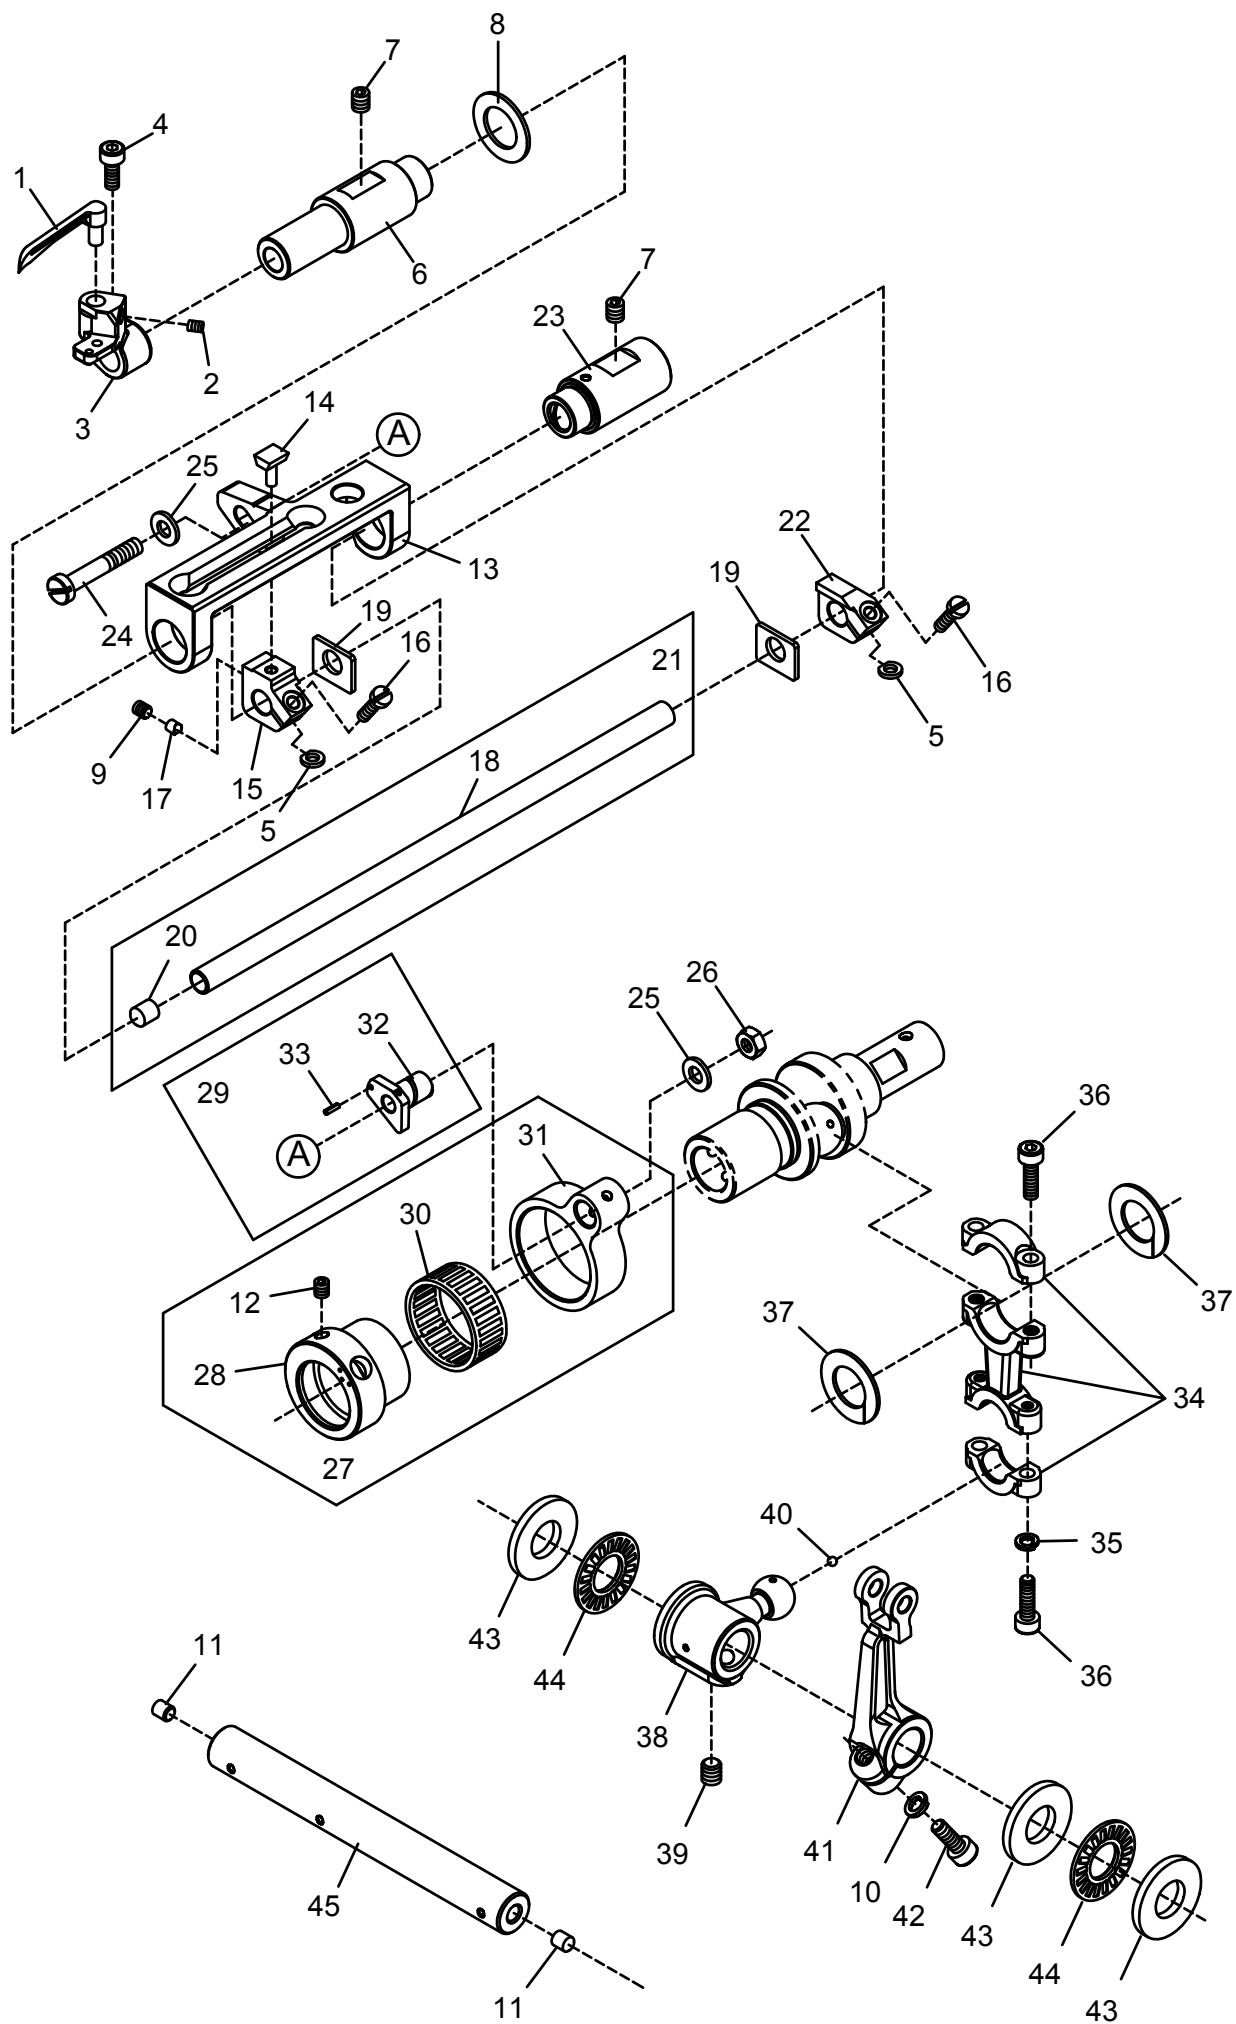


LOOPER DRIVING MECHANISM

下勾針驅動機構

13

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C10001	Looper	下勾針	1
2	C10002	Screw (M4-0.7x5)	螺絲	1
3	H13003	Looper Holder	下勾針座	1
4	H13004	Screw(M3.5-0.6 x 8)	螺絲	1
5	C10005	Spacer(Fiber)	墊片	2
6	H13006	Looper Bar Bushing(Left)	下勾針驅動軸襯套(左)	1
7	C10007	Screw (M6-1x8)	螺絲	2
8	E10008	Washer	墊片	1
9	C02026	Screw (M4-0.7x4)	螺絲	1
10	B1435	Spring Washer	彈簧墊片	1
11	C10046	Seal Plug	油塞	2
12	C05021	Screw(M5-0.8x6)	止付螺絲	1
13	E10013	Looper Bar Guide	下勾針驅動軸導槽	1
14	C10014	Slider	滑塊	1
15	C10015	Slider Holder	滑塊固定座	1
16	C10016	Screw(M3.5-0.6×12)	螺絲	2
17	C10017	Slider Presser	滑塊定位壓塊	1
18	C10018	Looper Bar	下勾針棒	1
19	C10019	Thrust Washer	止推墊片	2
20	C10020	Seal Plug	油塞	1
21	C10021	Looper Bar, C. Set	下勾針棒組	1
22	C10022	Slide Block	滑塊	1
23	C10023	Looper Bar Bushing(Right)	下勾針驅動軸襯套(右)	1
24	C10024	Screw(M5-0.8×35)	螺絲	1
25	C10025	Washer	墊片	2
26	C08048	Nut	螺帽	1
27	C10027	Looper Rocker Connecting Rod, C. Set	下勾針搖臂連桿組	1
28	C10028	Looper Rocker Regulating Eccentric	下勾針搖臂可調偏心輪	1
29	C10029	Looper Rocker Adjusting Pin, C. Set	下勾針搖臂調整插銷組	1
30	C10030	Rolling Bearing	滾珠軸承	1
31	C10031	Looper Rocker Connecting Rod	下勾針擦臂連桿	1
32	C10032	Looper Rocker Adjusting Pin	下勾針搖臂調整插銷	1
33	C10033	Spring Pin(Ø1.5×4mm)	插銷	1
34	C10034	Looper Connecting Rod	下勾針連桿	1
35	C10035	Spring Washer	彈簧墊片	2
36	C06037	Screw(M4-0.7×14)	螺絲	4
37	C10037	Connecting Rod Swing-proof	下勾針連桿止震片	2
38	C10038	Looper Driving Lever	下勾針驅動桿	1
39	C07013	Screw(M8-1.25×8)	螺絲	2
40	C10040	Seal Plug	油塞	1
41	C10041	Looper Rocker Arm	下勾針搖臂	1
42	C06040	Screw(M6-1×16)	螺絲	1
43	C10043	Thrust Washer	推力板	3
44	C10044	Thrust Roller Bearing	推力滾珠軸承	2
45	C10045	Looper Shaft	下勾針主軸	1

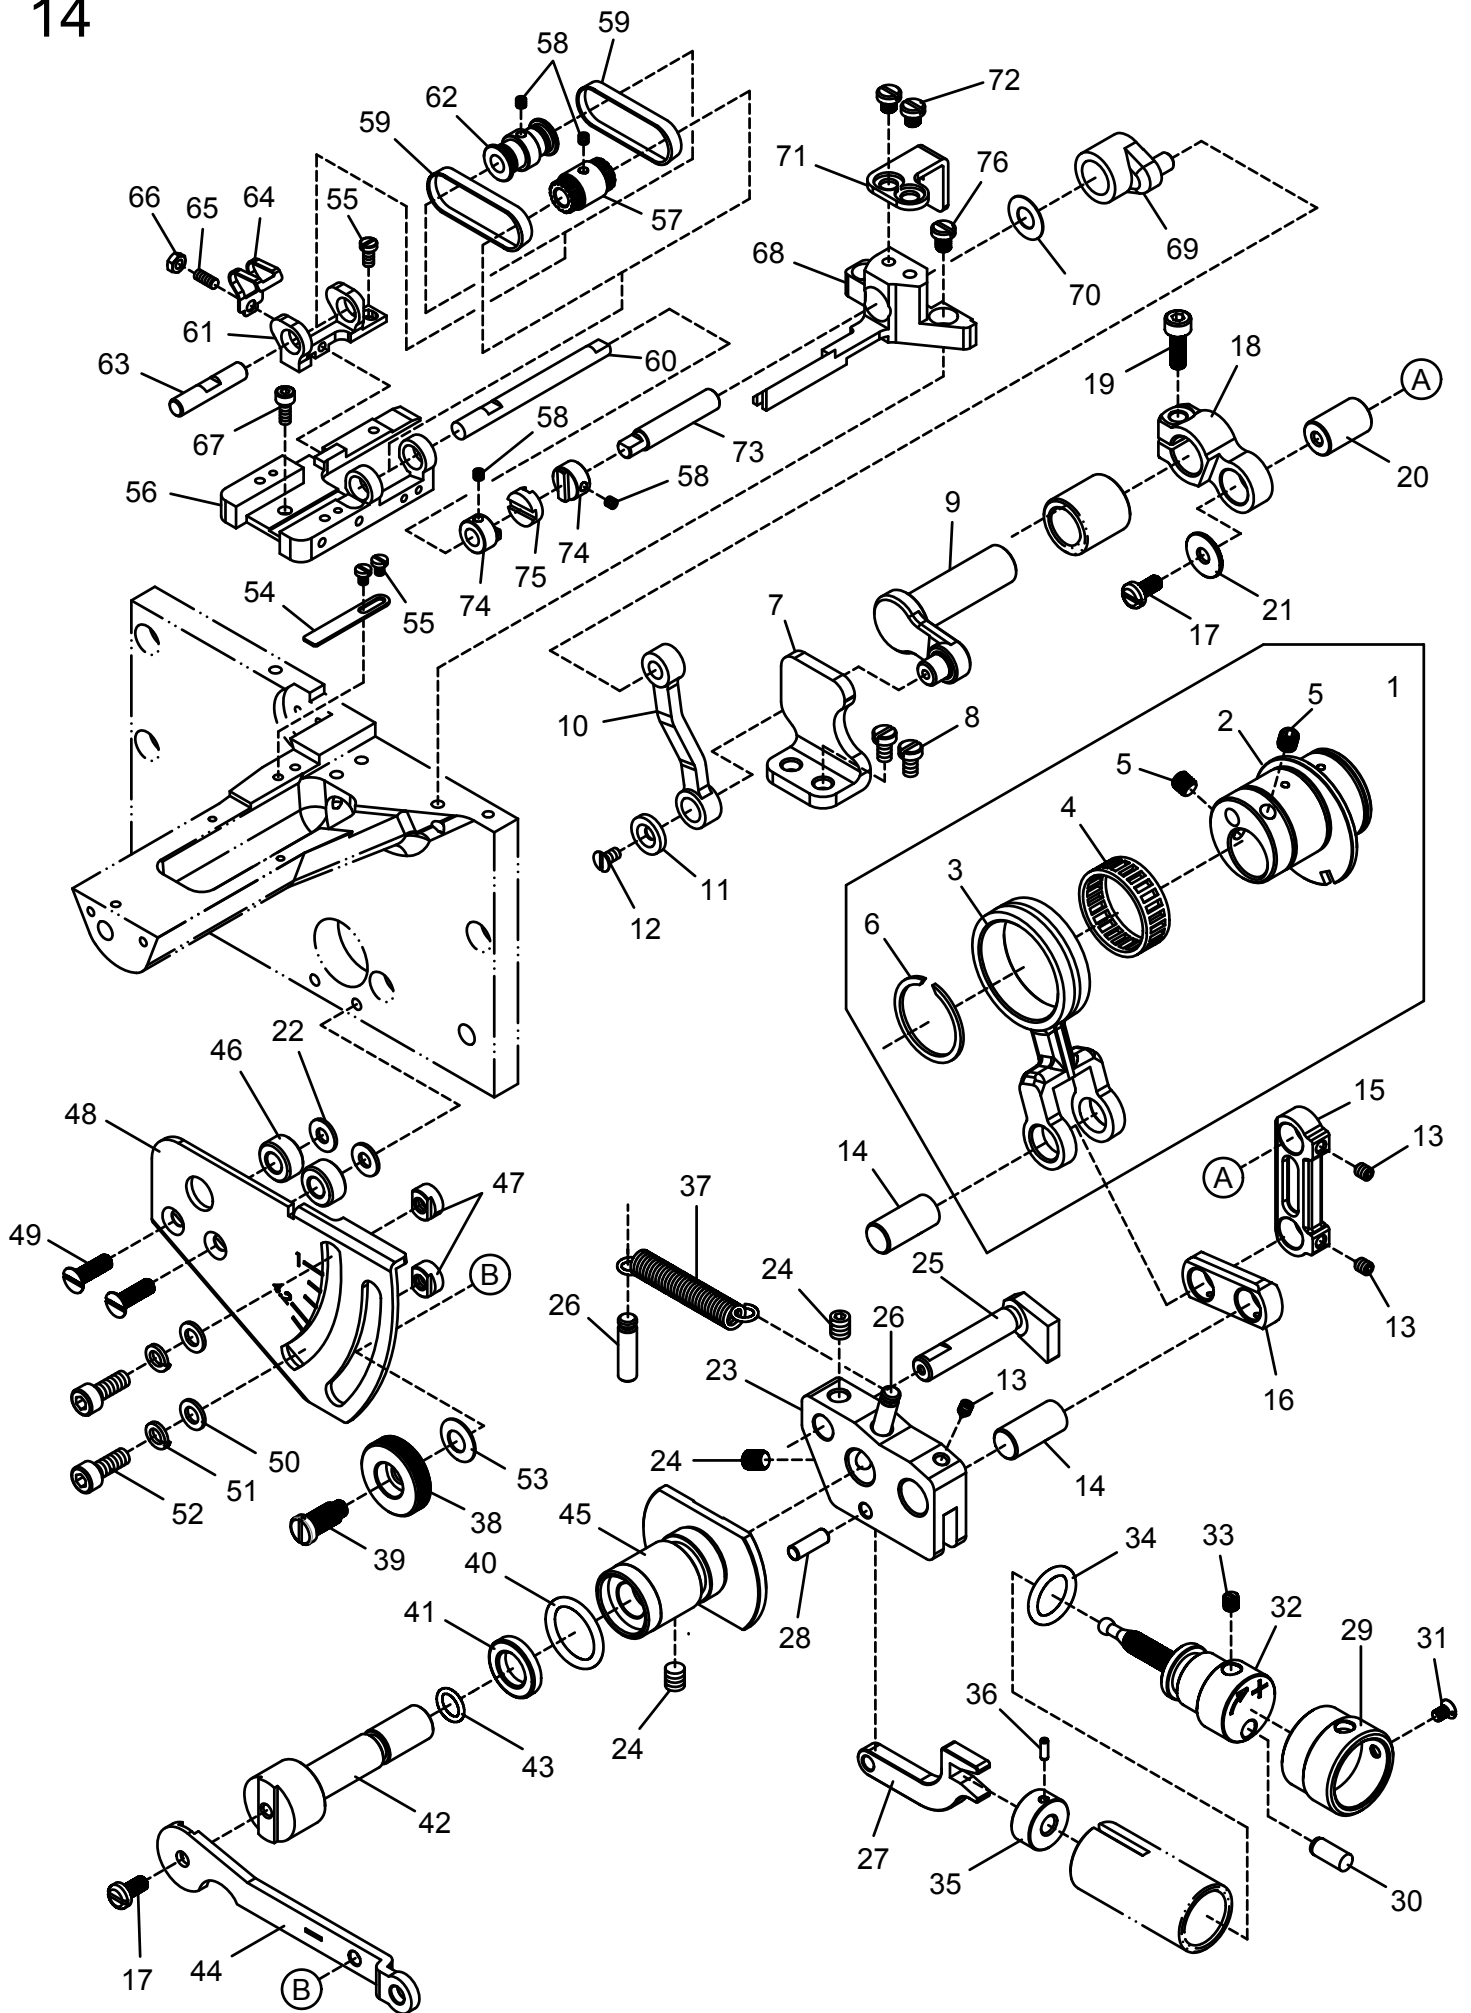


FEED DRIVING MECHANISM

送料具驅動機構

14


Ref.No	Parts.No	Description	品 名	Amt.Req.
1	H14001	Feed Lift Connecting Rod, C. Set	送料連桿組件	1
2	H14002	Main Feed Eccentric	送料偏心輪	1
3	E12003	Connectric Rod	連桿	1
4	C12015	Roller Bearing	滾珠軸承	1
5	C05021	Screw(M5-0.8x6)	止付螺絲	2
6	C12009	Retaining Ring	固定環	1
7	H14007	Outer Top Piece Of Tool Base	送具座外頂片	1
8	C02017	Screw (M4-0.7x8)	螺絲	2
9	H14009	Crank Shaft	送料曲柄軸	1
10	H14010	Link	連桿	1
11	H09006	Connecting Rod Pin Plate	連桿銷板	1
12	C02038	Screw(M3-0.5x6)	螺絲	1
13	C08057	Screw(M4-0.7x4)	止付螺絲	3
14	C12007	Feed Bar Connecting Rod Pin	連桿插銷	2
15	H14015	Link	連桿	1
16	H14016	Feed Bar Link(Short)	送料具連桿(短)	1
17	C01025	Screw (M4-0.7x8)	螺絲	2
18	E12018	Lever	曲柄	1
19	C11014	Screw(M5-0.8x12)	螺絲	1
20	E12020	Pin	梢	1
21	E12021	Washer	墊片	1
22	C03030	Washer	墊片	4
23	E12023	Main Feed Bar Bracket	送料調節座	1
24	C02021	Screw(M6-1x6)	螺絲	3
25	E12025	Guide	擋桿	1
26	C08045	Knock Pin(Ø5×20mm)	插銷	2
27	E12027	Link	頂桿	1
28	E12028	Pin	梢	1
29	E12029	Knob	差動調節鈕	1
30	E12030	Pin	梢	1
31	E12031	Screw(M3-0.5x5)	螺絲	1
32	E12032	Stud	差動調節螺桿	1
33	C02026	Screw (M4-0.7x4)	螺絲	1
34	C10012	O-ring(P12)	O型環	1
35	E12035	Nut	螺帽	1
36	C05018	Spring Pin(Ø2×6mm)	固定銷	1
37	E12037	Spring	彈簧	1
38	E12038	Bushing	套筒	1
39	C11037	Screw(M6-1×8.5, M4.5-0.5×3)	螺絲	1
40	E12040	O-Ring(P16)	O形油環	1
41	E12041	Oil Seal	油封	1
42	E12042	Shaft	軸	1
43	E12043	O-Ring(P7)	O形油環	1
44	E12044	Differential Lever	差動調節桿	1
45	E12054	Lock Nut	固定螺帽	1
46	E12046	Spacer	隔環	2
47	C11045	Main Feed Lever Stopper	主送料拉柄固定子	2
48	E12048	Main Feed Graduations	主送料刻度板	1
49	E12049	Screw(M4-0.7x13)	螺絲	2
50	B2524	Washer	墊片	2

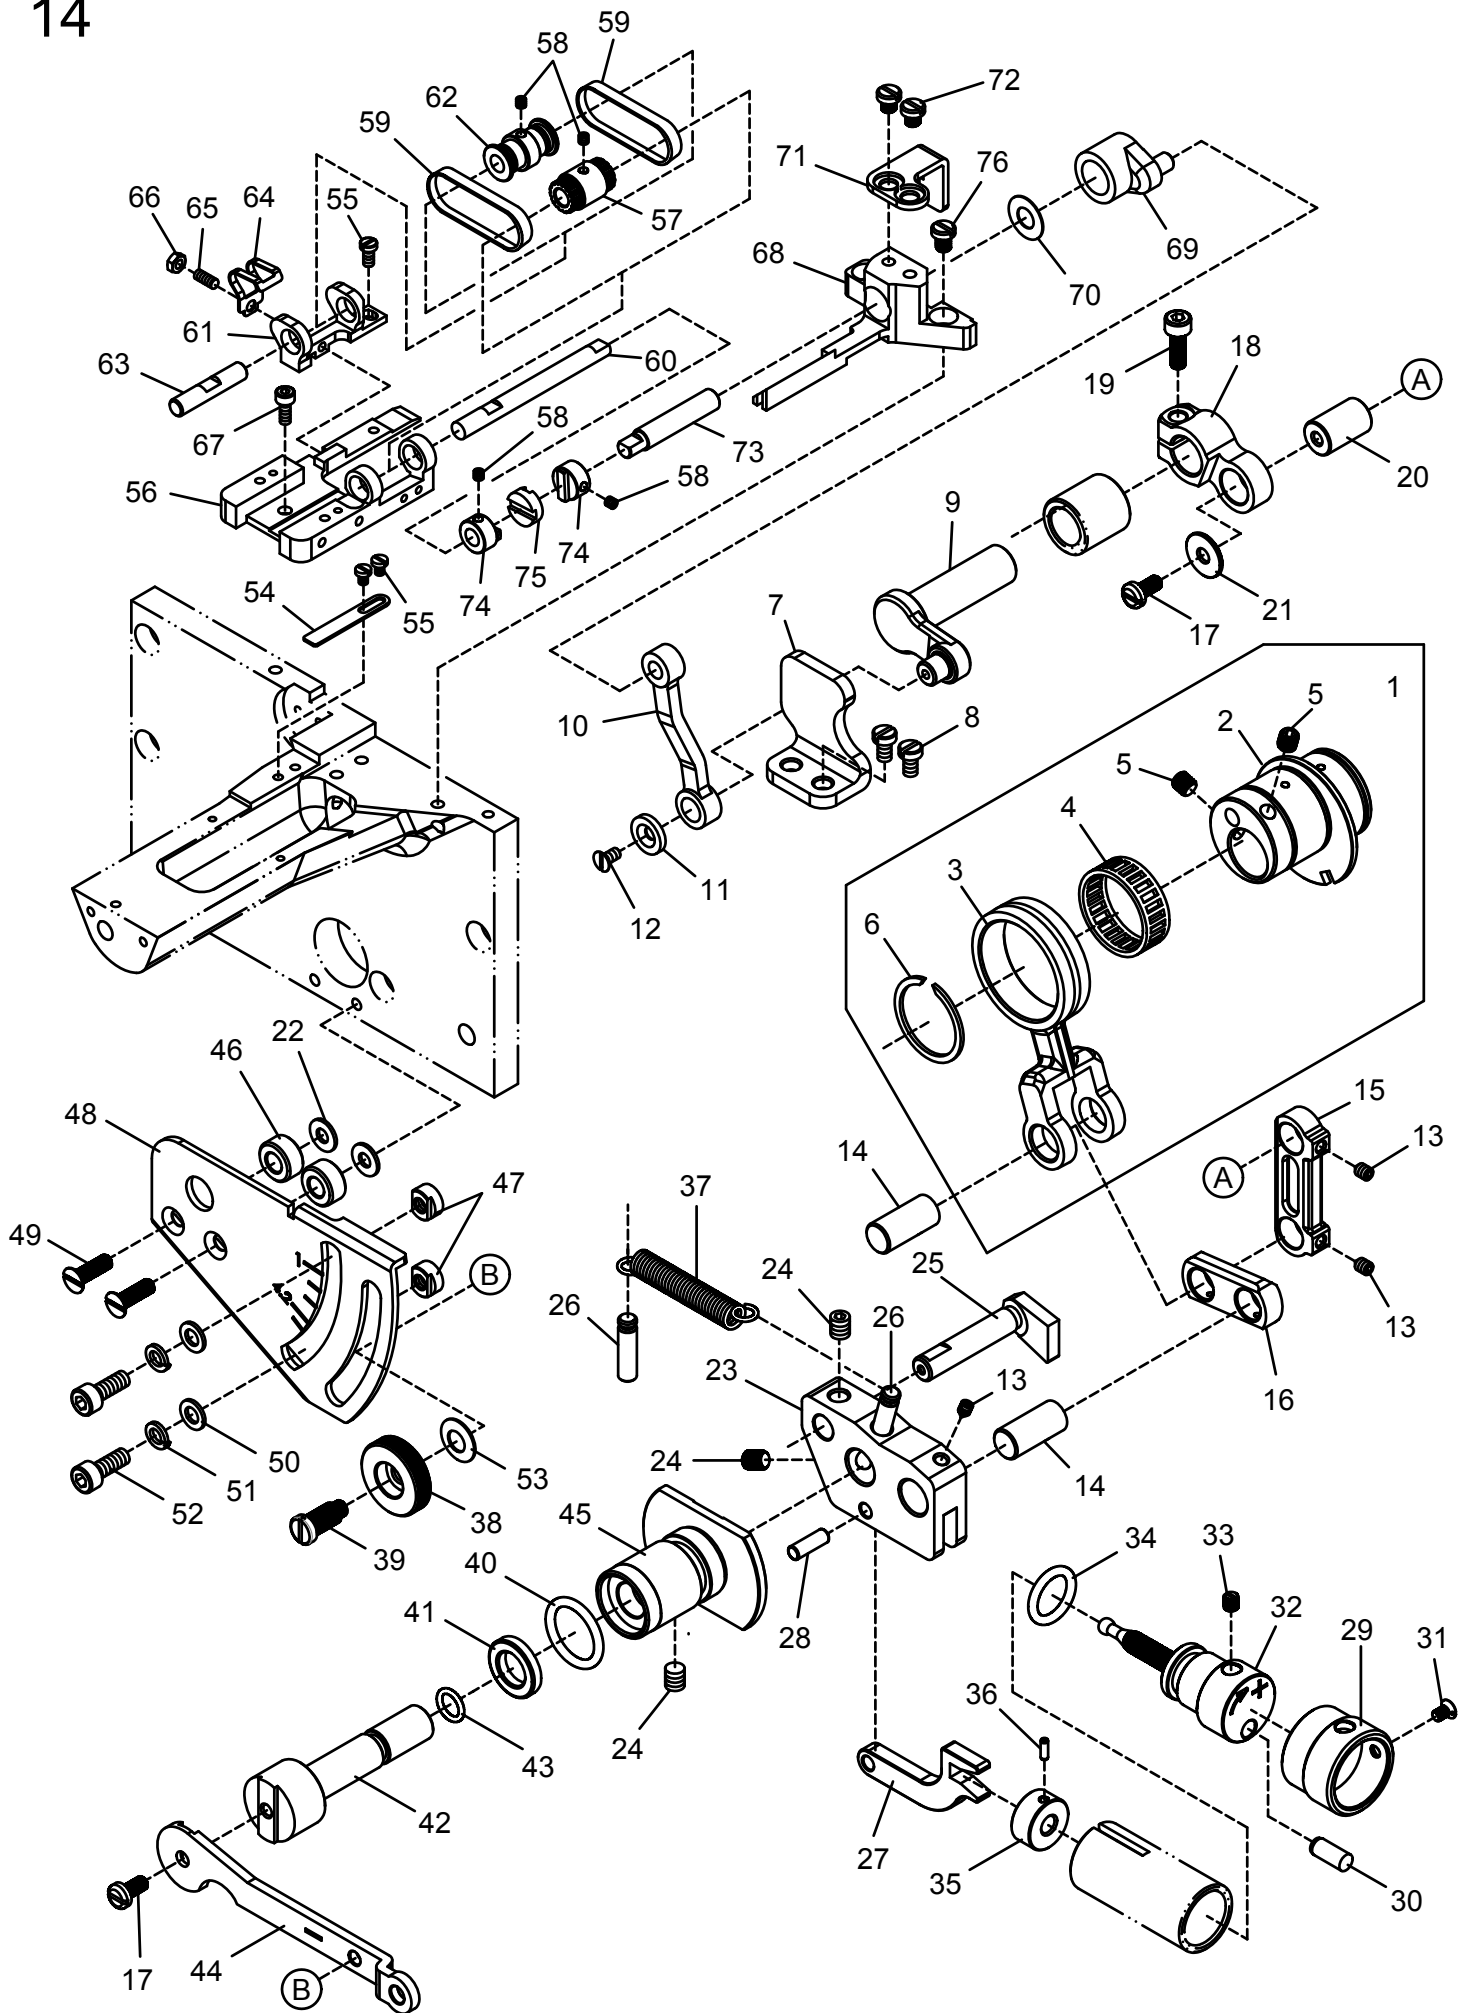

FEED DRIVING MECHANISM**送料具驅動機構****14**

Ref.No	Parts.No	Description	品 名	Amt.Req.
51	B1406	Spring Washer	彈簧墊片	2
52	C11048	Screw(M5-0.8×8)	螺絲	2
53	C11035	Conical Spring Washer	錐形彈簧墊圈	1
54	H14054	Leaf Spring	板片彈簧	1
55	C02049	Screw(M3-0.5x3.5)	螺絲	3
56	H14056	Feed Roller Base	送布輪底座	1
57	H14057	Roller ASSY.	滾輪組	1
58	C01014	Screw (M3-0.5x3)	螺絲	4
59	H14059	Belt	皮帶	2
60	H14060	Shaft	軸	1
61	H14061	Bracket ASSY.	支撐架	1
62	H14062	Roller	滾輪	1
63	H14063	Shaft	軸	1
64	H14064	Cover	護蓋	1
65	H14065	Screw(M3.5-0.6 x 6)	止付螺絲	1
66	H14066	Nut	螺帽	1
67	E02008	Screw(M3-0.5x8)	螺絲	1
68	H14068	Bracket ASSY.	支架	1
69	H14069	Crank ASSY.	曲柄	1
70	H14070	Washer	墊片	1
71	H14071	Stop Plate	擋板	1
72	E05027	Screw(M4-0.7x4.8)	螺絲	2
73	H14073	Shaft	軸	1
74	H14074	Joint	接頭	2
75	H14075	Transmission Joint	傳動接頭	1
76	C02041	Screw(M4-0.7×6)	螺絲	2

15

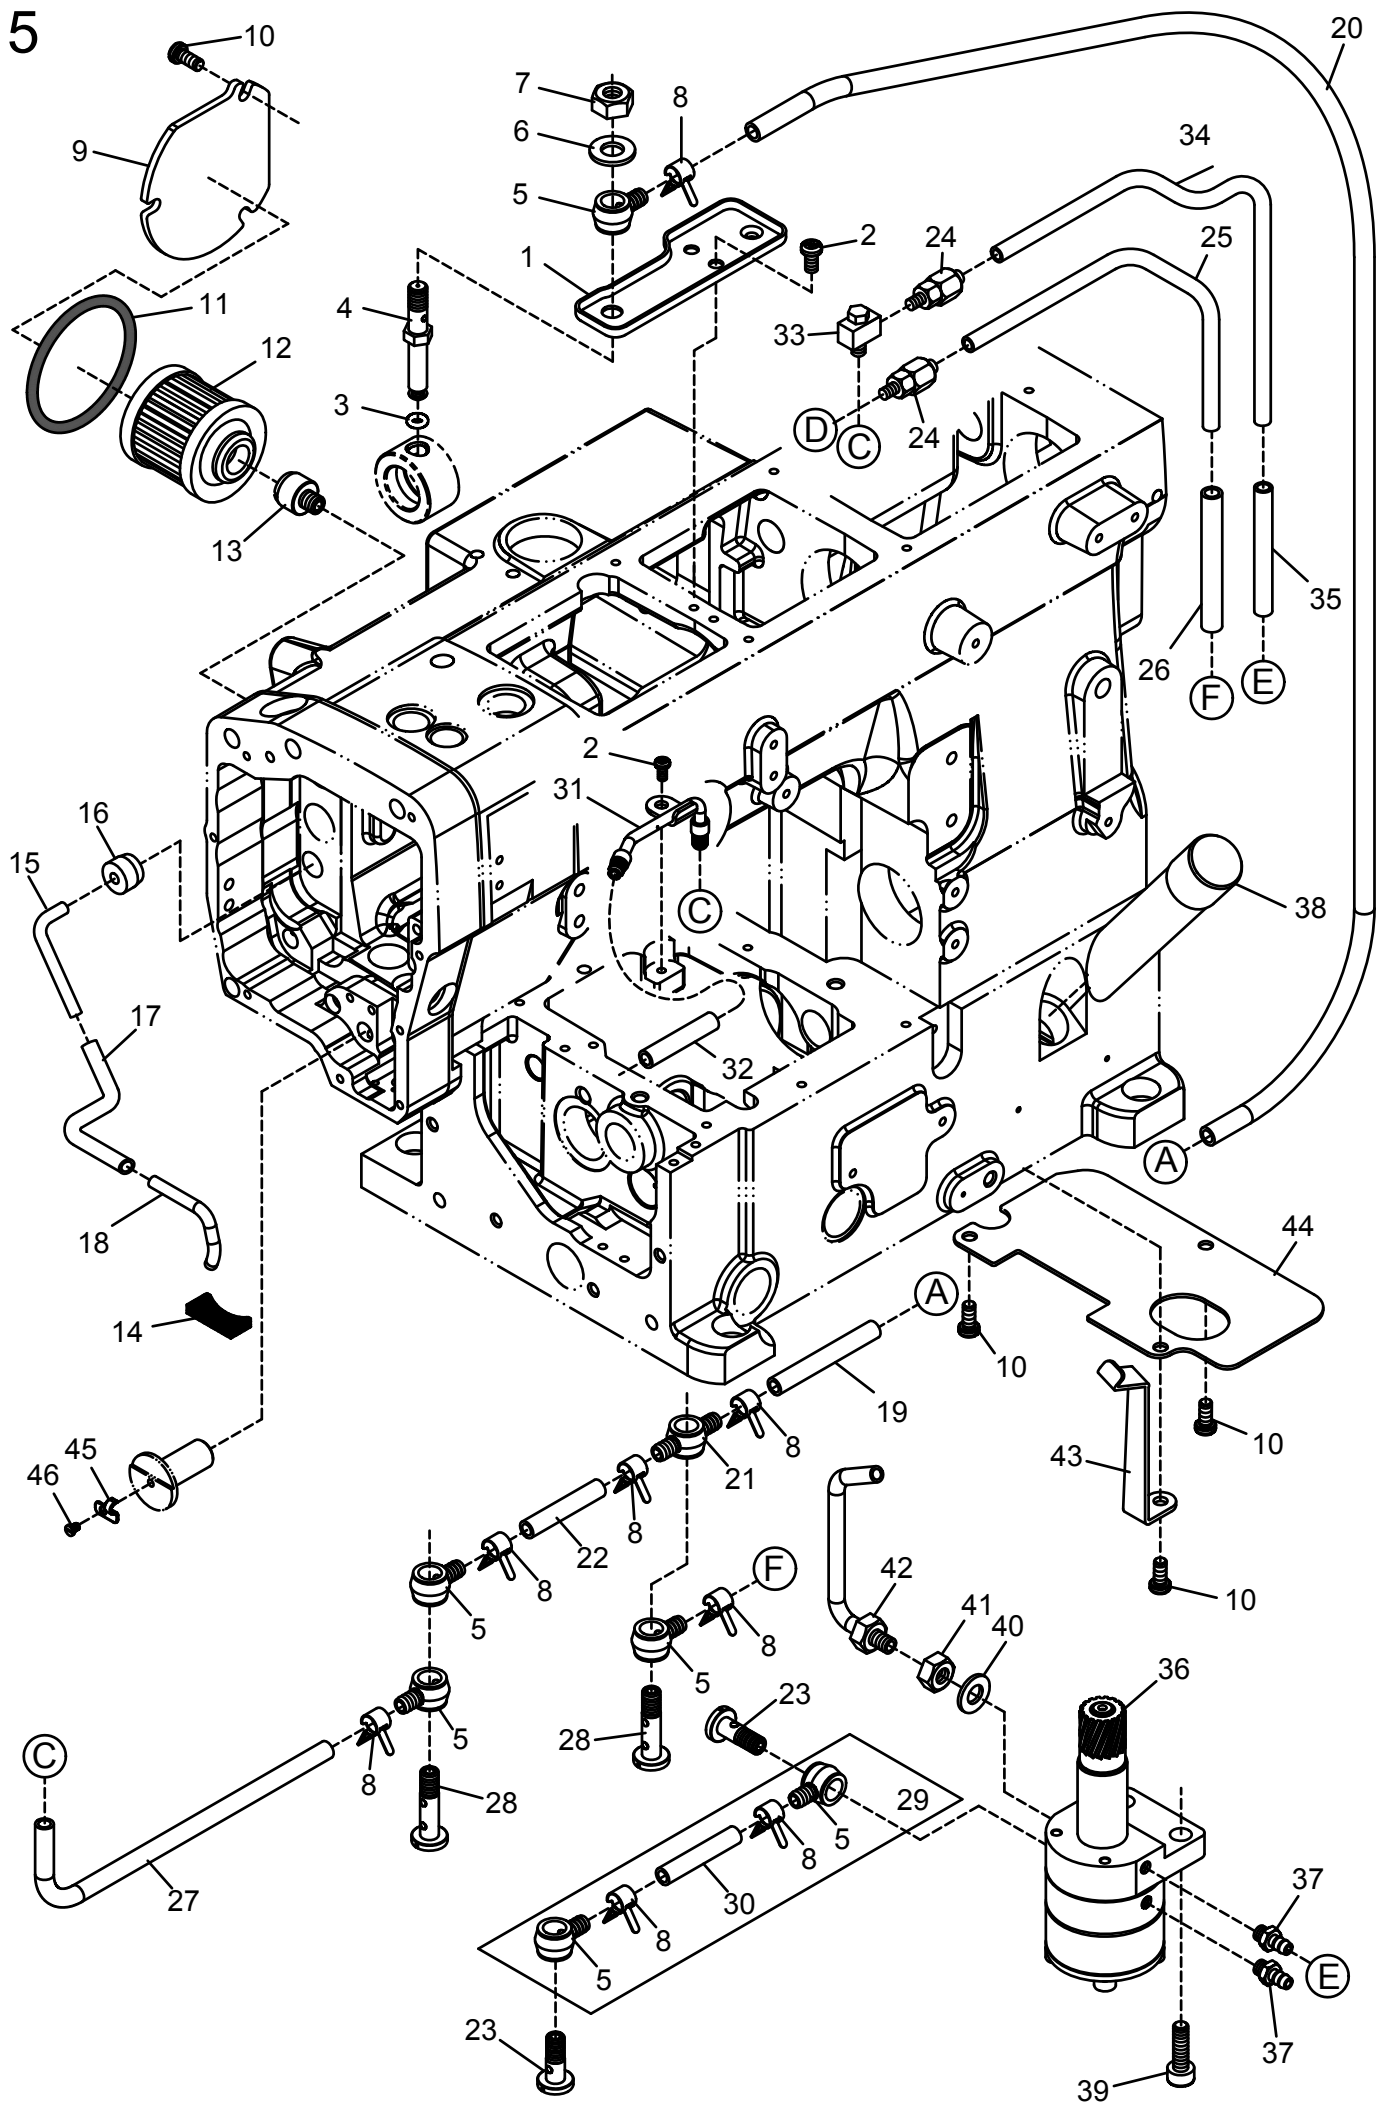


LUBRICATING MECHANISM

潤滑機構

15

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C13001	Oil Receiver	潤滑油接收盤	1
2	C02044	Screw (M4-0.7x5)	螺絲	3
3	C13003	O-ring(P3)	O型環	1
4	C13004	Oil Sight Top Nozzle	外視油管上噴嘴	1
5	C13005	Oil Tube Joint, One Way	油管接頭(單向)	6
6	C11035	Conical Spring Washer	錐形彈簧墊圈	1
7	C09009	Nut	螺帽	1
8	C13008	Oil Tube Clamp	緊束環	8
9	C13009	Oil Filter Cover	濾油器蓋	1
10	C01025	Screw (M4-0.7x8)	螺絲	6
11	C13011	O-ring(P42)	O型環	1
12	C13012	Oil Filter	濾油器	1
13	C13013	Oil Filter Connector	濾油器連接管	1
14	H15014	Felt	吸油棉	1
15	H15015	Suction Pipe	銅管	1
16	C13016	Suction Pipe Bushing	迴油管襯套	1
17	H15017	Oil Tube(3x5x47mm)	油管	1
18	H15018	Suction Pipe(Lower)	銅管	2
19	C13019	Oil Tube(2x4x35mm)	油管	1
20	C13020	Oil Tube(4x6x500mm)	油管	1
21	C13021	Oil Tube Joint, Two way	油管接頭(雙向)	1
22	C13022	Oil Tube(4x6x37mm)	油管	1
23	C13023	Fitting Stud(Short)	放油螺絲(短)	2
24	H15024	Connector(φ2.5-M5)	連接器	1
25	H15025	Oil Tube(2.5x4x470mm)	油管	1
26	H15026	Oil Tube(4x6x50mm)	油管	1
27	E13027	Oil Tube(4x6x110mm)	油管	1
28	C13028	Fitting Stud(Long)	放油螺絲(長)	2
29	C13029	Oil Tube(Short), Complete Set	油管組(短)	1
30	C13030	Oil Tube(4x6x31mm)	油管	1
31	E13031	Lower Shaft Oiling Shower	下軸噴油器	1
32	H15032	Oil Tube	油管	1
33	H15033	Universal Elbow(M5)	萬向接頭	1
34	H15034	Oil Tube(2.5x4x400mm)	油管	1
35	H15035	Oil Tube(3x5x30mm)	油管	1
36	C13036	Oil Pump, Complete Set	油泵組	1
37	C13018	Bamboo Joint	竹形接合螺絲	2
38	C13045	Oil Sight Gauge	外視油量計	1
39	C13039	Screw (M6-1x18)	螺絲	2
40	C13040	Seal	密合墊片	1
41	C08048	Nut	螺帽	1
42	C13042	Oil Nozzle for Worm Gear	驅動蝸齒組噴油嘴	1
43	C13043	Oil Tube Stay	油管固定架	1
44	C13044	Dust Proof Plate	防塵蓋	1
45	H15045	Suction Pipe Stay	油管支架	1
46	E11033	Screw (M2.5-0.45x5)	螺絲	1

1

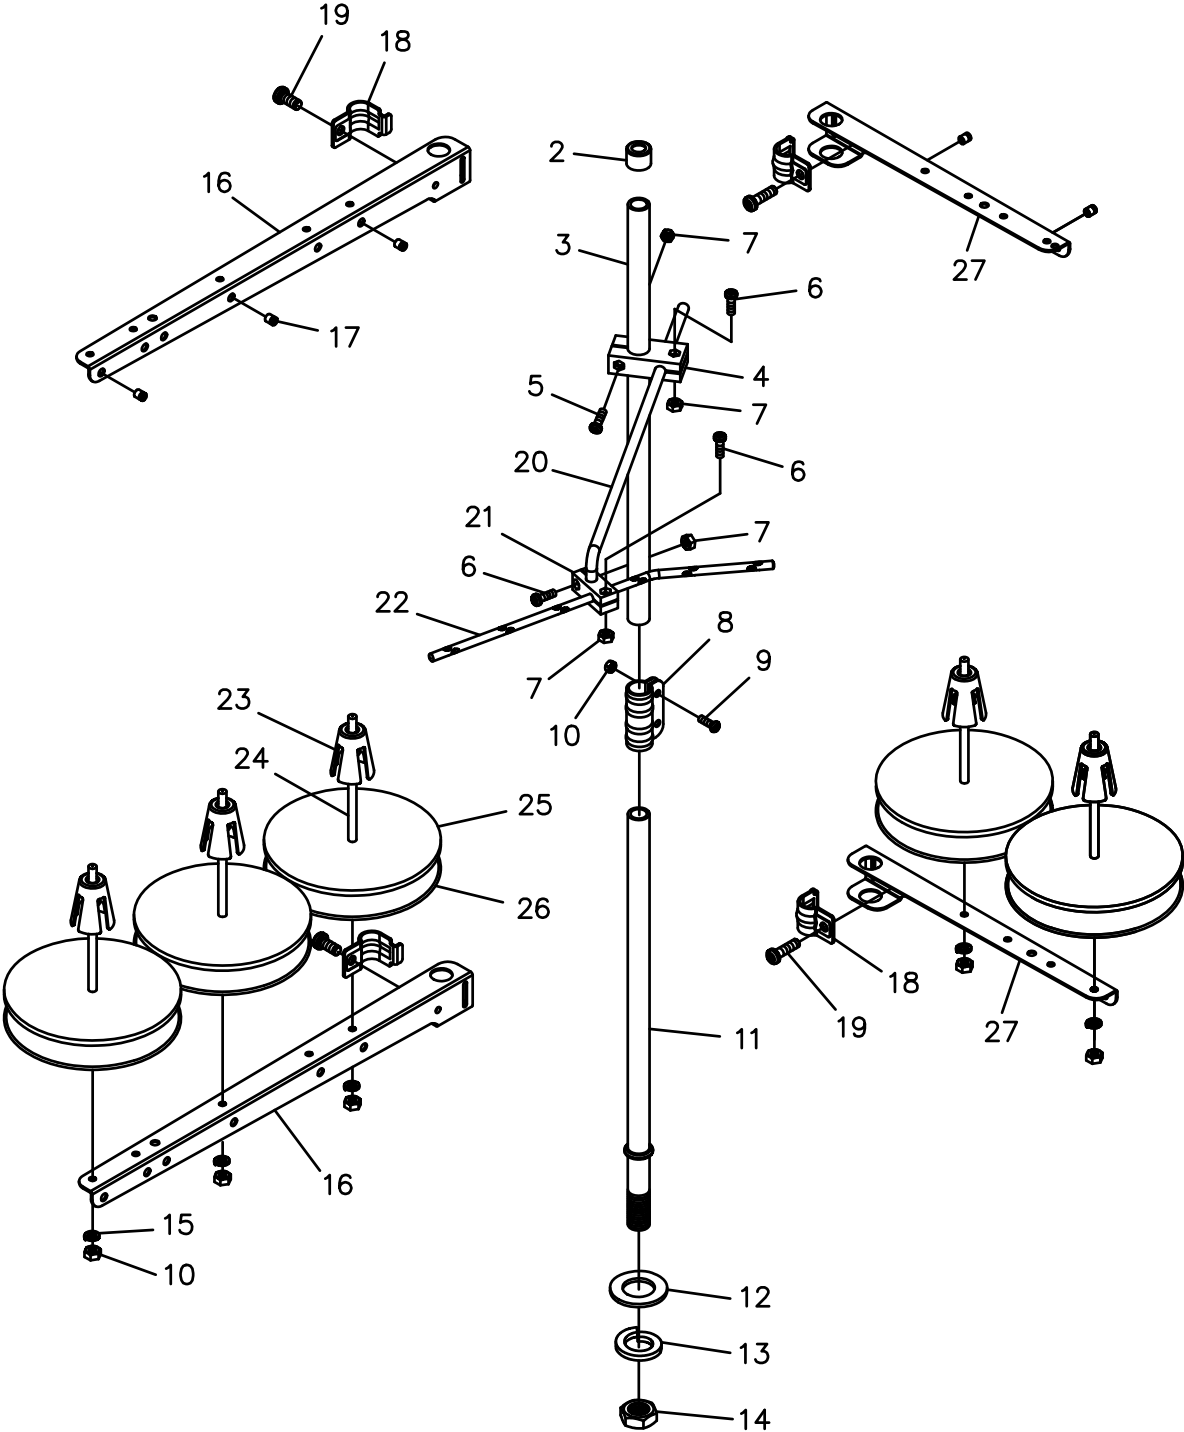


THREAD STAND

線架組


16

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C14001	Thread Stand, C. Set(5 Spools Type)	線架(五線用)	1
2	B16002	Column Cap	柱頭蓋	1
3	B16003	Column Pipe(Upper)	上線柱	1
4	B16004	Thread Guide Holder(Large)	過線桿固定座(大)	1
5	B16005	Screw(M4-0.7×20)	螺絲	1
6	B16006	Screw(M4-0.7×12)	螺絲	3
7	B16007	Nut	螺帽	4
8	B16008	Column Pipe Connector	線柱接頭	1
9	B16009	Screw(M5-0.8×13)	螺絲	2
10	B16010	Nut	螺帽	7
11	B16011	Column Pipe(Lower)	下線柱	1
12	B16012	Washer	墊片	1
13	B16013	Spring Washer	彈簧墊片	1
14	B16014	Nut	螺帽	1
15	B16015	Spring Washer	彈簧墊片	5
16	B16016	Thread Hanger(3 Spools Type)	3孔過線吊臂	2
17	B16017	Thread Eyelet	過線孔	5
18	B16018	Thread Hanger Holder	過線吊臂固定座	4
19	B16019	Screw(M6-1×15)	螺絲	4
20	B16020	Thread Guide Arm	過線桿連接臂	1
21	B16021	Thread Guide Holder(Small)	過線固定座(小)	1
22	B16022	Thread Guide	過線孔	1
23	B16023	Spool Cushion	線軸避震座	5
24	B16024	Spool Pin	線軸柱	5
25	B16025	Spool Mat	線軸墊	5
26	B16026	Spool Seat Disc	線軸底盤	5
27	C14027	Thread Hanger(2 Spools Type)	2孔過線吊臂	2

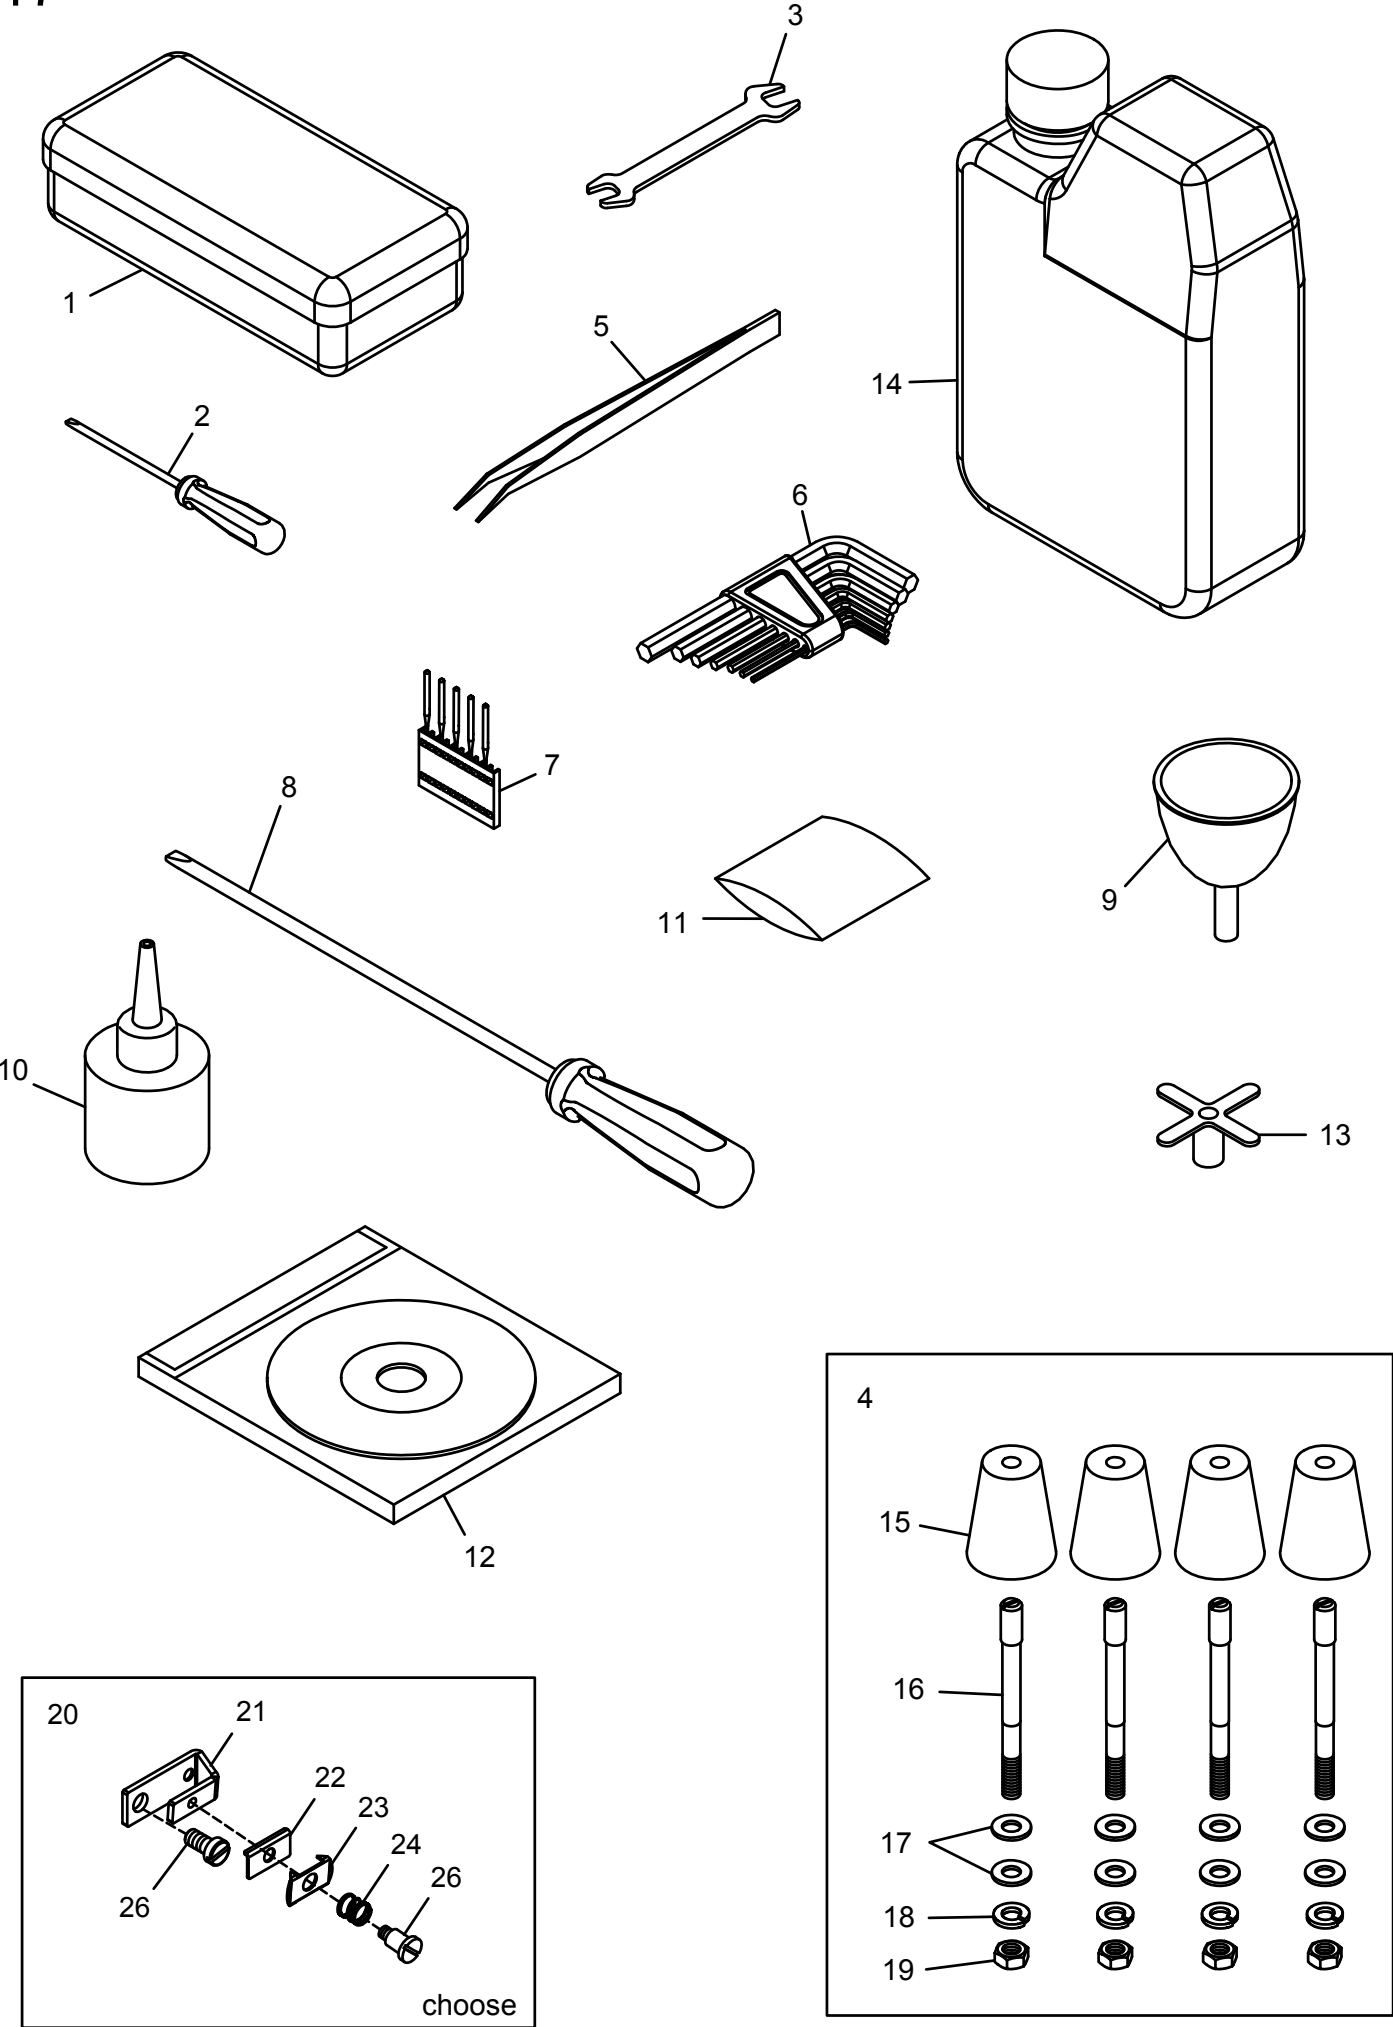


ACCESSORIES (1)**附件 (1)****17**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	B1501	Attachment Box	附件盒	1
2	B1502	Screwdriver	螺絲起子	1
3	B15104	Wrench (8mm-10mm)	板手 (8mm-10mm)	1
4	C15004	Supporting Board Rubber Cushion, C. Set	避震墊組	1
5	B1510	Thread Tweezers	穿線夾	1
6	C15006	Hexagonal Wrench, C. Set	六角板手組	1
7	C07006	Needle(UY×128 GAS)	針	5
8	B1505	Screwdriver	螺絲起子	1
9	B1521	Funnel	漏斗	1
10	B15120	Oiler	油壺	1
11	B1526	Drier	乾燥劑	1
12	A15012	CD	光碟	1
13	B15132	Stable Cap	穩定套	6
14	C15115	Oil	潤滑油	1
15	C37001	Oil Reservoir Rubber Cushion	集油器橡膠避震座	1
16	C37002	Setting Screw(M6-1×63)	安置螺絲	1
17	B2522	Washer	墊片	4
18	B1435	Spring Washer	彈簧墊片	4
19	C09009	Nut	螺帽	8
20	C15023	Needle Thread Retainer Support, C. Set	針線固定器支架組	4
21	C03017	Needle Thread Retainer Support	針線固定器支架	4
22	C07030	Needle Thread Guide	針線導板	2
23	C07031	Needle Thread Holder Stopper	針線限制支架	1
24	C03052	Looper Thread Retainer Spring	底線彈簧	1
25	C03056	Screw(M3x0.5x3)	螺絲	1
26	C02017	Screw (M4-0.7x8)	螺絲	1

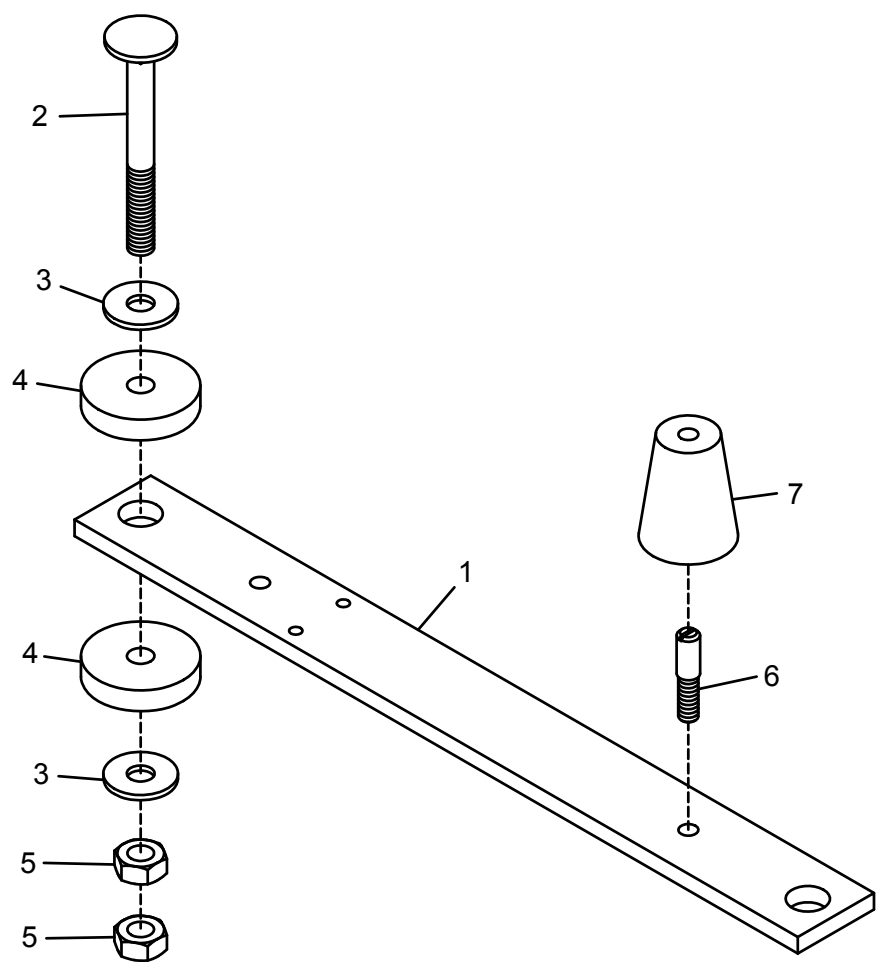


ACCESSORIES (2)**附件 (2)****18**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	C17001	Supporting Board	油槽支撐板	2
2	C17002	Screw (M8-1.25x75)	螺絲	4
3	C17003	Washer	墊片	8
4	C17004	Supporting Board Rubber Cushion	避震墊	8
5	B15130	Nut	螺帽	8
6	C37022	Setting Screw(M6-1×16)	安置螺絲	4
7	C37001	Oil Reservoir Rubber Cushion	集油器橡膠避震座	4

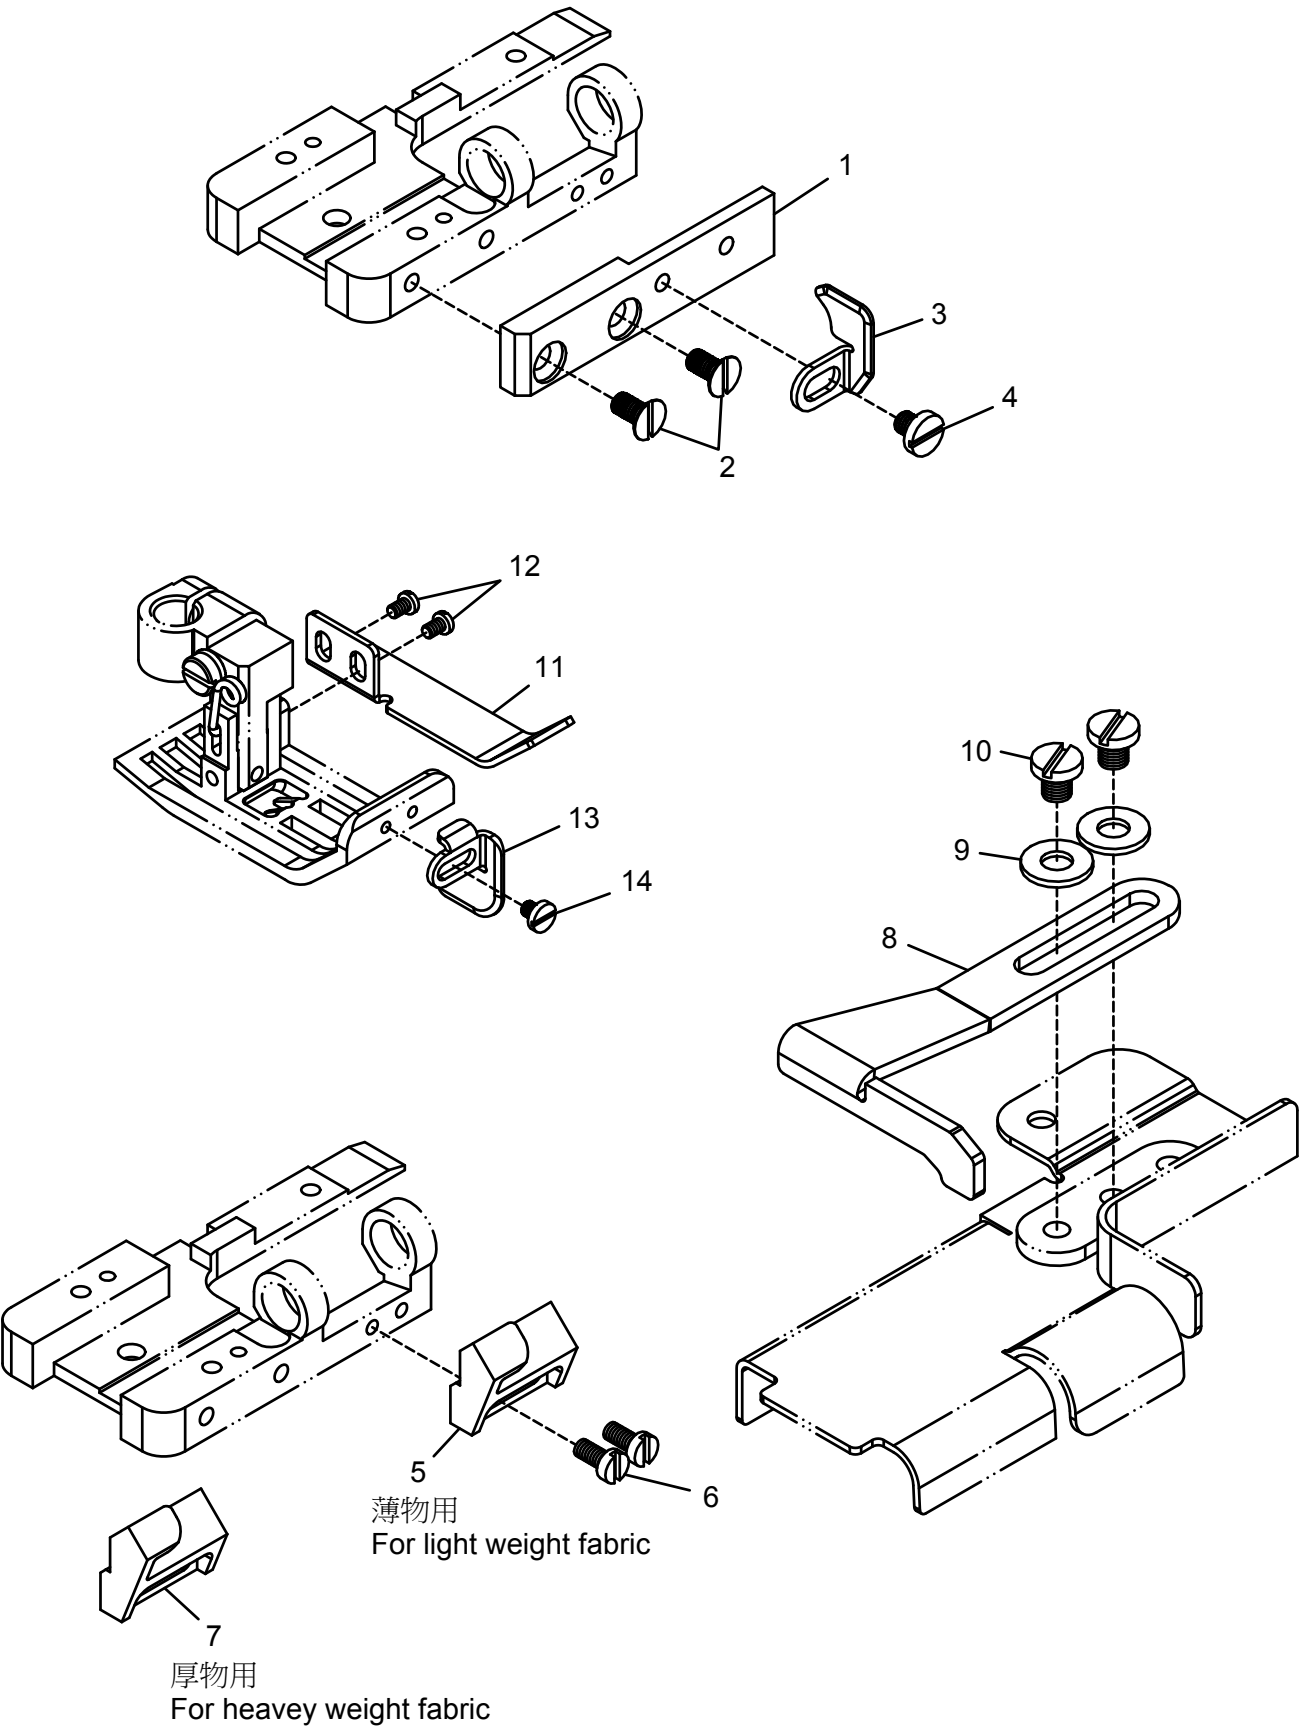


ACCESSORIES (3)**附件 (3)****19**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	H19001	Bracket	支架	1
2	C02038	Screw(M3-0.5×6)	螺絲	1
3	H19003	Fabric Guide(Left)	導布器(左)	1
4	C02049	Screw(M3-0.5×3.5)	螺絲	1
5	H19005	Fabric Guide(Left)	導布器(左)	1
6	U09022	Screw (M4-0.7×8)	螺絲	1
7	H19007	Fabric Guide(Left)	導布器(左)	5
8	H19008	Fabric Guide	導布板	1
9	B29020	Washer	墊片	1
10	C02041	Screw(M4-0.7×6)	螺絲	1
11	H19011	Fabric Guard	壓布板	1
12	C03049	Screw(M2.5-0.45×3.5)	螺絲	1
13	H19013	Fabric Guide	導布板	1
14	E11022	Screw(M2-0.4×3.5)	螺絲	1

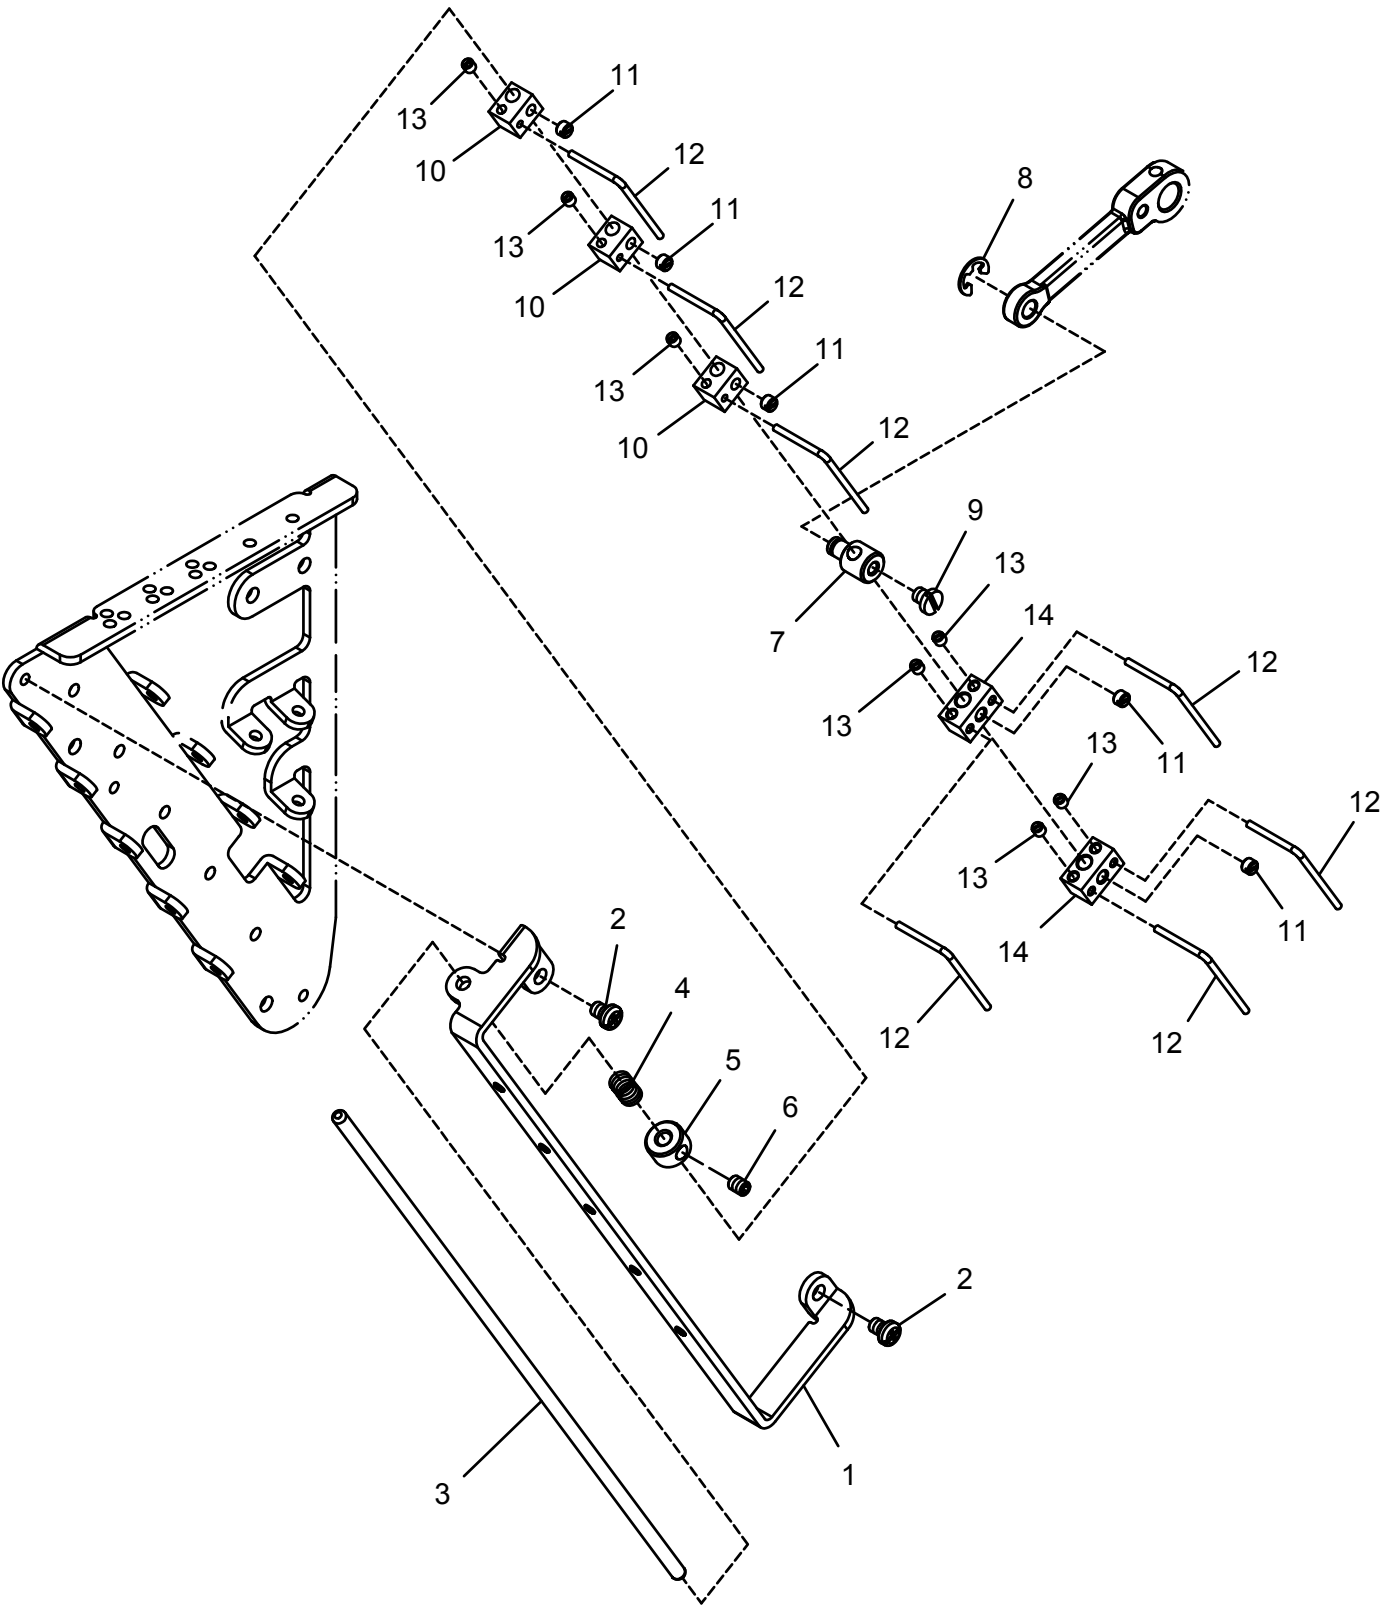


AUTO TRIMMER THREAD PULL-OFF MECHANISM**自動切線鬆線機構****20**

Ref.No	Parts.No	Description	品 名	Amt Req.
1	U01012	Thread Pull-off Eyelet	鬆線過線架	1
2	C02044	Screw (M4-0.7x5)	螺絲	2
3	U01013	Thread Pull-off Bar	鬆線控制桿	1
4	U01014	Swing-proof Spring	彈簧	1
5	U01015	Collar	軸環	1
6	C02026	Screw (M4-0.7x4)	螺絲	1
7	U01020	Thread Pull-off Bar Holder	鬆線桿固定座	1
8	U01022	Retaining Ring	E型扣環	1
9	U01021	Screw (M4-0.7x5)	螺絲	1
10	U01017	Thread Pull-off Hook	鬆線鉤固定座	3
11	U01018	Screw (M4-0.7x3)	螺絲	5
12	U01025	Thread Pull-off Bar	鬆線鉤	7
13	U01026	Screw (1/8-44x3)	螺絲	7
14	U01019	Thread Pull-off Hook	鬆線鉤固定座	2

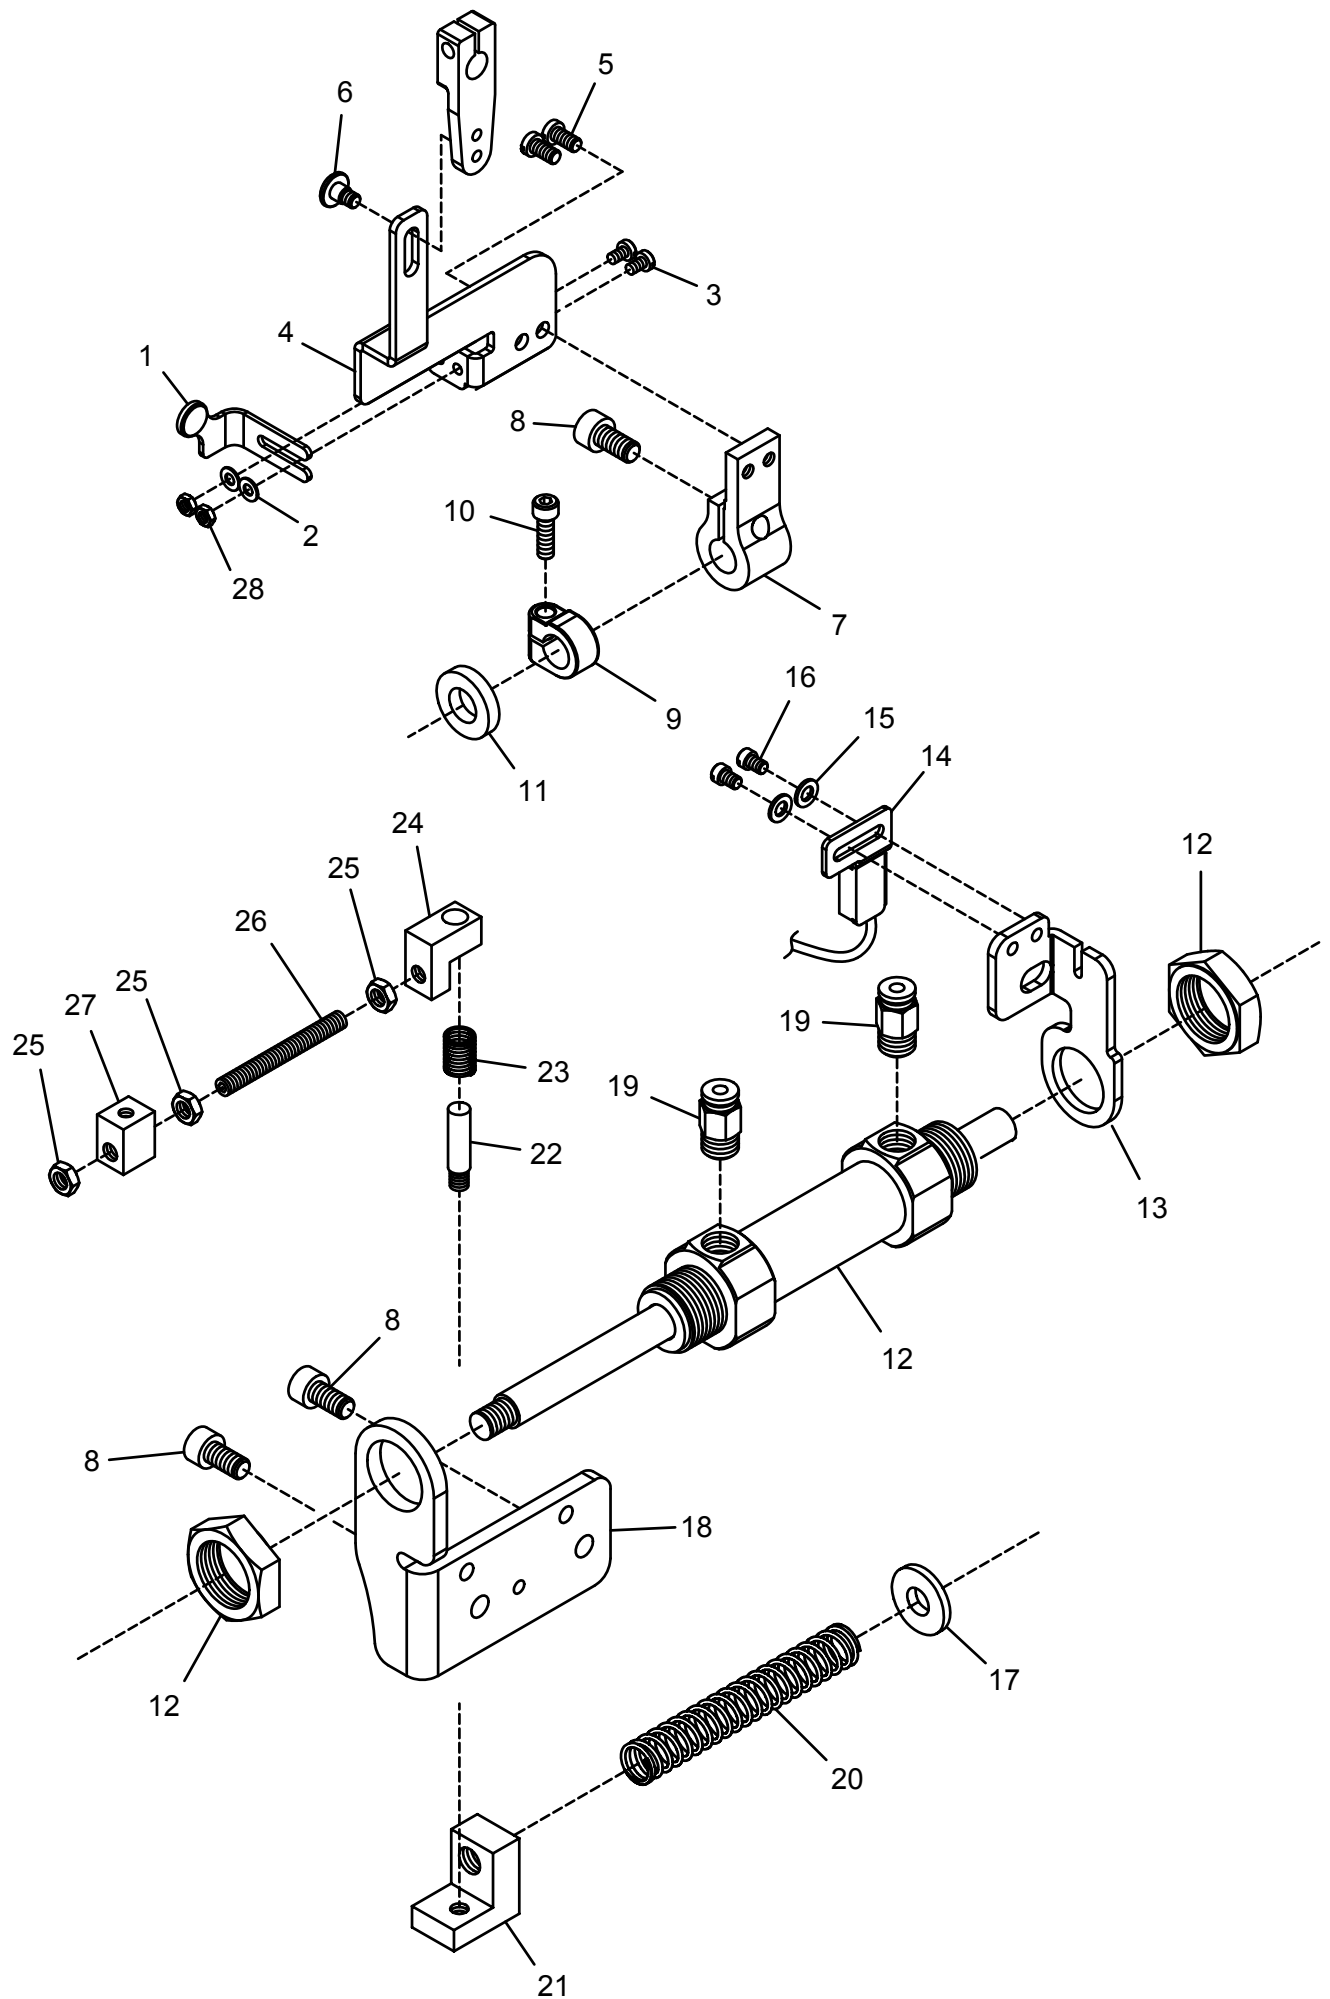

UNDER THREAD TRIMMER (PNEUMATIC TYPE)**氣壓式下切刀驅動機構****21**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	U13017	Switch Guide	安全開關導片	1
2	C04052	Washer	墊片	2
3	C04049	Screw (M3-0.5x6.5)	螺絲	2
4	U02204	Tension Release Connecting Plate	鬆線連結板	1
5	C02017	Screw (M4-0.7x8)	螺絲	2
6	C08052	Screw(M4-0.7×4)	螺絲	1
7	U02007	Tension Release Block	鬆線滑塊	1
8	C08047	Screw(M6-1×12)	螺絲	3
9	U02009	Collar	軸環	1
10	A0838	Screw (11/64-40x13)	螺絲	1
11	U02011	Anti-shock Rubber	緩衝墊片	1
12	U02012	Air Cylinder	氣缸	1
13	U02113	Switch Holder	安全開關固定架	1
14	U13014	Switch	安全開關	1
15	C03030	Washer	墊片	2
16	U01021	Screw (M4-0.7x5)	螺絲	2
17	U02017	Washer	墊片	1
18	U02018	Air Cylinder Bracket	氣缸固定架	1
19	U02019	Elbow Connector (Ø4-PT1/8)	快速接頭	2
20	U02020	Solenoid Return Spring	復進彈簧	1
21	U02021	Plunger	柱塞	1
22	U13030	Screw Pin (M5-0.8x6)	螺絲	1
23	U13031	Connecting Block(Right) Support Spring	彈簧	1
24	U13032	Connecting Block(Right)	連結塊(右)	1
25	C08048	Nut	螺帽	3
26	U13034	Connecting Rod (M5-0.8x40)	螺絲	1
27	U13035	Connecting Block(Left)	連結塊(左)	1
28	U05006	Nut	螺帽	2


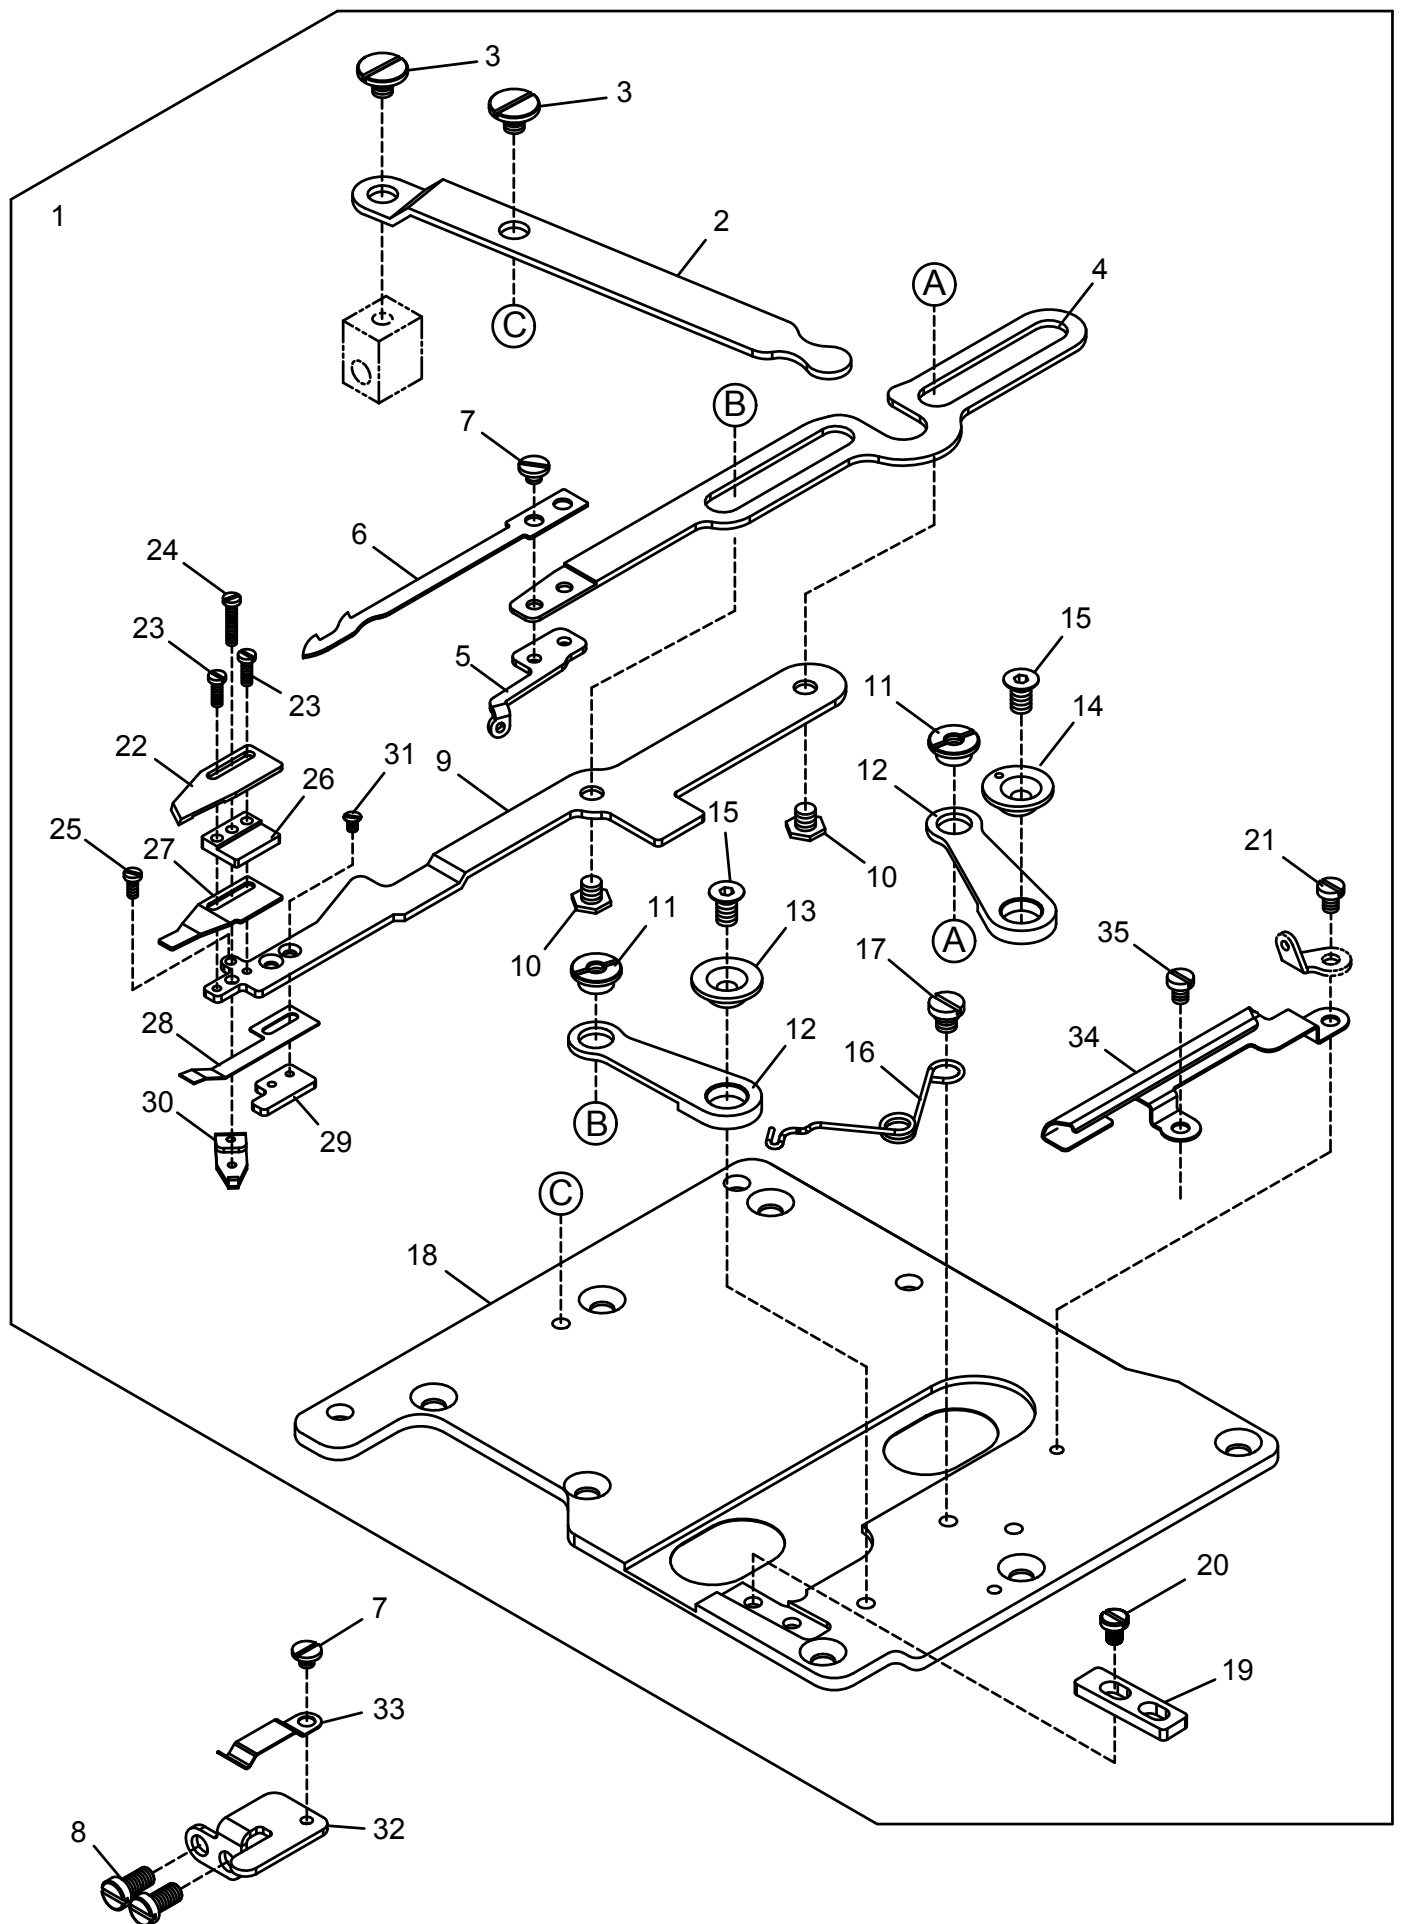


UNDER THREAD TRIMMER

下切刀驅動機構

22

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	HU03001	Trimming Machanism, C. Set	切刀盤組	1
2	U03002	Lower Knife Driving Lever	下切刀驅動桿	1
3	U03003	Screw (M4-0.7x6)	螺絲	2
4	HU03004	Lower Knife Carrier	下切刀活動托架	1
5	HU03005	Looper Thread Pull-off	鬆線板	1
6	U03006	Lower Knife	下切活動刀	1
7	U03007	Screw (M3-0.5x2.6)	螺絲	3
8	C02017	Screw (M4-0.7x8)	螺絲	2
9	HU03009	Upper Knife Carrier	下切刀固定托架	1
10	U03010	Screw (M4-0.7x4.4)	螺絲	2
11	U03011	Nut	螺帽	2
12	U03012	Knife Guide Lever	下切刀槓桿	2
13	U03013	Knife Guide Lever Ring(Left)	下切刀槓桿套環(左)	1
14	U03014	Knife Guide Lever Ring(Right)	下切刀槓桿套環(右)	1
15	U03015	Screw (M4-0.7x7)	螺絲	2
16	U03016	Upper Knife Carrier Spring	下切刀固定托架彈簧	1
17	U03017	Screw (M4-0.7x2.5)	螺絲	1
18	HU03018	Crank Chamber Cover	曲軸室蓋	1
19	HU03019	Upper Knife Carrier Stopper	下切刀托架擋板	1
20	HU03020	Screw (M4-0.7x4)	螺絲	1
21	U13018	Screw (M3-0.5x5)	螺絲	1
22	U03022	Upper Knife	下切固定刀	1
23	U03023	Screw (M2-0.4x6)	螺絲	2
24	U03024	Screw (M2-0.4x10)	螺絲	1
25	U03025	Screw (M2-0.4x4.5)	螺絲	1
26	U03026	Upper Knife Guide	下切刀導塊	1
27	HU03027	Clamp Spring	彈簧夾片	1
28	U03028	Clamp Spring Pressure	彈簧夾片壓板	1
29	U03029	Clamp Spring Pressure Holder	彈簧夾片擋塊	1
30	U03030	Clamp Spring Pressure Adjusting Piece	彈簧夾片調節板	1
31	U03031	Screw (M2-0.4x3)	螺絲	2
32	HU03032	Bracket	支架	1
33	HU03033	Flat Spring	彈片	1
34	U03034	Thread Guide	護線板	1
35	C02049	Screw(M3-0.5x3.5)	螺絲	1

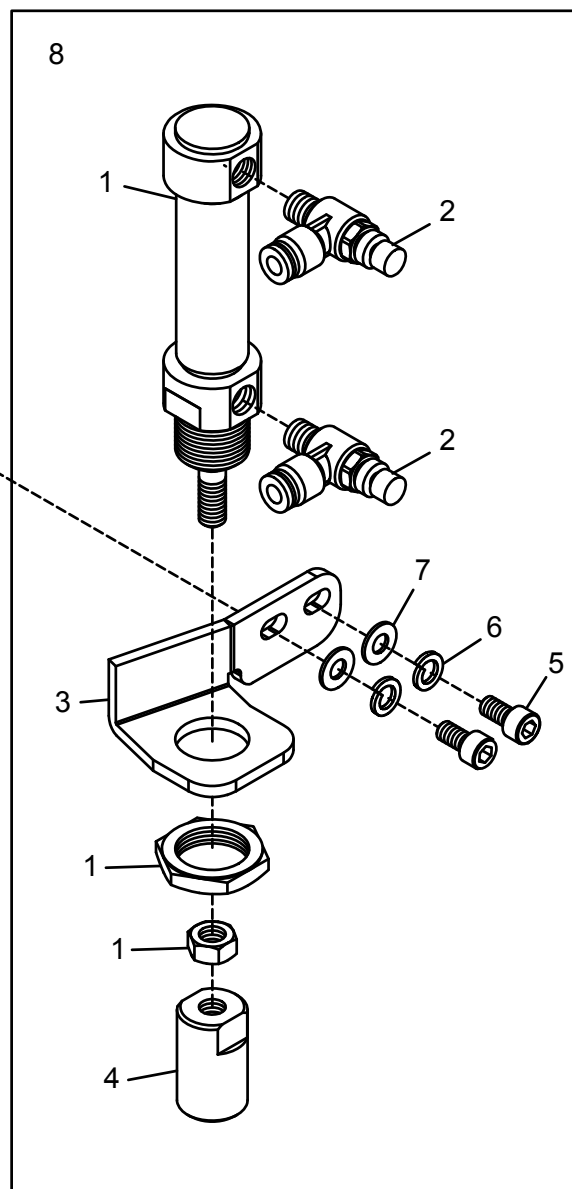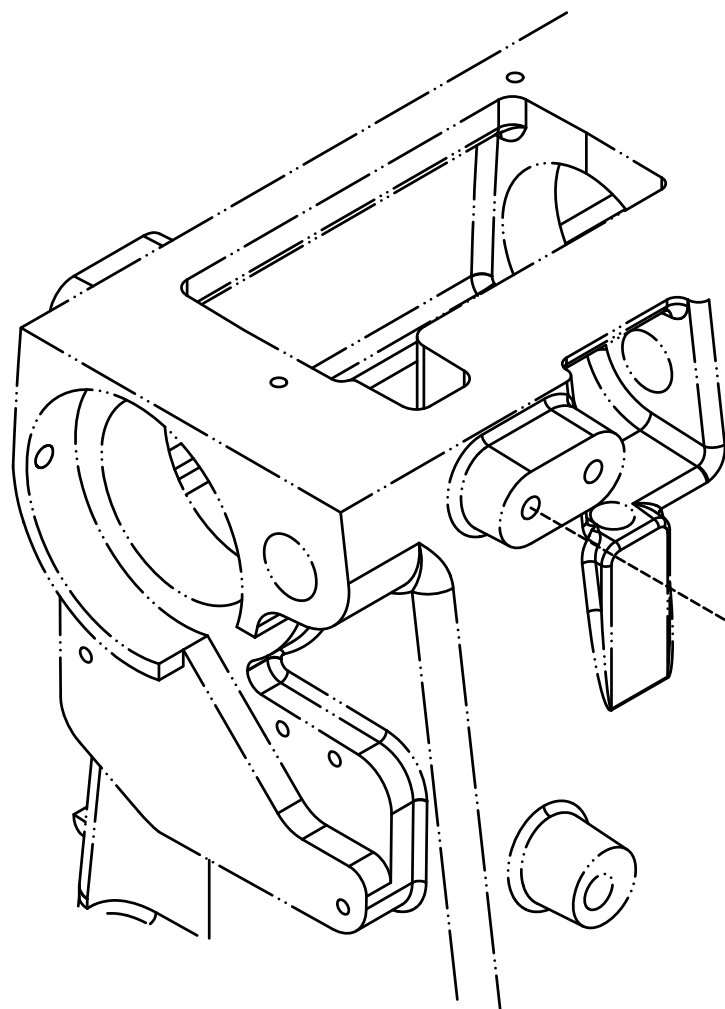


PRESSER FOOT LIFTER (PNEUMATIC TYPE)

氣壓式抬壓腳

23




Ref.No	Parts.No	Description	品 名	Amt.Req.
1	U04201	Air Cylinder	氣缸	1
2	U04102	Elbow Connector (Ø6-PT1/8)	快速接頭	2
3	U04103	Air Cylinder Bracket	氣缸固定架	1
4	U04004	Plastic Pushing Block	塑膠推塊	1
5	B1313	Screw (M6-1x16)	螺絲	2
6	B1435	Spring Washer	彈簧墊片	2
7	B2522	Washer	墊片	2
8	U04208	Air Cylinder	氣缸	1

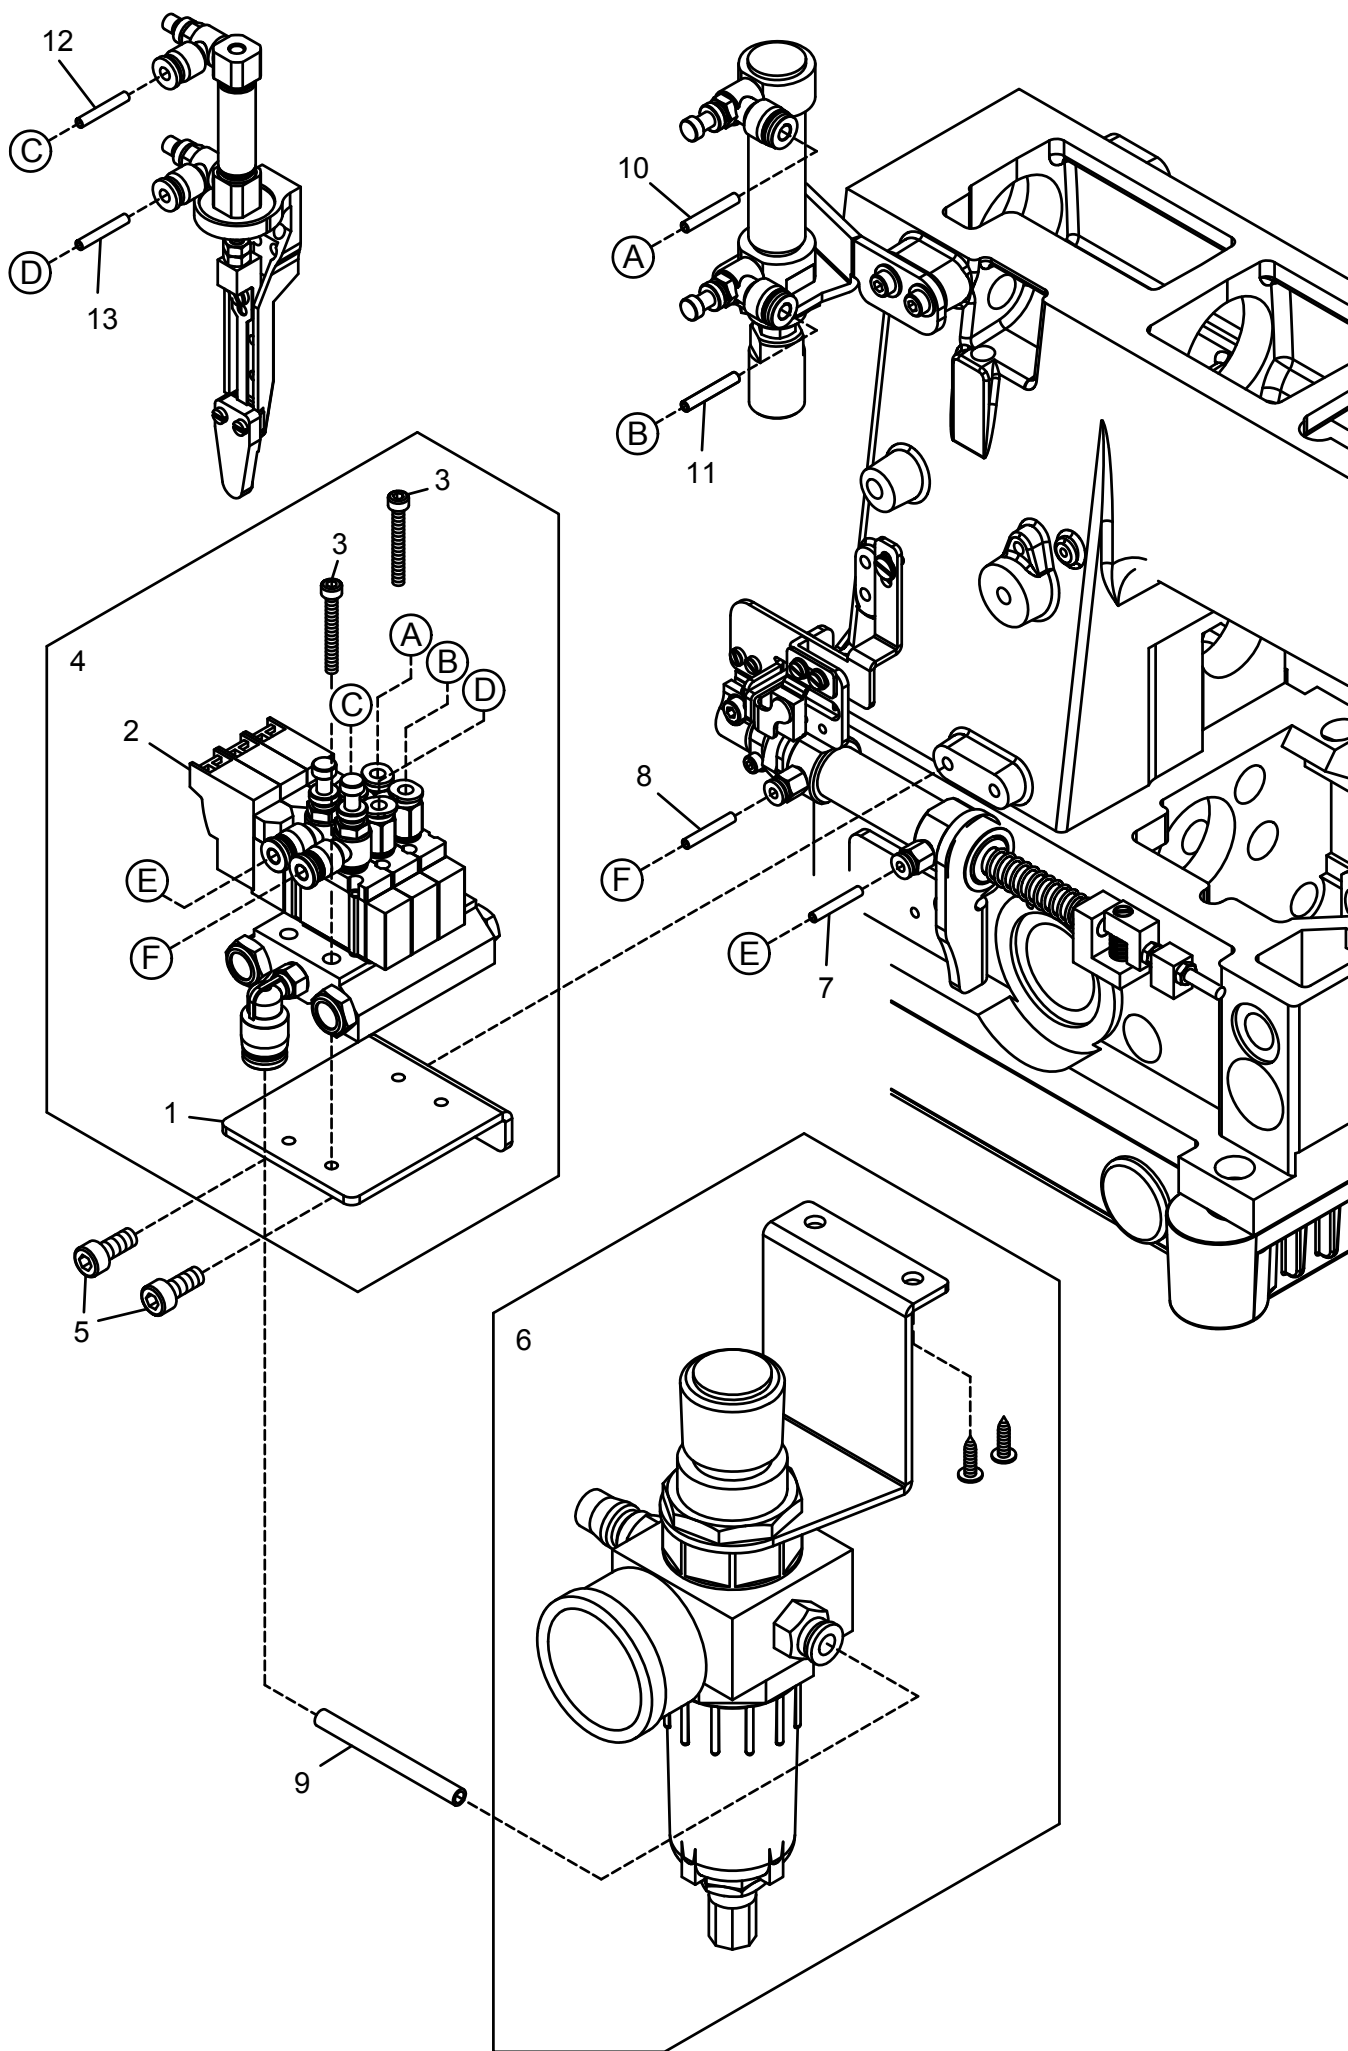

AIR ASSEMBLY LINE**氣動切線裝置線路圖****24**


Ref.No	Parts.No	Description	品 名	Amt.Req.
1	U05101	Solenoid Valve Support	電磁閥架	1
2	U05102	Solenoid Valve	電磁閥	1
3	U05103	Screw (M3-0.5x45)	螺絲	2
4	U05104	Solenoid Valve, C. Set	電磁閥組	1
5	C08042	Screw(M6-1×10)	螺絲	2
6	B22213	Filter Regulator, C. Set	調壓過濾器組	1
7	U05114	Air Tube (2.5x4x150mm)	PU管	1
8	U05115	Air Tube (2.5x4x210mm)	PU管	1
9	U05109	Air Tube (4x6x500mm)	PU管	1
10	U05110	Air Tube (2.5x4x250mm)	PU管	1
11	U05111	Air Tube (2.5x4x200mm)	PU管	1
12	U05212	Air Tube (2.5x4x600mm)	PU管	1
13	U05213	Air Tube (2.5x4x550mm)	PU管	1

1

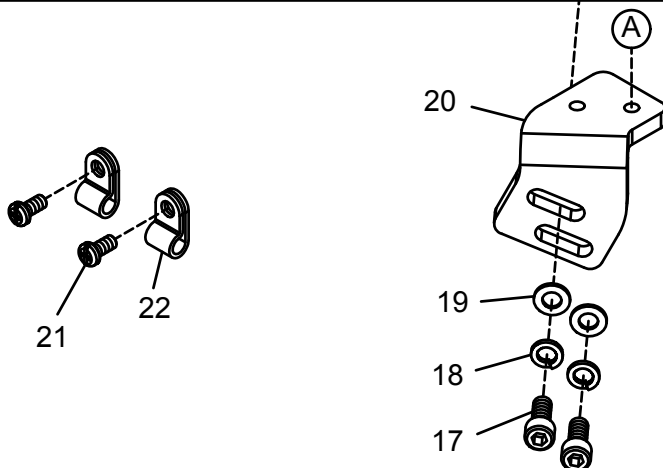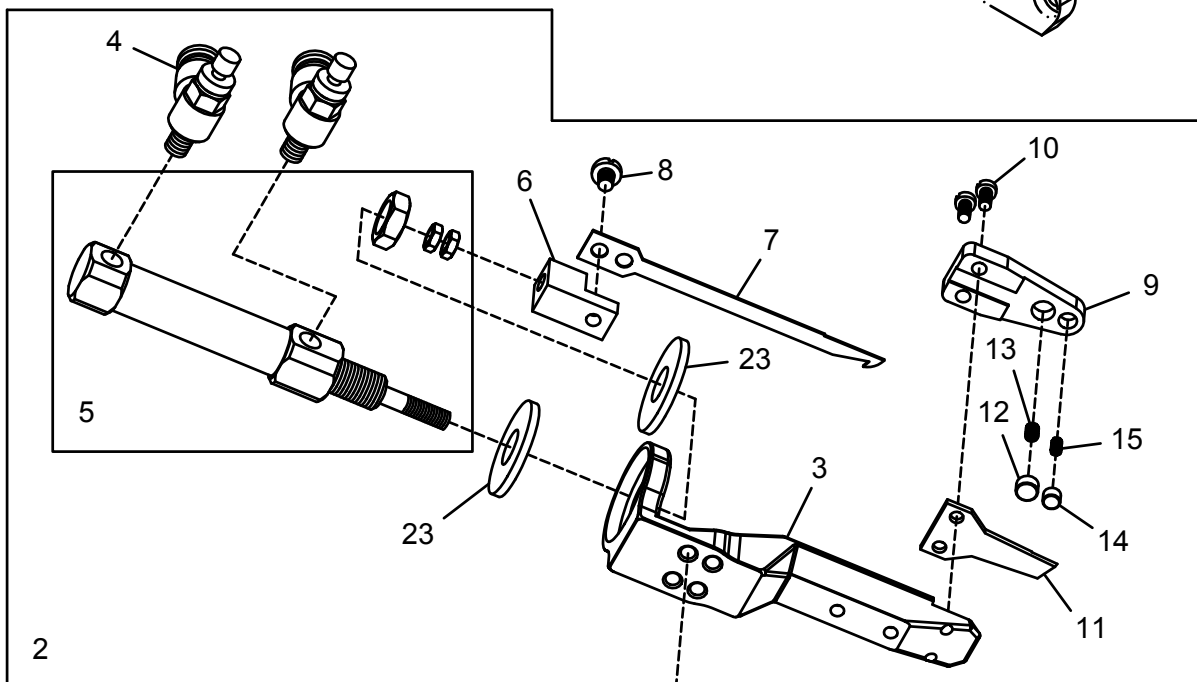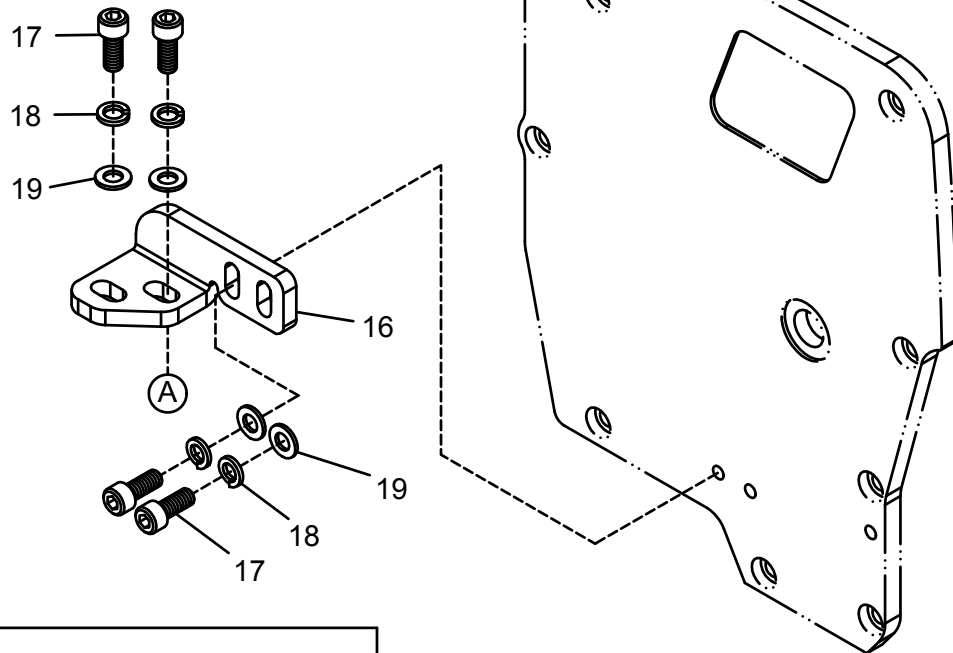

TOP THREAD TRIMMER (PNEUMATIC TYPE)**氣壓式上切刀機構****25**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	HU06001	AU Device, C. Set	氣動式上切刀組	1
2	HU06002	Trimming Device, C. Set	切刀組	1
3	HU06003	Knife Guide Bracket	切刀導架	1
4	U06004	Fitting (FJSC 4-M5)	可調式快速接頭	2
5	U06205	Air Cylinder	氣缸	1
6	U09006	Movable Trimming Knife Holder	活動刀台	1
7	HU06007	Movable Trimming Knife	活動刀	1
8	U09008	Screw (1/8-40x3)	螺絲	1
9	HU06009	Holder	支撐座	1
10	U09012	Screw (M2.5-0.45x5.2)	螺絲	2
11	HU06011	Fixed Trimming Knife	固定刀	1
12	HU06012	Knife Clamp	刀夾	1
13	HU06013	Spring	彈簧	1
14	HU06014	Thread Retainer	夾線栓	1
15	HU06015	Spring	彈簧	1
16	HU06016	Bracket	支架	1
17	B29034	Screw (M4-0.7x10)	螺絲	6
18	C10035	Spring Washer	彈簧墊片	6
19	C03030	Washer	墊片	6
20	HU06020	Bracket	支架	1
21	C01025	Screw (M4-0.7x8)	螺絲	2
22	U06009	Cord Clamp	配線固定鈕	2
23	B15127	Washer	墊片	2


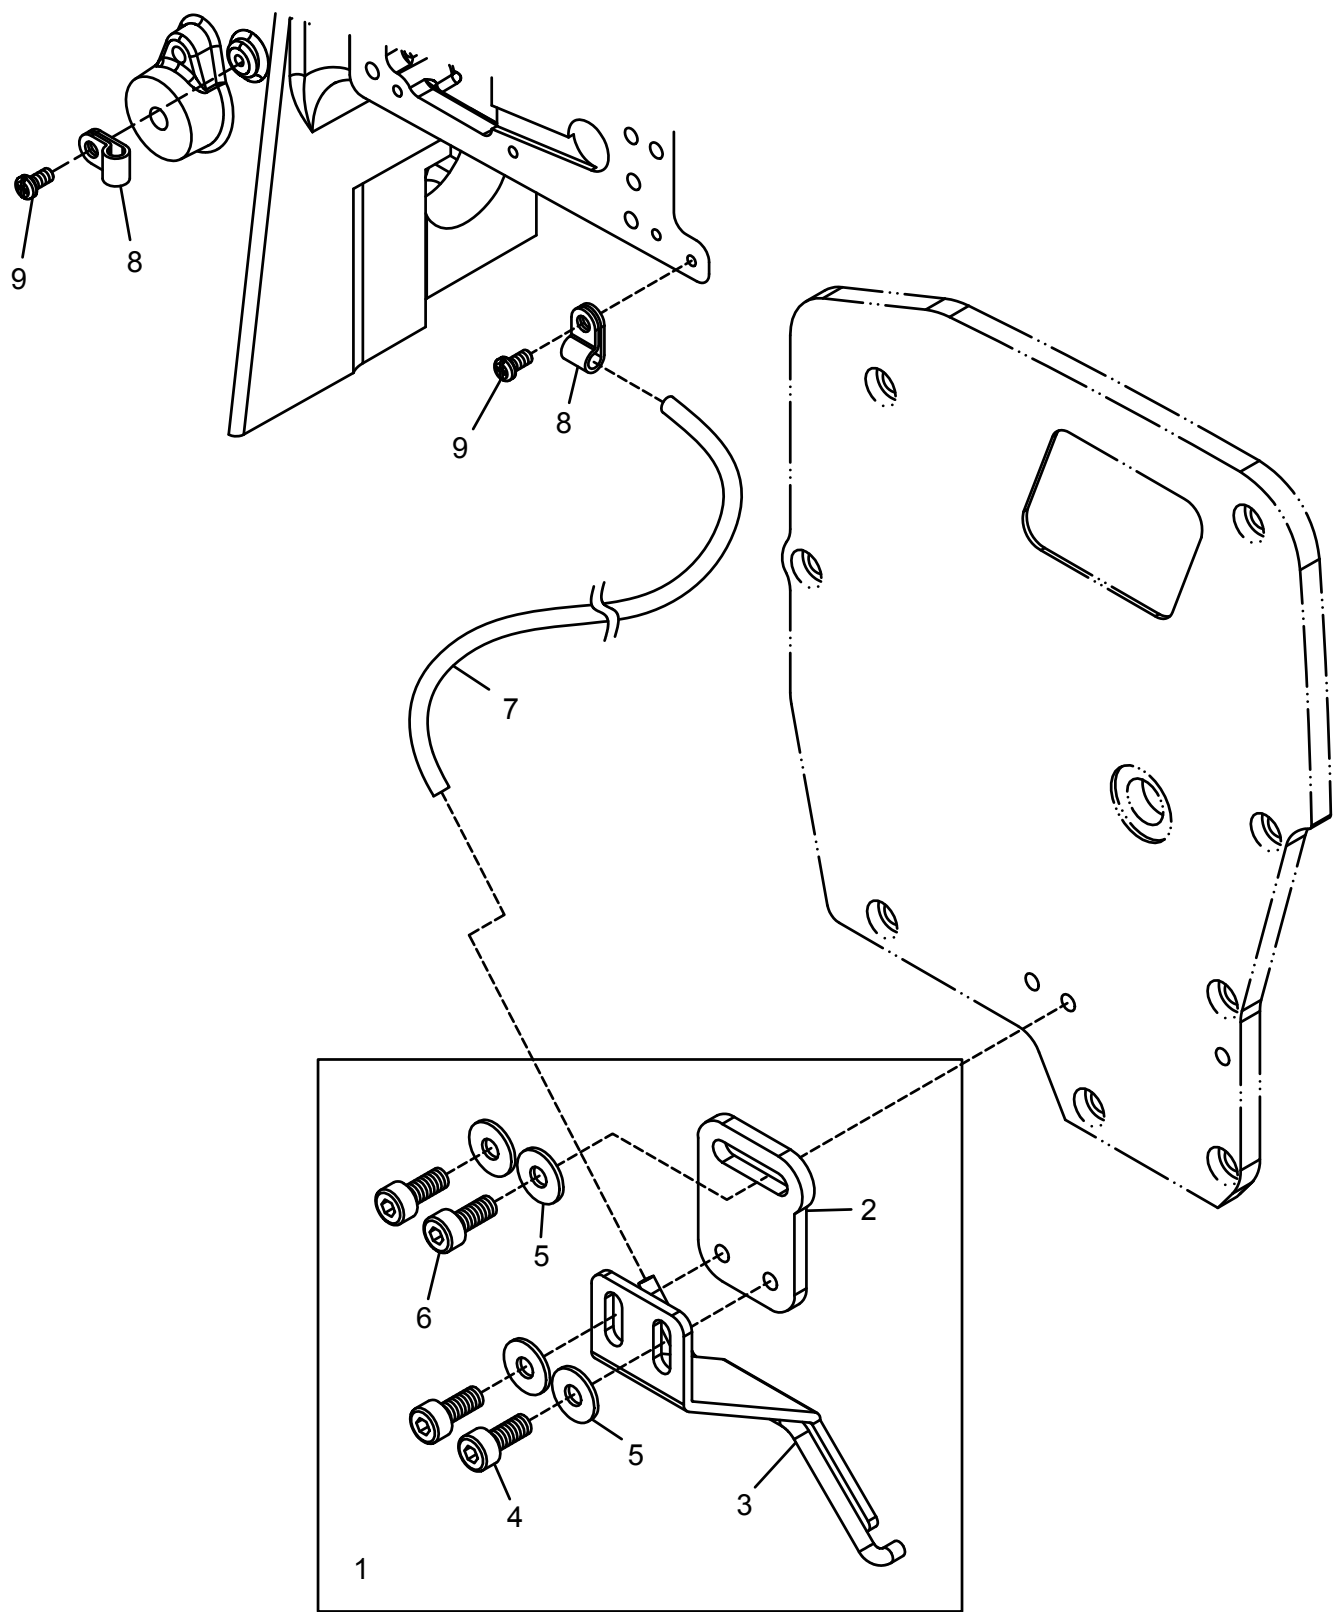


UNDER THREAD WIPER (PNEUMATIC TYPE)**氣壓式上吹線機構****26**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	HU07101	Air Wiper, C. Set	上吹線組	1
2	HU07102	Air Wiper Support	上吹線管支架	1
3	HU07103	Air Wiper	上吹線管	1
4	C03041	Screw (M4-0.7x6)	螺絲	2
5	C03030	Washer	墊片	4
6	B2527	Screw(M4-0.7×8)	螺絲	2
7	U05213	Air Tube (2.5x4x550mm)	PU管	1
8	U13019	Cord Clamp	配線固定鈕	2
9	C01025	Screw (M4-0.7x8)	螺絲	2


UNDER THREAD WIPER (ELECTRIC TYPE)**電磁式上撥線機構****27**

Ref.No	Parts.No	Description	品 名	Amt Req.
1	U08101	Wiper Solenoid	撥線組	1
2	U08002	Solenoid Bracket	撥線電磁鐵托架	1
3	U05006	Nut	螺帽	2
4	U08104	Wiper Bar Guide	撥線搖臂導塊	1
5	U08005	Solenoid Lever Pin	電磁鐵搖臂插銷	1
6	U08006	Buffer Spring	緩衝彈簧	1
7	U13018	Screw (M3-0.5x5)	螺絲	2
8	U08108	Solenoid Lever	電磁鐵搖臂	1
9	C11044	Retaining Ring	固定環	1
10	U09012	Screw (M2.5-0.45x5.2)	螺絲	1
11	U08011	Wiper Bar	撥線搖臂	1
12	U08112	Wiper	撥線鉤	1
13	U08113	Wiper Holder	撥線鉤固定座	1
14	C02017	Screw (M4-0.7x8)	螺絲	2
15	C03030	Washer	墊片	2
16	U08116	Buffer Spring Bracket	緩衝彈簧吊架	1
17	U03033	Screw (M2-0.4x2)	螺絲	1
18	U08018	Clamp Spring	夾線彈簧片	1
19	U13019	Cord Clamp	配線固定鈕	2
20	C01025	Screw (M4-0.7x8)	螺絲	2
21	U08121	Wiper Solenoid	撥線電磁鐵	1

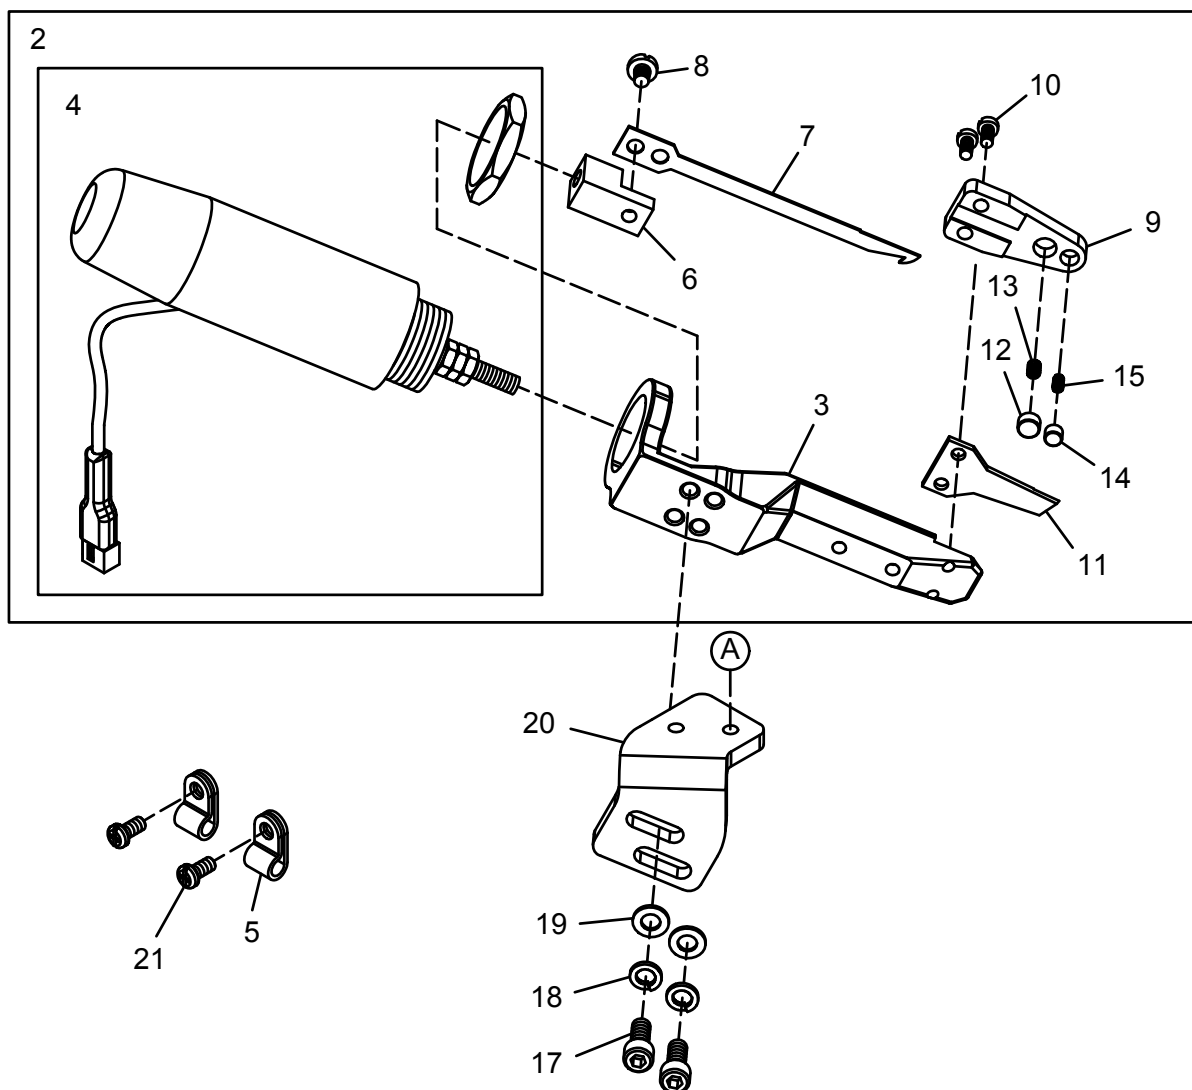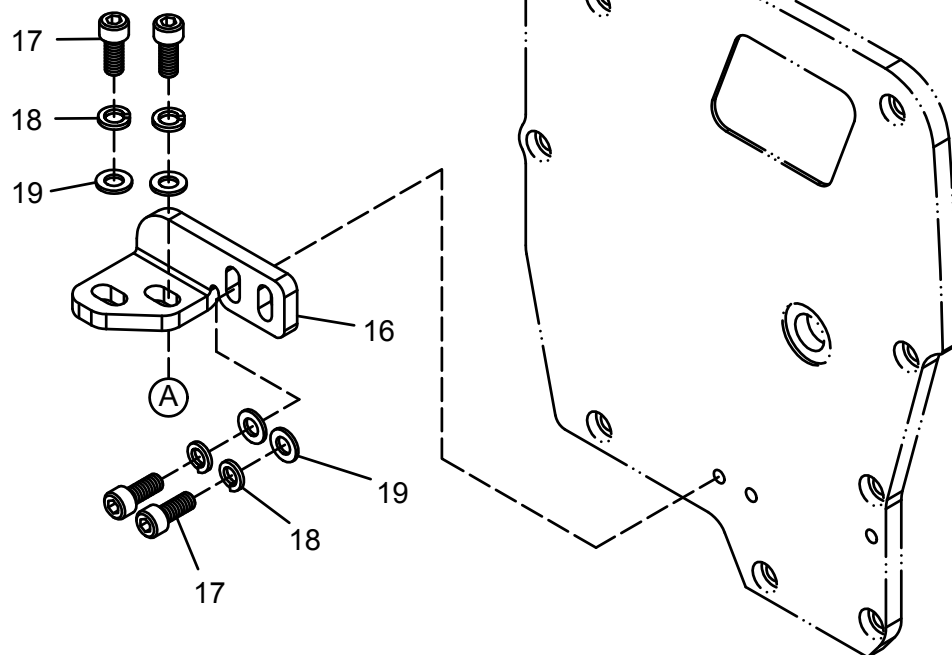


TOP THREAD TRIMMER (PNEUMATIC TYPE)**氣壓式上切刀機構****28**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	HU09001	EU Device, C. Set	電動式上切刀組	1
2	HU09002	Trimming Device, C. Set	切刀組	1
3	HU09003	Knife Guide Bracket	切刀導架	1
4	U09104	Solenoid, C. Set	電磁鐵組	1
5	U13019	Cord Clamp	配線固定鈕	2
6	U09006	Movable Trimming Knife Holder	活動刀台	1
7	HU06007	Movable Trimming Knife	活動刀	1
8	U09008	Screw (1/8-40x3)	螺絲	1
9	HU06009	Holder	支撐座	1
10	U09022	Screw (M4-0.7x8)	螺絲	2
11	HU06011	Fixed Trimming Knife	固定刀	1
12	HU06012	Knife Clamp	刀夾	1
13	HU06013	Spring	彈簧	1
14	HU06014	Thread Retainer	夾線栓	1
15	HU06015	Spring	彈簧	1
16	HU06016	Bracket	支架	1
17	B29034	Screw (M4-0.7x10)	螺絲	6
18	C10035	Spring Washer	彈簧墊片	6
19	C03030	Washer	墊片	6
20	HU06020	Bracket	支架	1
21	C01025	Screw (M4-0.7x8)	螺絲	2

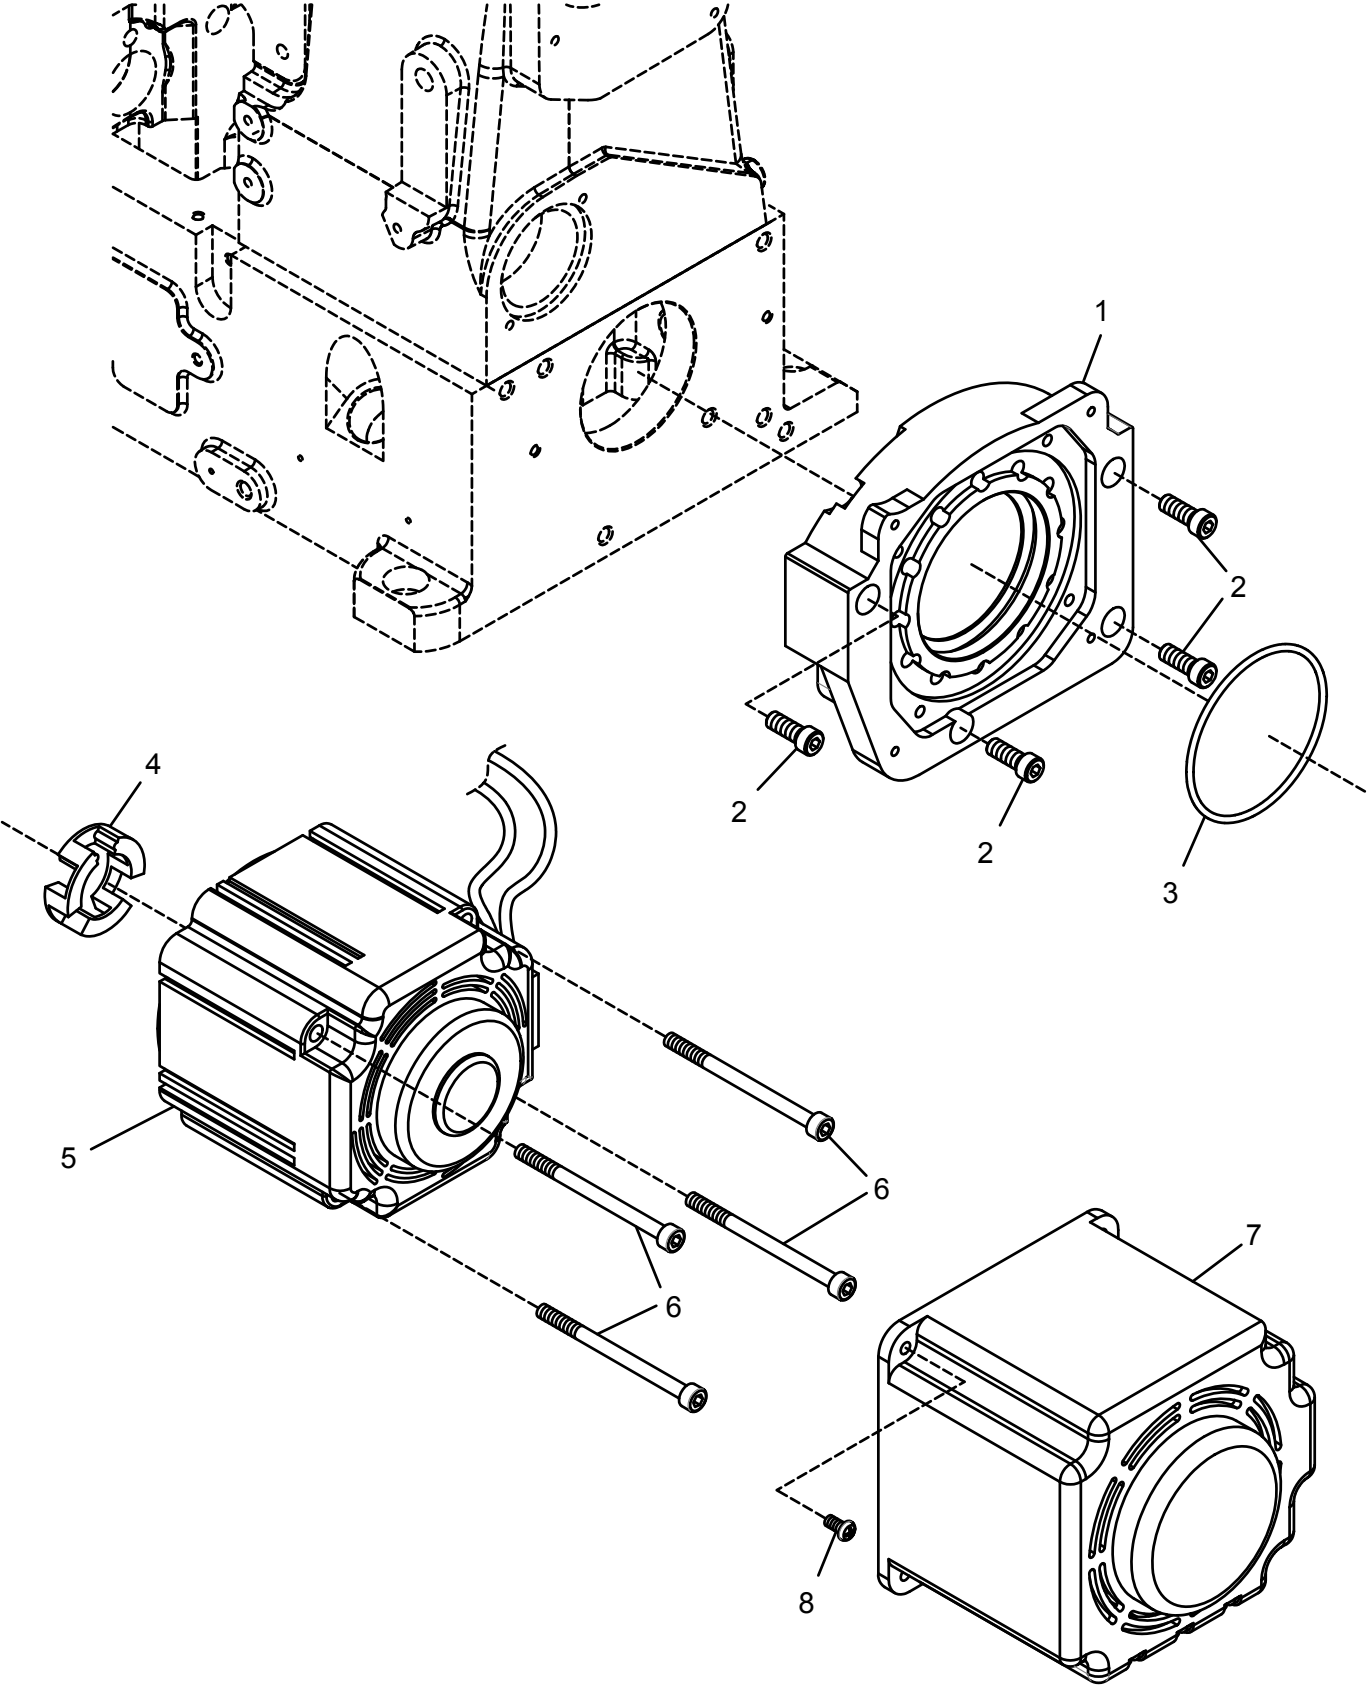



SERVO MOTOR**伺服馬達****29**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	U11001	Moter Support	馬達座	1
2	C06040	Screw(M6-1×16)	螺絲	4
3	U11003	O-ring	O型環	1
4	U11004	Coupling	聯軸器	1
5	U11005	Servo Moter	伺服馬達	1
6	U11006	Screw (M5-0.8x70)	螺絲	4
7	U11007	Moter Cover	馬達蓋	1
8	U11008	Screw (M4-0.7x8)	螺絲	4

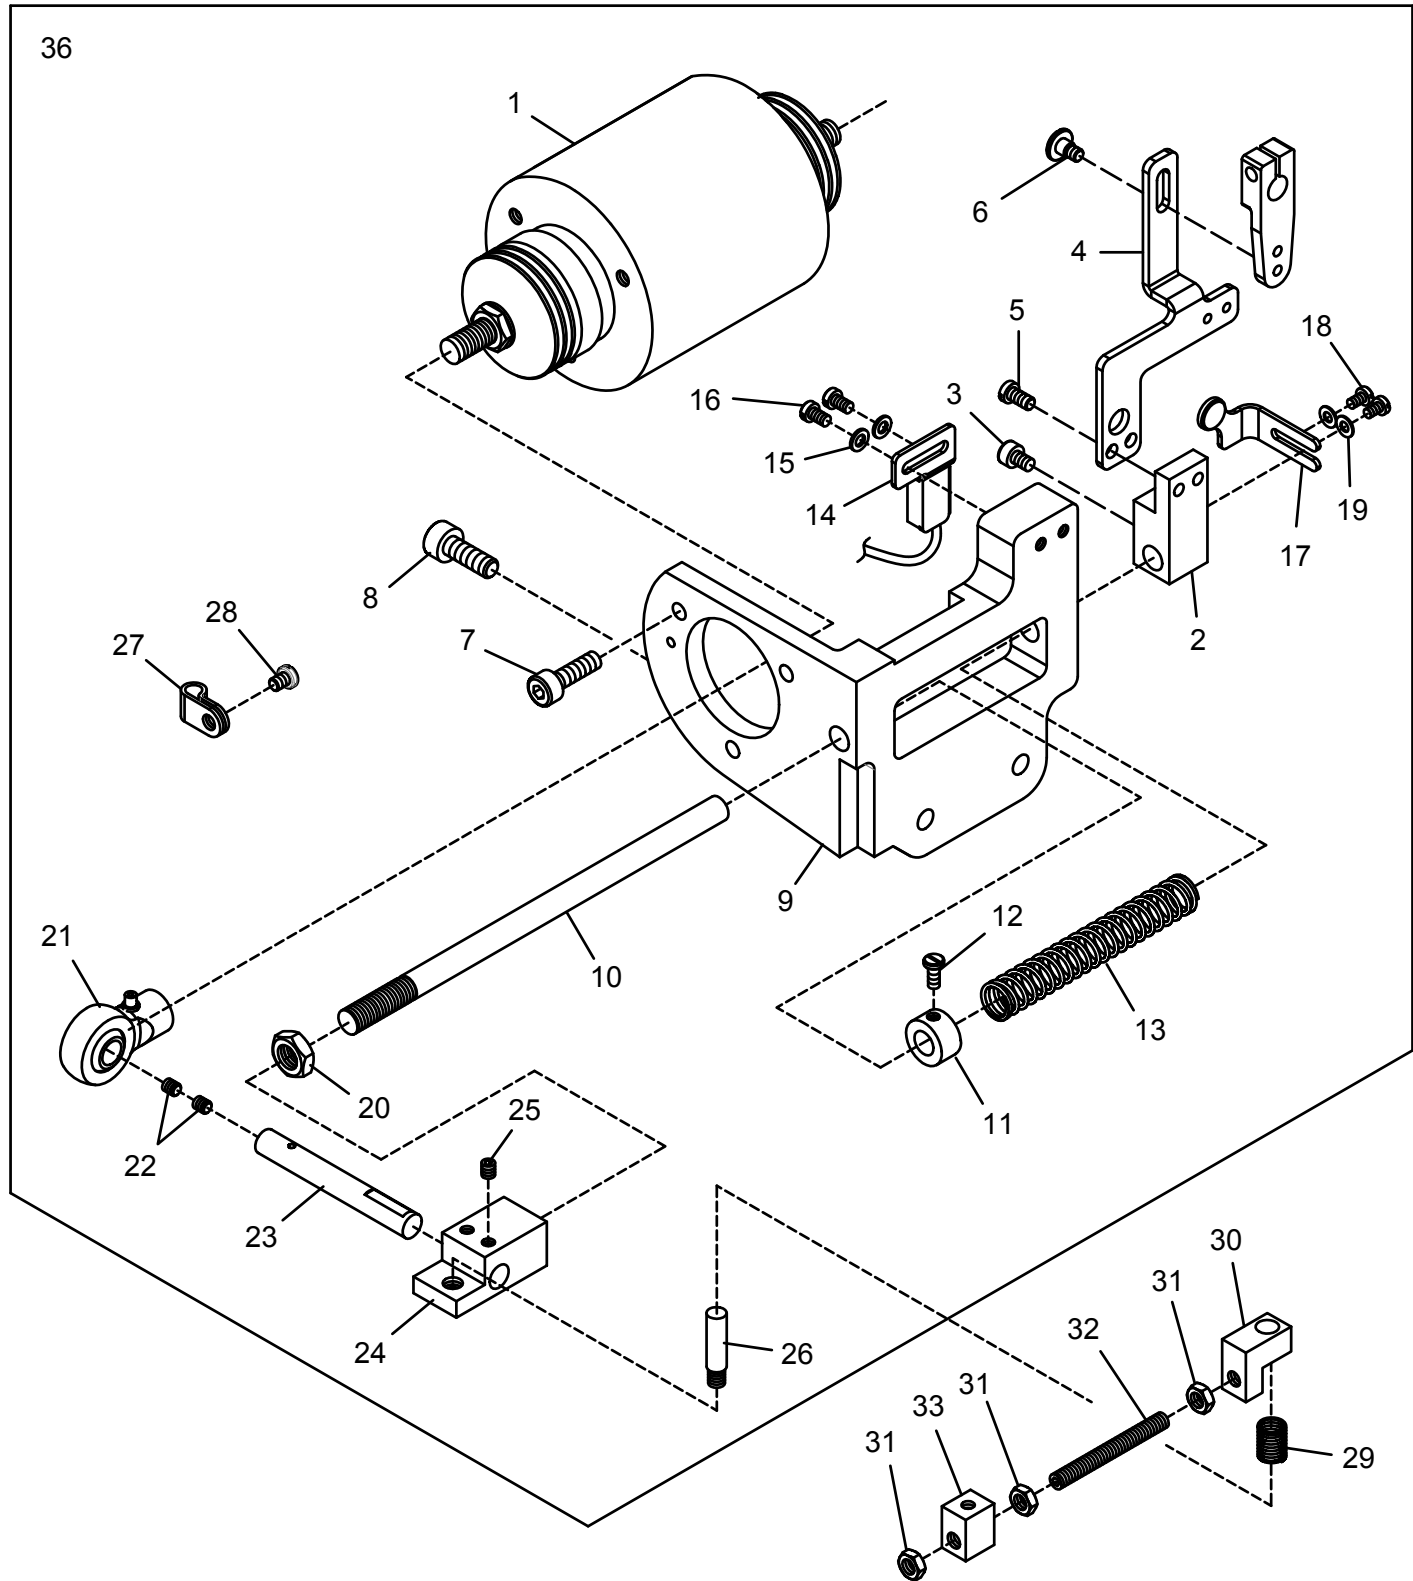

UNDER THREAD TRIMMER (ELECTRIC TYPE)**電磁式下切刀驅動機構****30**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	U13001	Trimming Solenoid, Complete Set	電磁鐵組	1
2	U12027	Tension Release Block	鬆線滑塊	1
3	C03041	Screw (M4-0.7x6)	螺絲	1
4	U12029	Tension Release Connecting Plate	鬆線連結板	1
5	C02017	Screw (M4-0.7x8)	螺絲	2
6	C08052	Screw(M4-0.7x4)	螺絲	1
7	C08036	Screw(M5-0.8x14)	螺絲	3
8	C06040	Screw(M6-1x16)	螺絲	2
9	U13009	Trimming Solenoid Support	電磁鐵座	1
10	U13026	Solenoid Return Shaft	復進軸	1
11	U13027	Collar (8x16x8mm)	軸環	1
12	A0814	Screw (11/64-40x5.8)	螺絲	1
13	U13029	Solenoid Return Spring	復進彈簧	1
14	U13014	Switch	安全開關	1
15	U13015	Washer	墊片	2
16	U13016	Screw (M3.5-0.6x6)	螺絲	2
17	U13017	Switch Guide	安全開關導片	1
18	U13018	Screw (M3-0.5x5)	螺絲	2
19	C04052	Washer	墊片	2
20	U13020	Nut	螺帽	2
21	U13021	Plunger Connecting Rod	柱塞連桿	1
22	A0508	Screw (11/64-40x5.8)	螺絲	1
23	U13023	Plunger Connecting Rod Pin	柱塞連結軸	1
24	U13024	Plunger	柱塞	1
25	A0403	Screw (M5-0.8x5)	螺絲	2
26	U13030	Screwed Pin (M5-0.8x6)	螺絲	1
27	U13019	Cord Clamp	配線固定鈕	1
28	C02044	Screw (M4-0.7x5)	螺絲	1
29	U13031	Connecting Block(Right) Support Spring	彈簧	1
30	U13032	Connecting Block(Right)	連結塊(右)	1
31	C08048	Nut	螺帽	3
32	U13034	Connecting Rod (M5-0.8x40)	螺絲	1
33	U13035	Connecting Block(Left)	連結塊(左)	1
34	U13036	Under Thread Trimmer, C. Set	下切刀驅動組	1

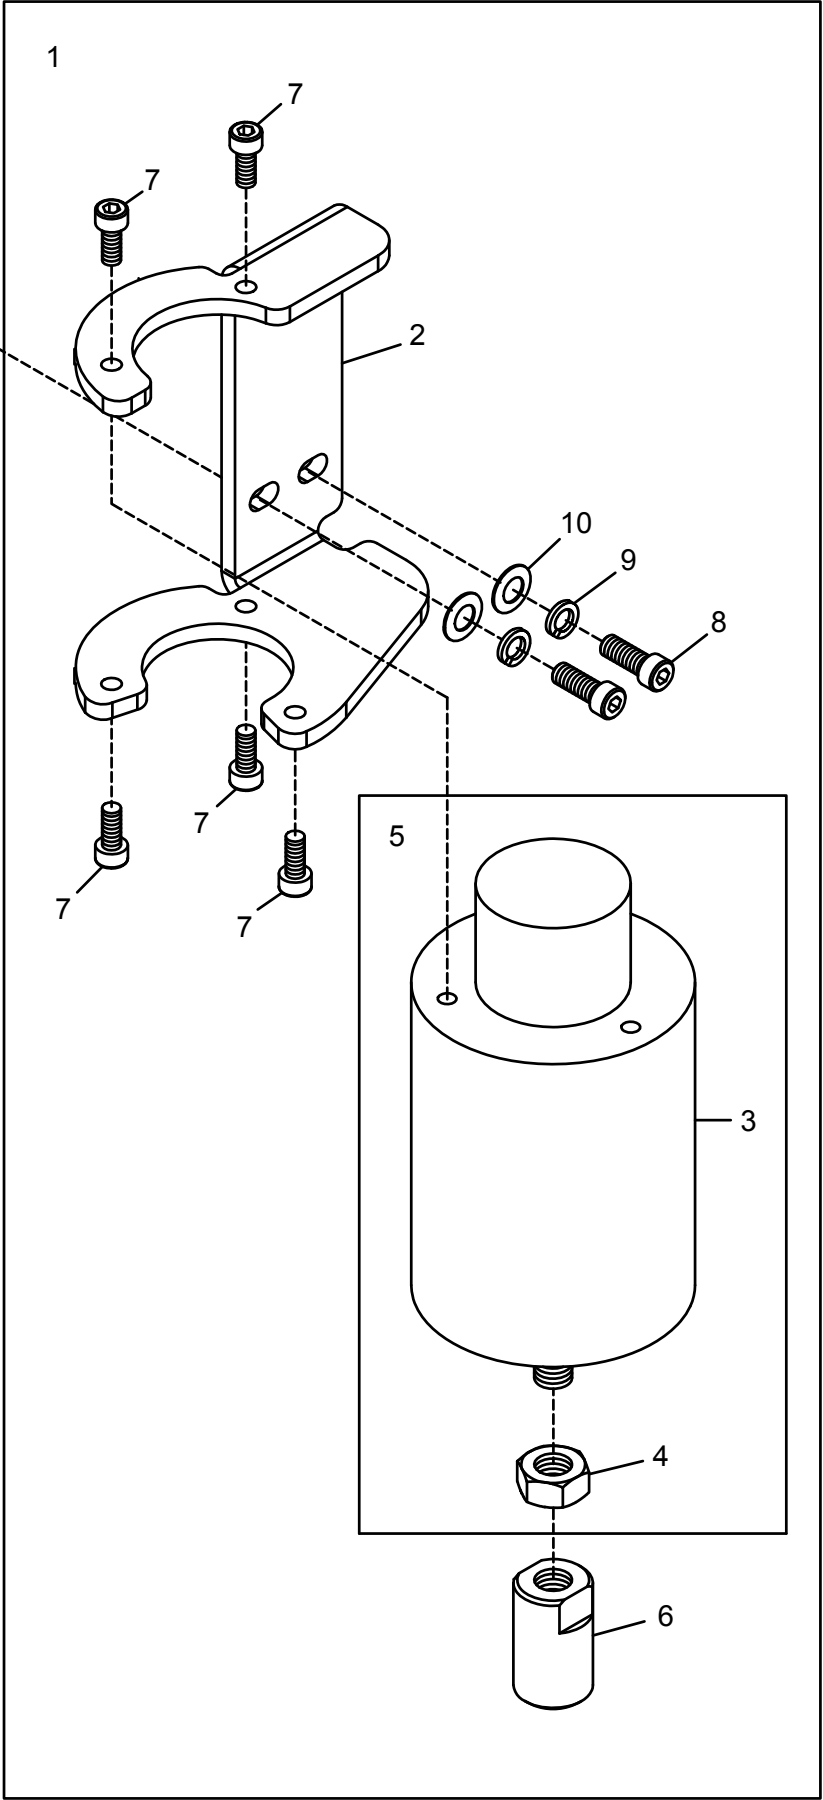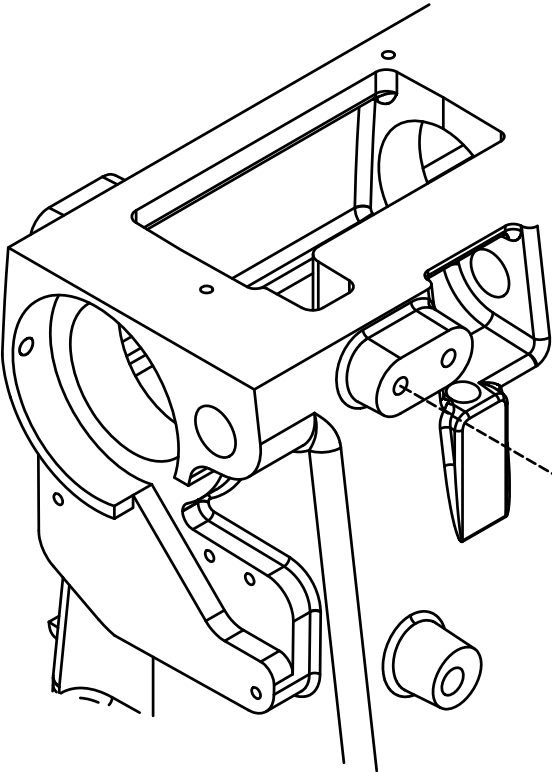

PRESSER FOOT LIFTER (ELECTRIC TYPE)**電磁式抬壓腳****31**

Ref.No	Parts.No	Description	品 名	Amt.Req.
1	U15001	Presser Foot Lifter, C. Set.	抬壓腳組	1
2	U15102	Solenoid Bracket	電磁鐵支架	1
3	U15003	Solenoid	電磁鐵	1
4	U15004	Nut	螺帽	1
5	U15005	Solenoid, C. Set	電磁鐵組	1
6	U15006	Plastic Pushing Block	塑膠推塊	1
7	C11014	Screw(M5-0.8×12)	螺絲	5
8	B1313	Screw (M6-1×16)	螺絲	2
9	B1435	Spring Washer	彈簧墊片	2
10	B2522	Washer	墊片	2